


# Otello HD +



**USER MANUAL**  
vrs. 1.0 - 06.12.2023

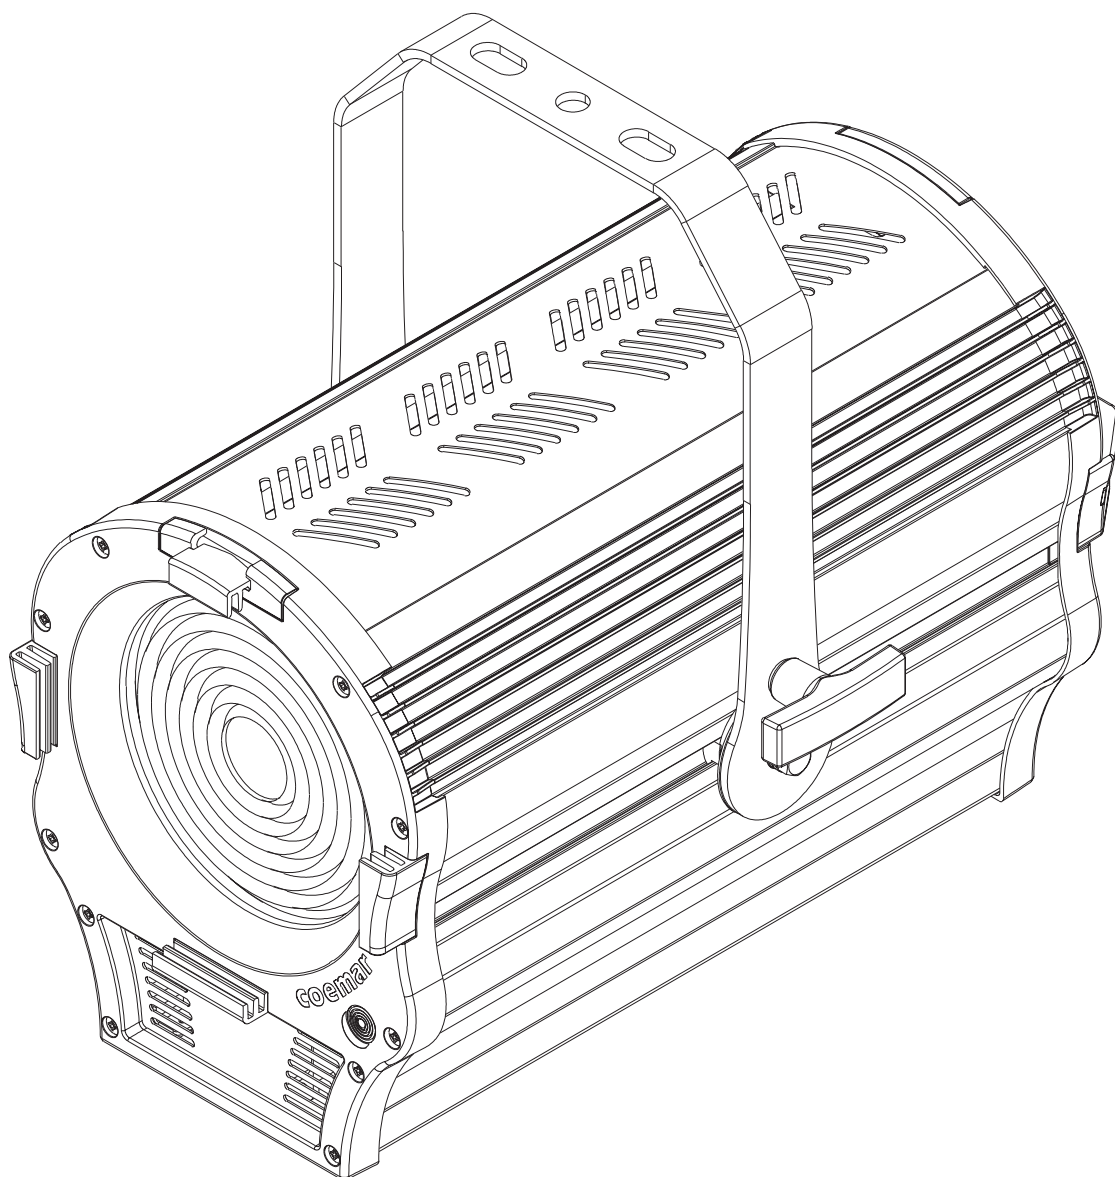

© 2023 **Coemar Lighting Srl**. All rights reserved.

Information subject to change without notice. Coemar and all affiliated companies disclaim liability for any injury, damage, direct or indirect loss, consequential or economic loss or any other loss occasioned by the use of, inability to use or reliance on the information contained in this document. The Coemar logo, the Coemar name and all other trade-marks in this document pertaining to services or products by Coemar or its affiliates and subsidiaries are trademarks or licensed by Coemar or its affiliates or subsidiaries.

No part of this document may be used for distribution, reproduction, transmission, transcription, storage in a data retrieval system, or translated into any language in any form by any means without the prior written permission of Coemar ®. If you are downloading files from our web pages for your personal use, make sure to check for updated versions. Coemar ® cannot take any liability whatsoever for downloaded files, as technical data are subject to change without notice.

Congratulations on having purchased a **Coemar** product. You have assured yourself of a fixture of the highest quality, both in componentry and in the technology used. We renew our invitation to you to complete the service information on the previous page, to expedite any request for service information or spares (in case of problems encountered either during, or subsequent to, installation). This information will assist in providing prompt and accurate advice from your **Coemar** service centre. Following the instructions and procedures outlined in this manual will ensure the maximum efficiency of this product for years to come.

# Index

<b>1. Packaging and transportation.....</b>	<b>Pag. 5</b>
1.1 Packaging.....	Pag. 5
1.2 Transportation.....	Pag. 5
<b>2. General information.....</b>	<b>Pag. 5</b>
2.1 Safety informations.....	Pag. 5
2.2 Warranty conditions.....	Pag. 6
2.3 EC Norms .....	Pag. 6
<b>3. Product specifications .....</b>	<b>Pag. 7</b>
3.1 Technical characteristics - Otello 6 HD FullSpectrum +.....	Pag. 7
3.2 Technical characteristics - Otello 6 HD VariWhite + .....	Pag. 7
3.3 Technical characteristics - Otello 8 HD FullSpectrum +.....	Pag. 8
3.4 Technical characteristics - Otello 8 HD VariWhite + .....	Pag. 8
<b>4. Projectors dimensions .....</b>	<b>Pag. 9</b>
4.1 Otello 6 with Manual Yoke .....	Pag. 9
4.2 Otello 6 with Pole Operated Yoke .....	Pag. 9
4.3 Otello 8 with Manual Yoke (FullSpectrum version) .....	Pag. 10
4.4 Otello 8 with Pole Operated Yoke (FullSpectrum version) .....	Pag. 10
4.5 Otello 8 with Manual Yoke (VariWhite version) .....	Pag. 11
4.6 Otello 8 with Pole Operated Yoke (VariWhite version) .....	Pag. 11
4.7 Unit's main components - with Manual Yoke .....	Pag. 12
4.8 Unit's main components - with Pole Operated Yoke .....	Pag. 13
4.9 Back panel description .....	Pag. 14
<b>5. Installation.....</b>	<b>Pag. 15</b>
5.1 Mechanical installation.....	Pag. 15
5.2 Safety chain.....	Pag. 15
5.3 Adjusting the unit tilt.....	Pag. 15
5.4 Accessories fixing.....	Pag. 16
<b>6. Powering up.....</b>	<b>Pag. 17</b>
6.1 Operating voltage and frequency .....	Pag. 17
6.2 Connection to mains power.....	Pag. 17
<b>7. Control signal connections.....</b>	<b>Pag. 18</b>
7.1 Control signal connection by XLR5 plugs .....	Pag. 18
<b>8. Turning the projector on.....</b>	<b>Pag. 19</b>
8.1 DMX address of the unit - FullSpectrum Version .....	Pag. 19
8.2 DMX address of the unit - VariWhite Version .....	Pag. 19
<b>9. DMX Chart - Otello HD FullSpectrum + .....</b>	<b>Pag. 21</b>
9.1 DMX modes .....	Pag. 21
9.2 DMX Chart 16, 7, 1 channels (Manual / P.O. Zoom) - 17 / 8 (Motorized Zoom) .....	Pag. 22
9.3 DMX Chart Studio mode .....	Pag. 25
9.3 DMX Chart RGB mode .....	Pag. 26
9.4 DMX Chart fine RGB mode .....	Pag. 28
9.5 DMX Chart SUNRISE mode .....	Pag. 30

<b>10. DMX Chart - Otello 6 HD VariWhite + .....</b>	<b>Pag. 31</b>
10.1 DMX modes .....	Pag. 31
10.2 DMX Chart 5 channels (Manual / P.O. Zoom) - 6 channels (Motorized Zoom) .....	Pag. 32
10.3 DMX Chart 2 / 1 channels (Manual / P.O. Zoom) - 4 channels (Motorized Zoom).....	Pag. 33
10.4 DMX Chart SUNRISE mode .....	Pag. 34
10.5 DMX Chart Raw mode .....	Pag. 35
10.6 DMX Chart MK1 mode .....	Pag. 36
10.7 DMX Chart 6 channels mode .....	Pag. 37
<b>11. Setup via RDM (DMX version).....</b>	<b>Pag. 39</b>
11.1 Quick guide to menu.....	Pag. 39
11.2 RDM Chart.....	Pag. 39
11.3 RDM Error Chart.....	Pag. 40
<b>12. Display panel functions.....</b>	<b>Pag. 41</b>
12.1 Quick guide to menu.....	Pag. 41
12.2 Rapid count.....	Pag. 41
12.3 Potentiometer Knob.....	Pag. 41
12.4 Main functions menu - FullSpectrum version .....	Pag. 42
12.5 Settings .....	Pag. 45
12.6 Display .....	Pag. 47
12.7 Effects .....	Pag. 48
12.8 Measures .....	Pag. 50
12.9 Main functions menu - VariWhite version .....	Pag. 52
12.10 Settings .....	Pag. 54
12.11 Display .....	Pag. 56
12.12 Measures .....	Pag. 57
<b>13. Wireless DMX Menu (OPTIONAL) .....</b>	<b>Pag. 59</b>
13.1 Wireless DMX.....	Pag. 59
<b>14. Special Function and Error Messages .....</b>	<b>Pag. 60</b>
14.1 Special functions of the fixture .....	Pag. 60
14.2 Error messages .....	Pag. 60
<b>15. Accessories and Spere parts .....</b>	<b>Pag. 61</b>
<b>16. Maintenance.....</b>	<b>Pag. 62</b>
16.1 Firmware update.....	Pag. 62
16.2 Periodic cleaning.....	Pag. 62
16.3 Periodic controls.....	Pag. 62
16.4 Fuses.....	Pag. 62
<b>16. F.A.Q. and answers.....</b>	<b>Pag. 63</b>

# 1. Packaging and transportation

## 1.1 Packaging

Open the packaging and make sure that no part of the equipment has suffered any damage during the transportation. In case of damage to the fixture, contact your carrier and your supplier immediately by telephone, fax or e-mail, and inform them you will formally notify them in writing through registered letter.

### Packing list

Ensure the packaging contains:

- 1 - Otello HD +
- 1 - Instruction manual
- 1 - Barndoor
- 1 - Color Frame Holder
- 1 - 1.5 m power cable with PowerCON TRUE1 Top and bare ends

## 1.2 Transportation

The **Otello HD +** should be transported in either its original packaging or in an appropriate flight case.

# 2. General information

## 2.1 Safety informations

### Fire prevention:



1. Never locate the fixture on any flammable surface.
2. Minimum distance from flammable materials: 0,5 m.
3. Minimum distance from the closet illuminable surface: 0,5 m.
4. Replace any blown or damaged fuse only with those of identical values. Refer to the schematic diagram if there is any doubt.
5. Connect the projector to mains power protected by a thermal magnetic circuit breaker.

### Prevention from electric shock:



1. Presence of high voltage inside of the fixture. Insulate the projector from mains supply before opening or performing any function which involves touching the inside of the fixture, including lamp replacement.
2. For the connection to the mains, adhere strictly to the guidelines outlined in this manual.

3. The level of technology of Otello HD + requires the use of specialised personnel for all service applications; refer all work to your authorised Coemar service centre.
4. A good earth connection is essential for the proper functioning of the projector. Never connect the fixture if there is no earth connection.
5. Mains cables must not come into contact with other cables.
6. Do not operate the projector with wet hands or in an area where water is present.
7. The fixture must never be located in an exposed position, or in areas of extreme humidity.

### **Safety:**



1. The projector must always be installed with bolts, clamps, or other fixing devices which are suitably rated to support the weight of the projector.
2. Always use a secondary safety fixing device with chain or steel wire of a suitable rating to sustain the weight of the unit in case of failure of the principal fixing point.
3. The external surfaces of the unit, at various points, may reach 60°C. Never handle the unit until at least 10 minutes have elapsed since the LED was turned off.
4. Never install the fixture in an enclosed area lacking sufficient air flow; the room temperature must not exceed 35°C.
5. The projector contains electronic and electrical components which must under no circumstances be in contact with water, oil or any other liquid. Failure to do so will compromise the proper functioning of the projector.

### **Protection rating of the body against liquids and solids:**



1. The standard version of the fixture is classified ordinary apparatus; its protection grade against penetration by external agents, solid or liquid, is IP20.

---

## **2.2 Warranty conditions**

1. The fixture is under warranty for 24 months from the purchase date against factory defections.
2. Damage ought to unskillfulness, inappropriate use, or lack of suggested maintenance are excluded from the warranty.
3. Warranty expires when the projector is opened by unauthorized personnel.
4. Warranty doesn't include the replacement of the fixture.
5. Serial number and model of the fixture are necessary to retrieve informations and assistance from the dealer.

---

## **2.3 EC Norms**

1. The fixture satisfies the essential requirements of the directive 2004/108/EC, 2006/95/EC, 2011/65/EC, 2002/96/EC & 2003/108/EC.
2. The fixture is in accordance with the standard EN 50419 (RoHS) and satisfies the requirements of the directive 2002/96/EC (WEEE).

## 3. Product specifications

### 3.1 Technical characteristics - Otello 6 HD FullSpectrum +

<b>Power supply</b>	80-264 V, 50/60 Hz, auto-sensing
<b>Maximum current</b>	0.84 A at 230 V, 1.68 A at 115 V (Manual / P.O. Zoom) 0.88 A at 230 V, 1.77 A at 115 V (Motorized Zoom)
<b>Power factor</b>	$\text{Cos}\varphi = 0.98$
<b>Max power consumption</b>	190 W (Manual / P.O. Zoom) 200 W (Motorized Zoom)
<b>Color temperature</b>	RGBCLA, with pure color mixing throughout the field and all whites from 2.700 to 10.000 K (through DMX chart) or up to 20.000 K (through Display)
<b>Color Rendering Index (CRI)</b>	CRI 97 @ 3.200 K, CRI 96 @ 5.600 K
<b>Weight</b>	9.5 Kg / 20.94 lbs (Manual Yoke) 11 Kg / 24.25 lbs (Pole Operated Yoke)
<b>Maximum ambient temperature</b>	+35°C / +95°F
<b>IP rating</b>	20

### 3.2 Technical characteristics - Otello 6 VariWhite HD +

<b>Power supply</b>	80-264 V, 50/60 Hz, auto-sensing
<b>Maximum current</b>	0.88 A at 230 V, 1.69 A at 115 V (Manual / P.O. Zoom) 0.93 A at 230 V, 1.85 A at 115 V (Motorized Zoom)
<b>Power factor</b>	$\text{Cos}\varphi = 0.94$
<b>Max power consumption</b>	190 W (Manual / P.O. Zoom) 200 W (Motorized Zoom)
<b>Color temperature</b>	All whites from 2.700 to 6.500 K
<b>Color Rendering Index (CRI)</b>	CRI > 95
<b>Weight</b>	9.5 Kg / 20.94 lbs (Manual Yoke) 11 Kg / 24.25 lbs (Pole Operated Yoke)
<b>Maximum ambient temperature</b>	+35°C / +95°F
<b>IP rating</b>	20

---

### 3.3 Technical characteristics - Otello 8 HD FullSpectrum +

<b>Power supply</b>	80-264 V, 50/60 Hz, auto-sensing
<b>Maximum current</b>	1.53 A at 230V, 2.93 A at 115V (manual / P.O. zoom) 1.57 A at 230V, 3.02 A at 115V (motorized zoom)
<b>Power factor</b>	$\text{Cos}\varphi = 0.94$
<b>Max power consumption</b>	330 W (Manual / P.O. Zoom) 340 W (Motorized Zoom)
<b>Color temperature</b>	RGBCLA, with pure color mixing throughout the field and all whites from 2.700 to 10.000 K (through DMX chart) or up to 20.000 K (through Display)
<b>Color Rendering Index (CRI)</b>	CRI > 95, TLCI > 95
<b>Weight</b>	13.5 Kg / 29.76 lbs (With Manual Yoke) 15 Kg / 33.07 lbs (With Pole Operated Yoke)
<b>Maximum ambient temperature</b>	+35°C / +95°F
<b>IP rating</b>	20

---


### 3.4 Technical characteristics - Otello 8 HD VariWhite +

<b>Power supply</b>	80-264 V, 50/60 Hz, auto-sensing
<b>Maximum current</b>	1.52 A at 230V, 3.05 A at 115V (manual / P.O. zoom) 1.61 A at 230V, 3.23 A at 115V (motorized zoom)
<b>Power factor</b>	$\text{Cos}\varphi = 0.94$
<b>Max power consumption</b>	330 W (Manual / P.O. Zoom) 340 W (Motorized Zoom)
<b>Color temperature</b>	All whites from 2.700 to 6.500 K
<b>Color Rendering Index (CRI)</b>	CRI > 95, TLCI > 95
<b>Weight</b>	13.5 Kg / 29.76 lbs (With Manual Yoke) 15 Kg / 33.07 lbs (With Pole Operated Yoke)
<b>Maximum ambient temperature</b>	+35°C / +95°F
<b>IP rating</b>	20




## 4. Projector dimensions


### 4.1 Otello 6 with Manual Yoke

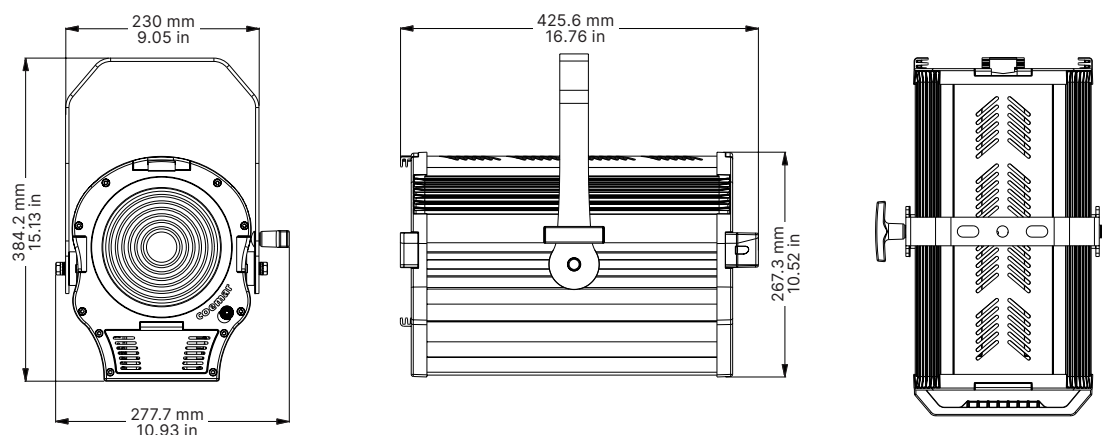


### 4.2 Otello 6 with Pole Operated Yoke

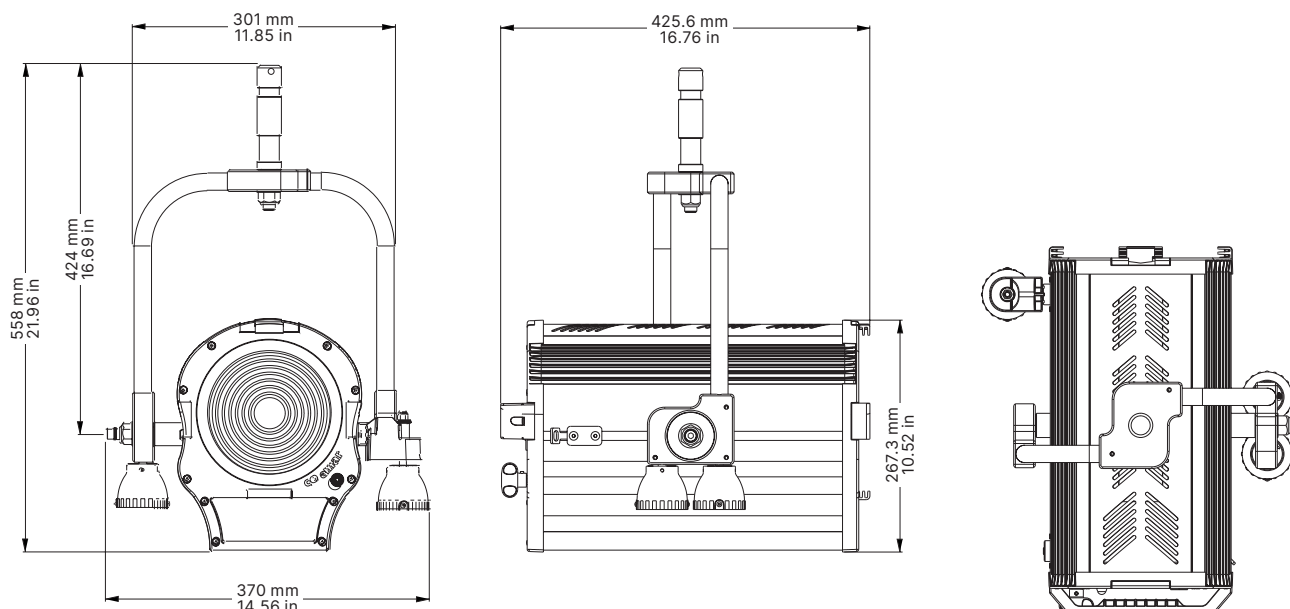


### 4.3 Otello 8 with Manual Yoke (FullSpectrum version)

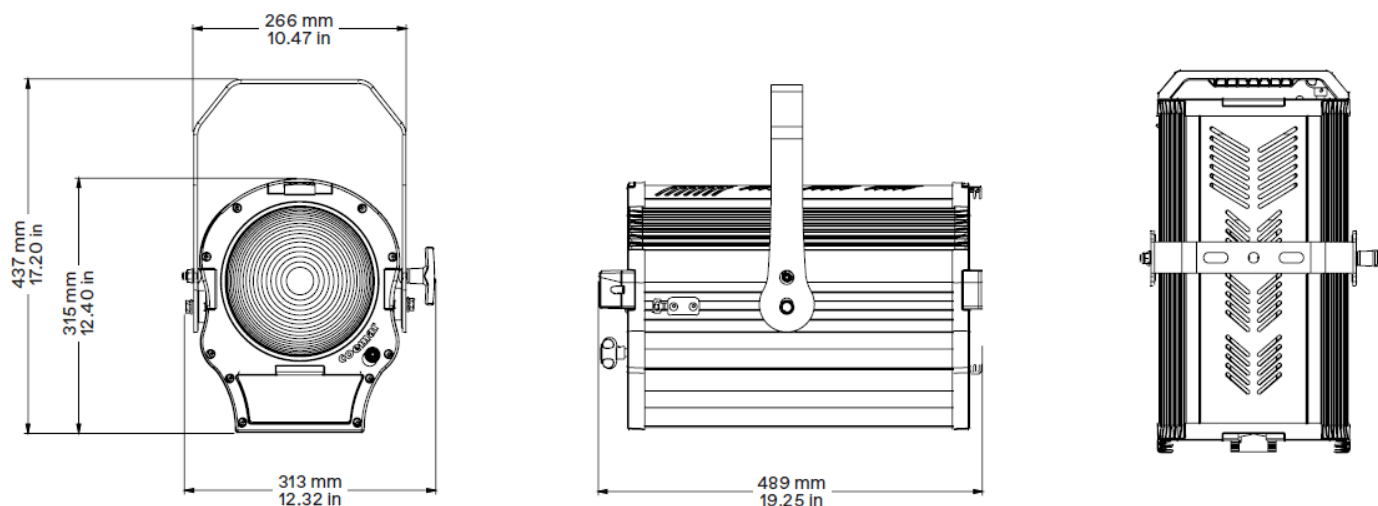


### 4.4 Otello 8 with Pole Operated Yoke (FullSpectrum version)

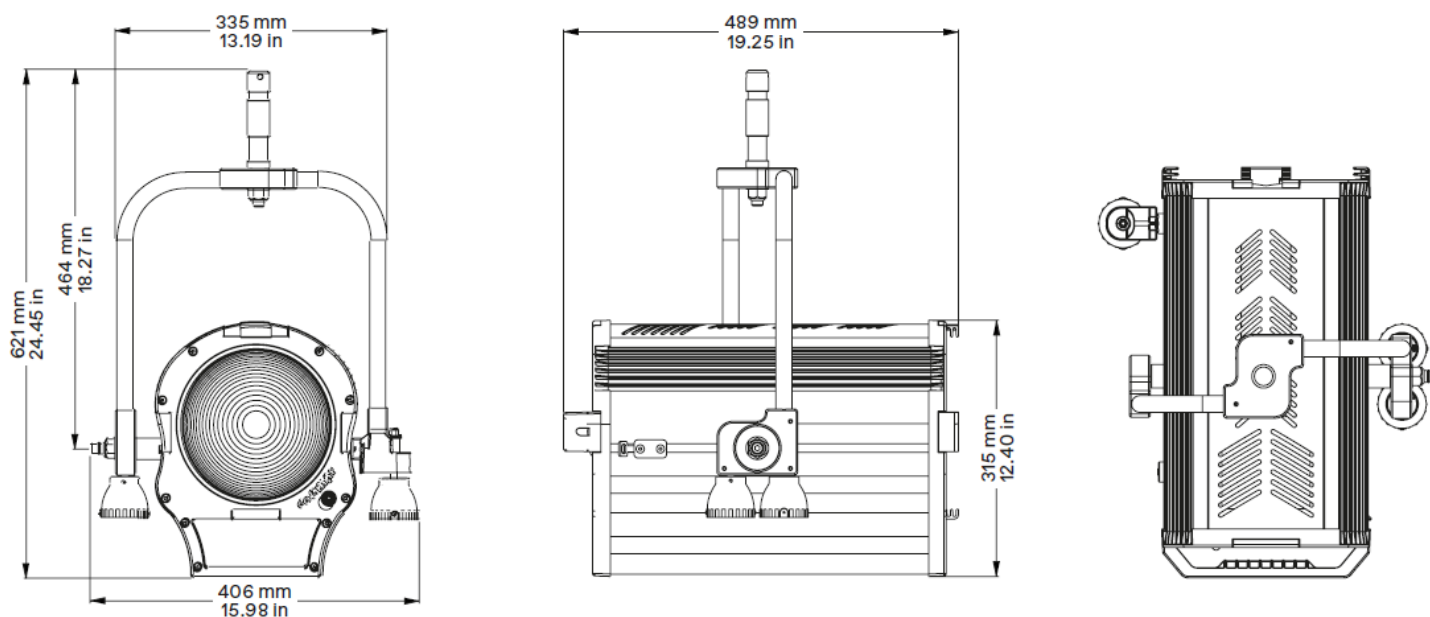


## 4.5 Otello 8 with Manual Yoke (VariWhite version)

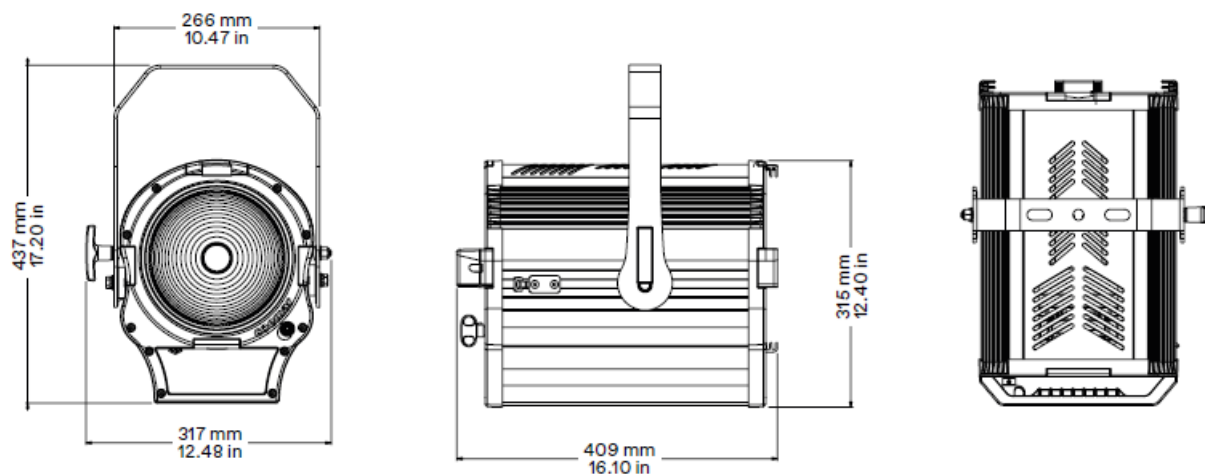

## 4.6 Otello 8 with Pole Operated Yoke (VariWhite version)

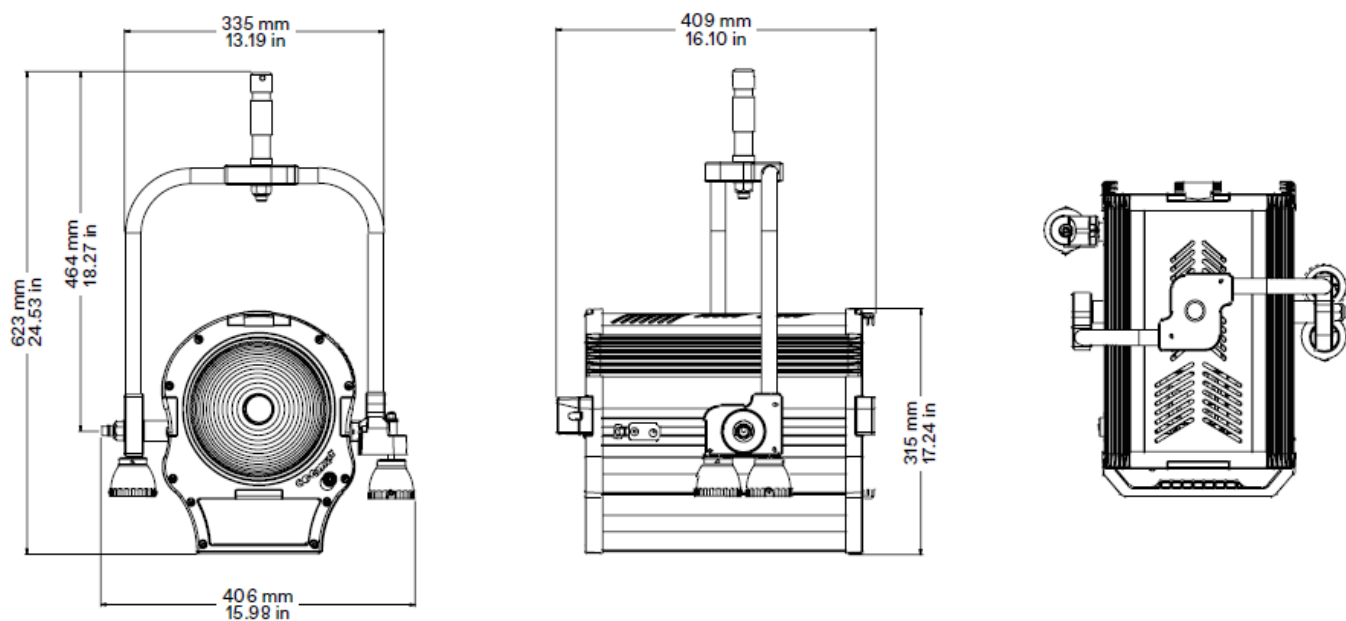


## 4.7 Unit's main components - with Manual Yoke

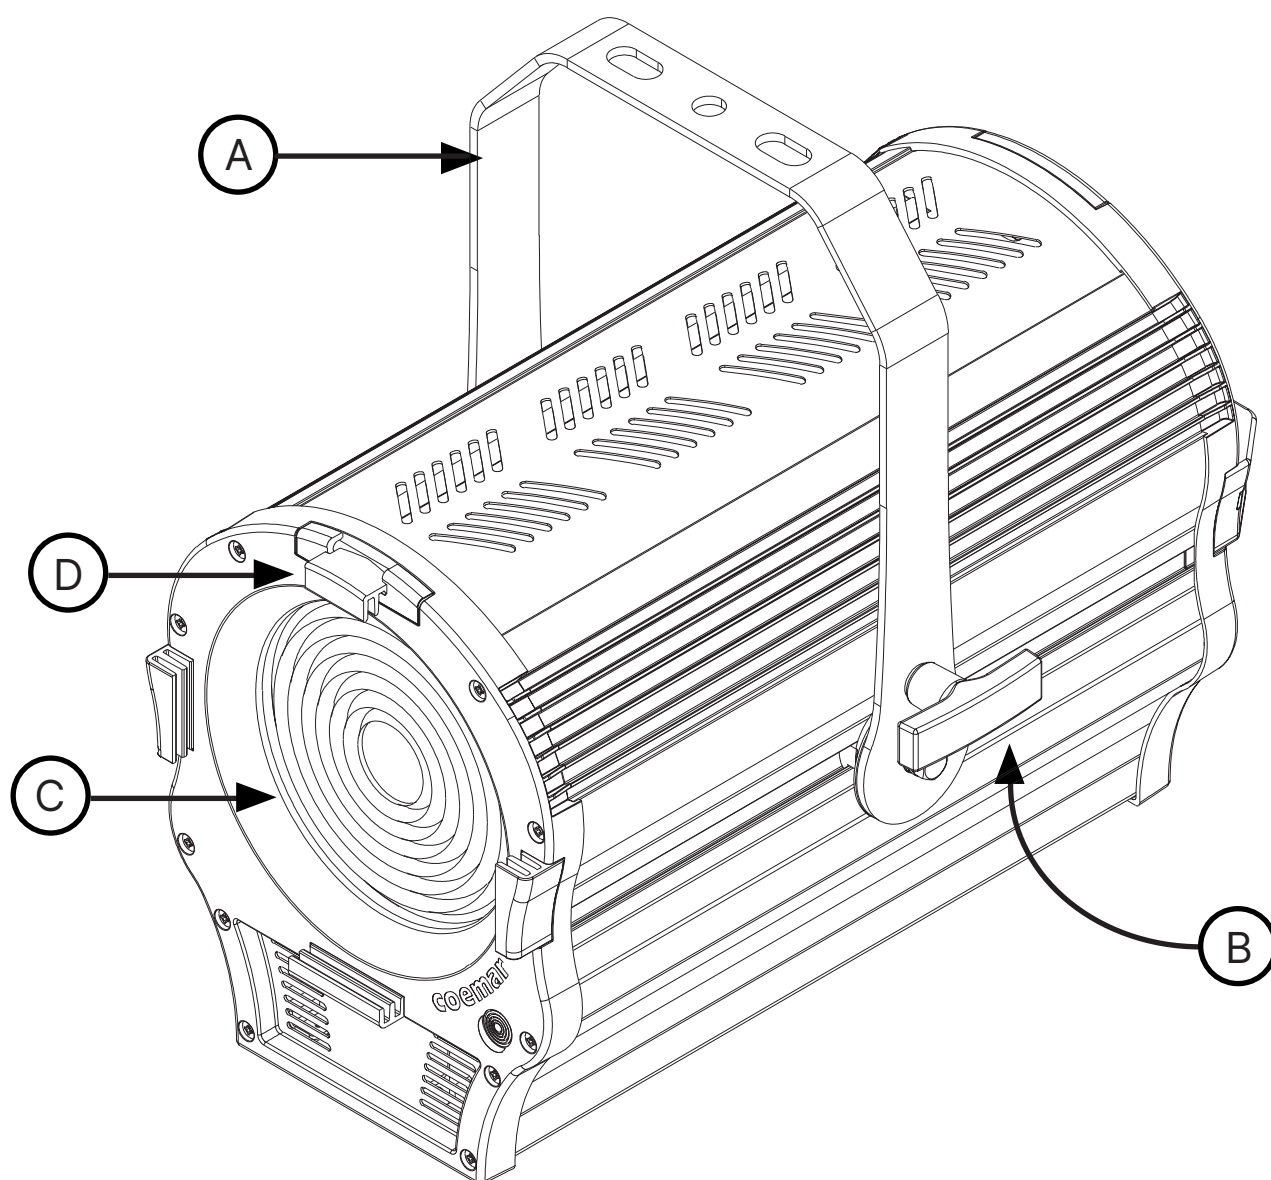


Components description	
A	Adjustable yoke
B	Yoke locking handle
C	Fresnel lens (6 version: Ø 150 mm / 5.9 in, 8 version: Ø 200 mm / 7.87 in)
D	Color frame holder

## 4.8 Unit's main components - with Pole Operated Yoke

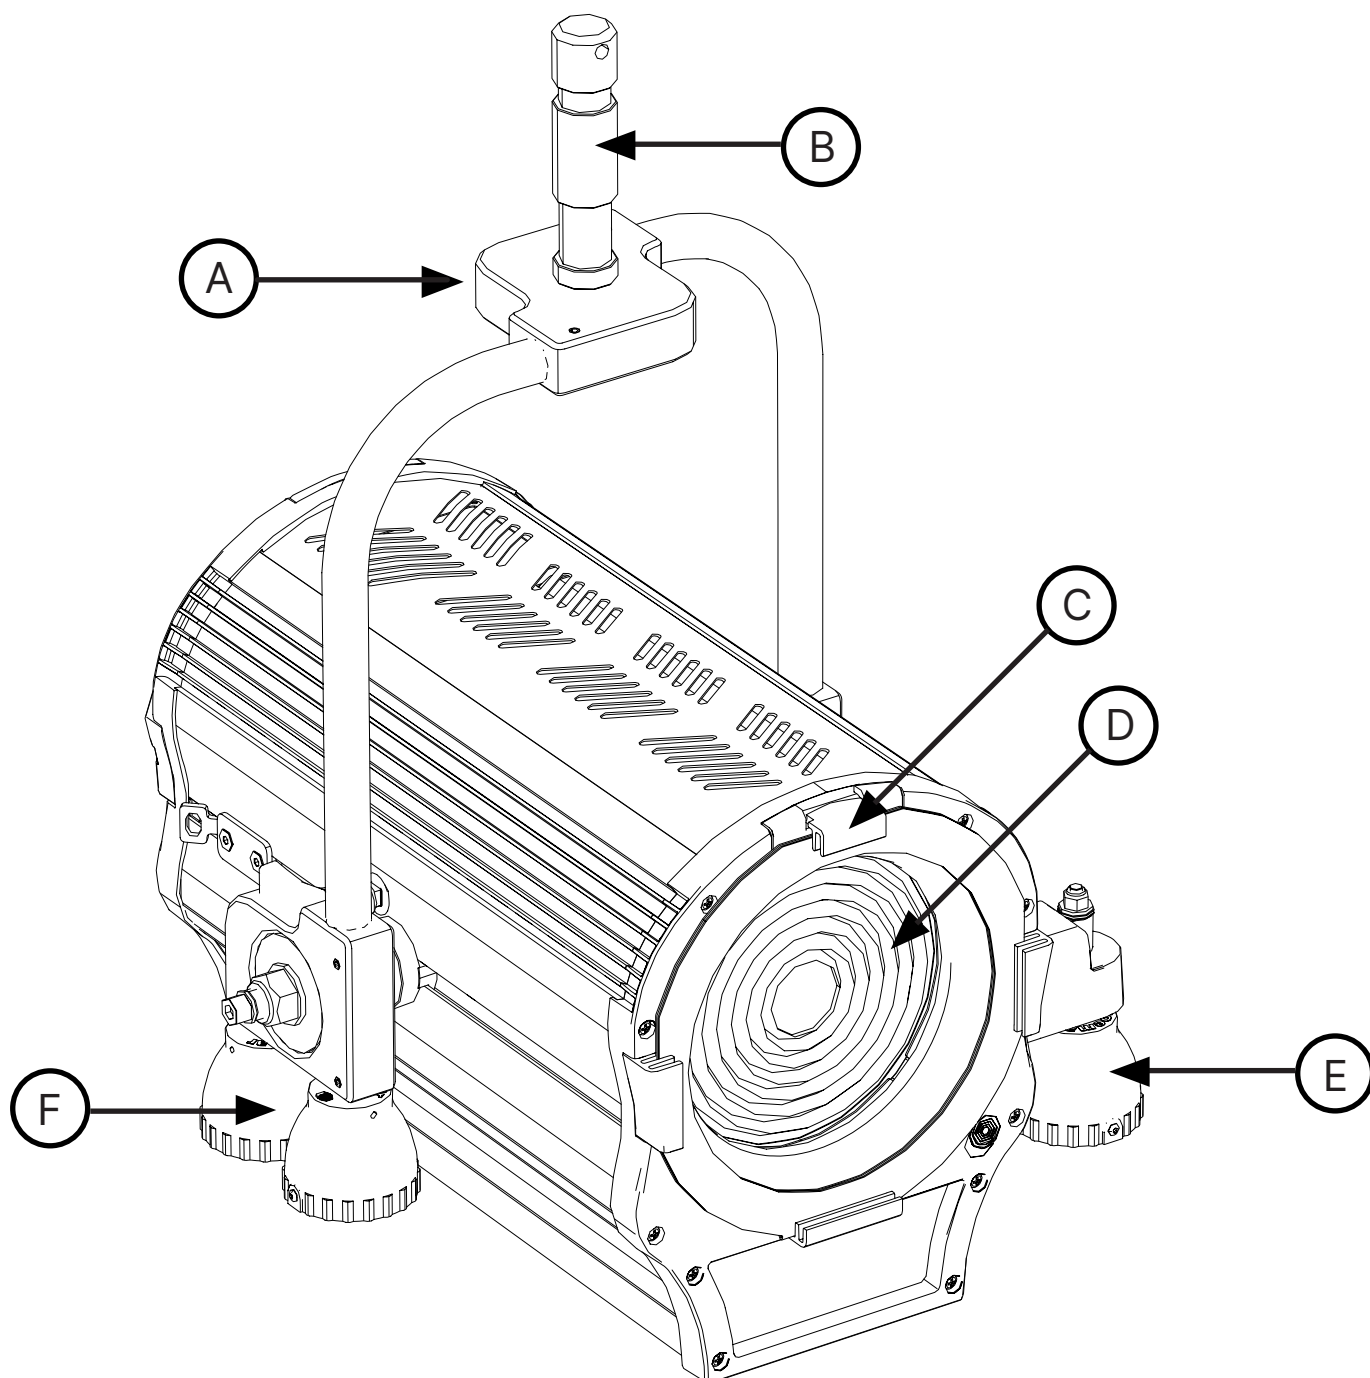

Components description	
A	Adjustable Pole Operated Yoke
B	Spigot
C	Color frame holder
D	Fresnel lens (6 version: Ø 150 mm / 5.9 in, 8 version: Ø 200 mm / 7.87 in)
E	Zoom Knob
F	Pan / Tilt Knobs


## 4.9 Back panel description

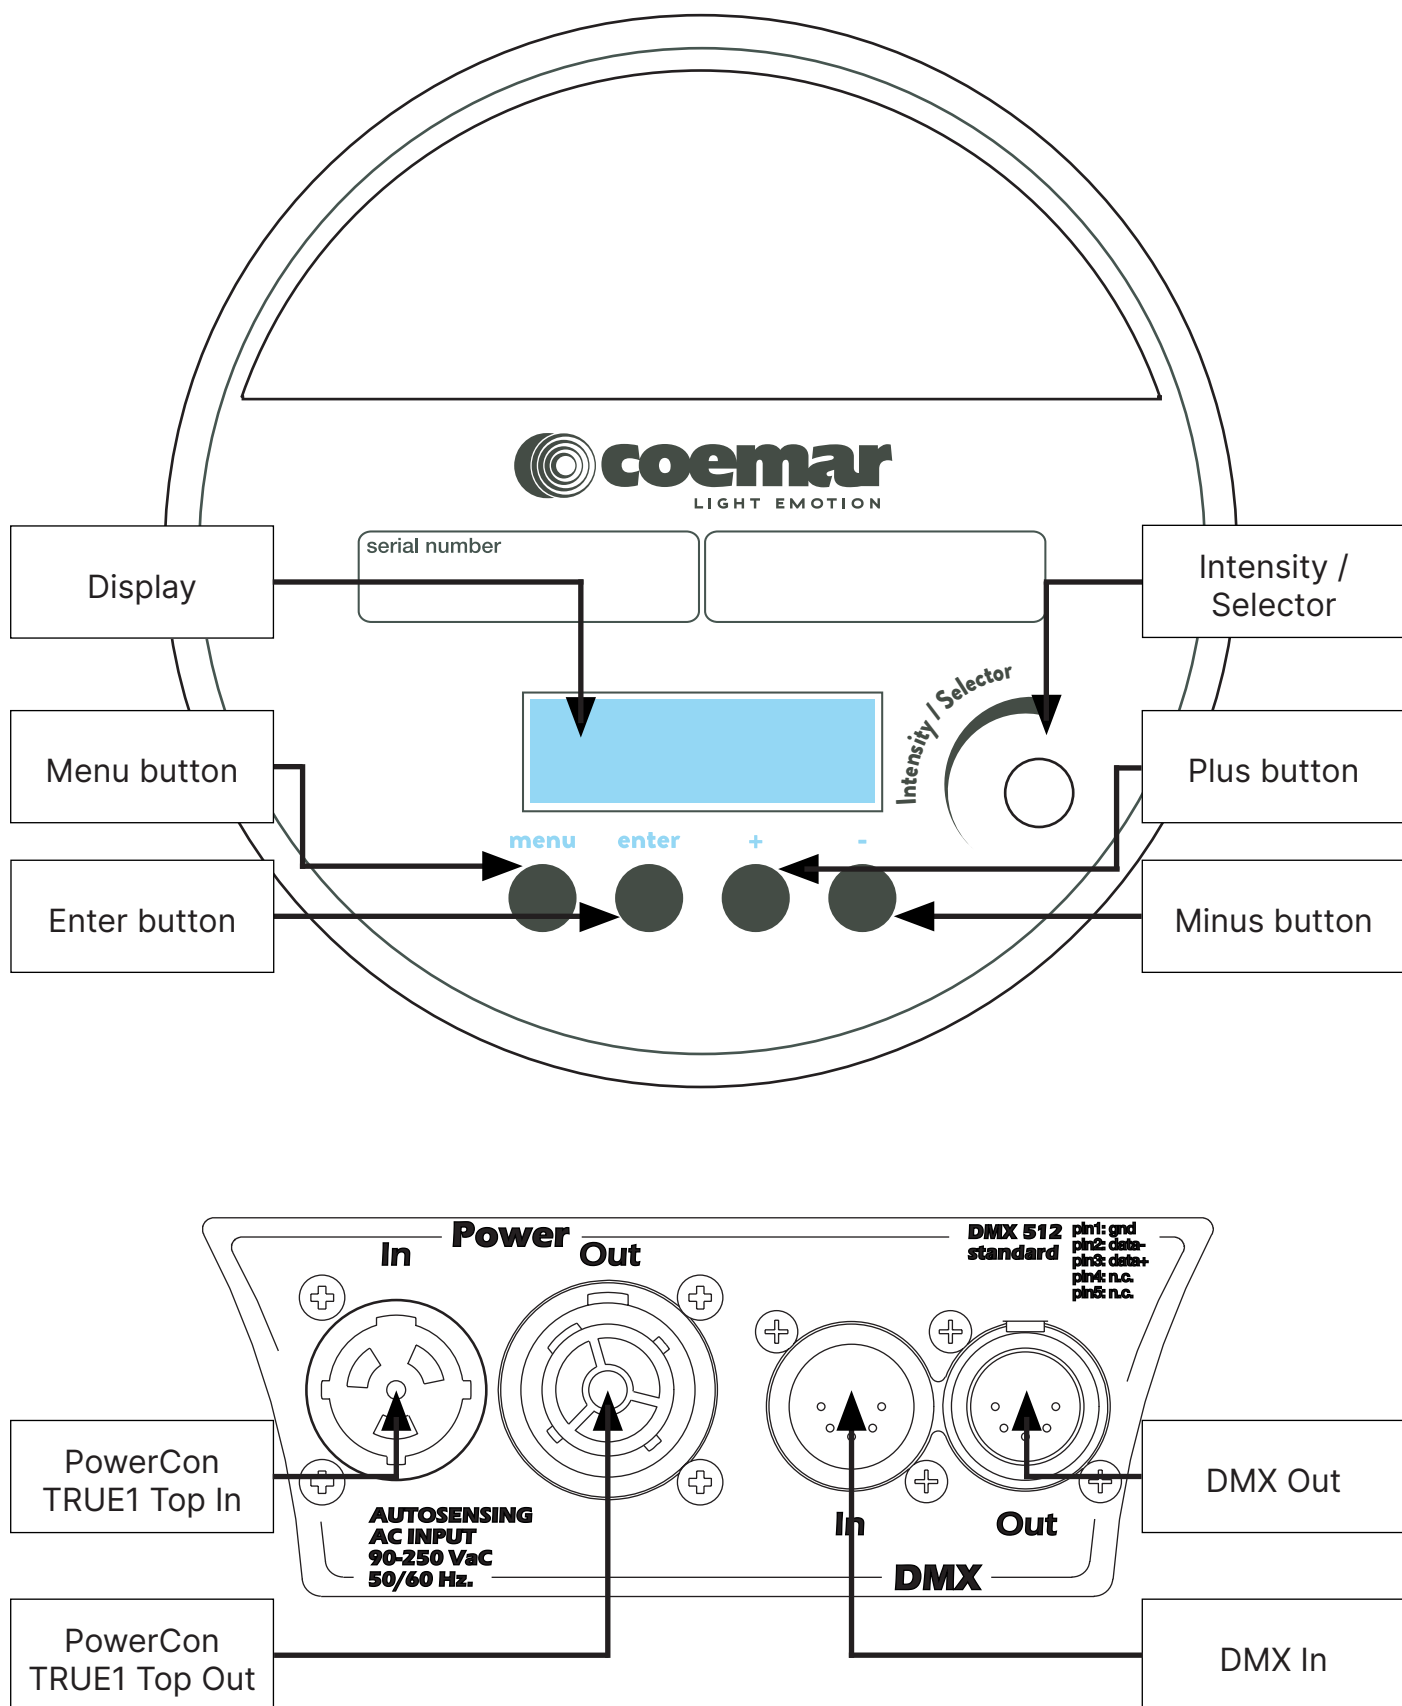

# 5. Installation

## 5.1 Mechanical installation


Otello HD + may be hung from an appropriate structure in any position or on tripod. If hanging the fixture from a lighting truss or similar, we recommend the use of an appropriate clamp "A", as shown in the following diagram.

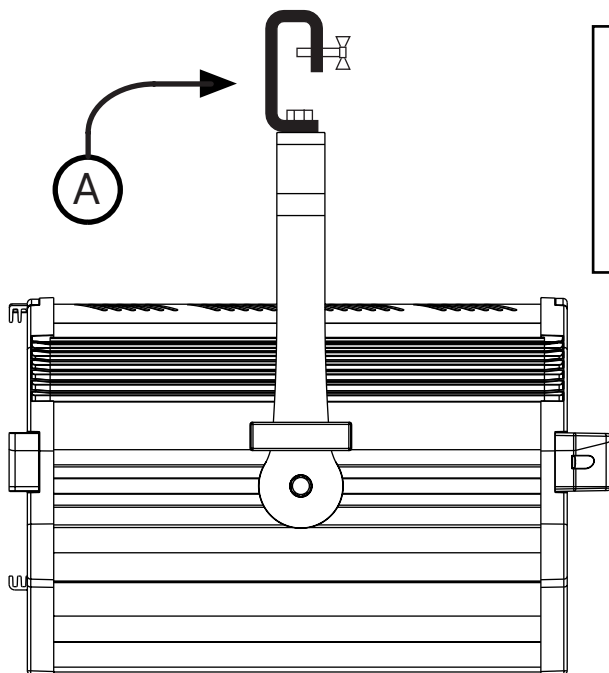

**Warning!!**  
Always ensure that your support structure and fixing (bolts, clamps, etc...) are rated to support the weight of the fixture.

## 5.2 Safety chain

When hanging it is recommended to use a safety chain, as required by current legislation. The safety chain must pass through the handles of the unit and then attached to the structure. If using steel cables and chains not 's production, make sure they are suitable to support the weight of the unit according to normative UL/ETL (required: the weight of 6 complete devices for at least one hour).

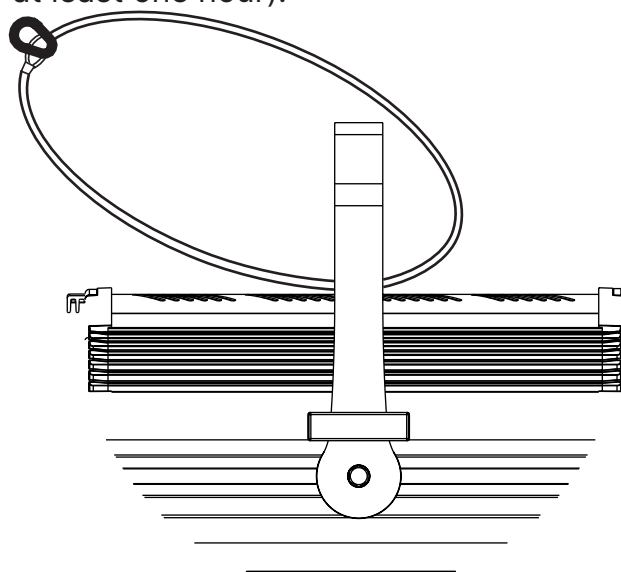


## 5.3 Adjusting the unit tilt

In order to adjust the tilt of the unit simply loose the side handle adjust the tilt and lock the yoke by tightening the handle again.


## 5.4 Accessories fixing

Otello HD+ has on its front receptacle for the mounting of a filter frame, a color changer or a barndoor. When you mount one of the accessories, ensure that they are firmly fixed and kept in place by the locking spring.

All Otello HD + are comprehensive of filter frame and 8-leaf barndoor. We recommend the use of high heat-resistant filters (polycarbonate or similar), commonly called "supergel".

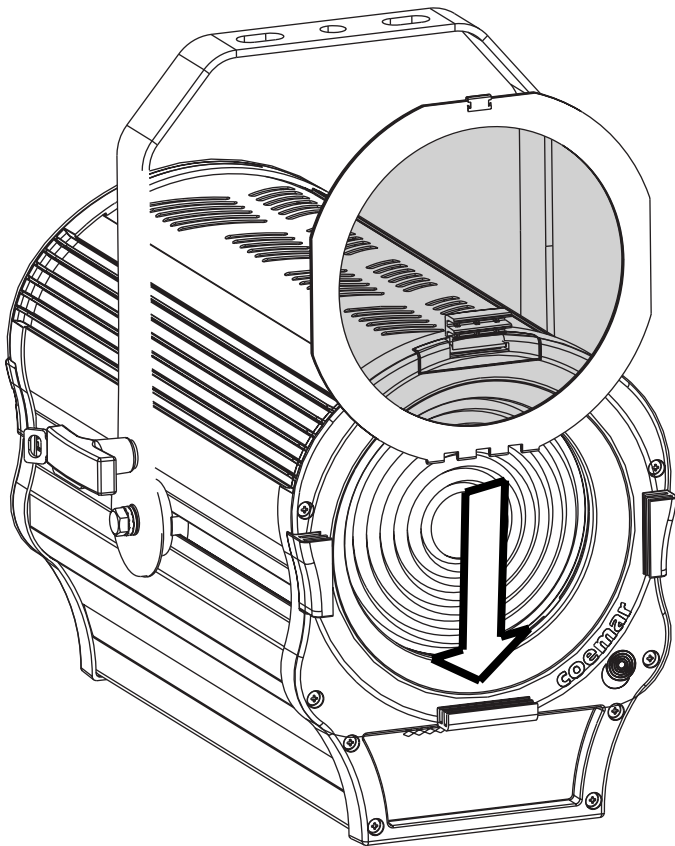

How to mount a filter frame

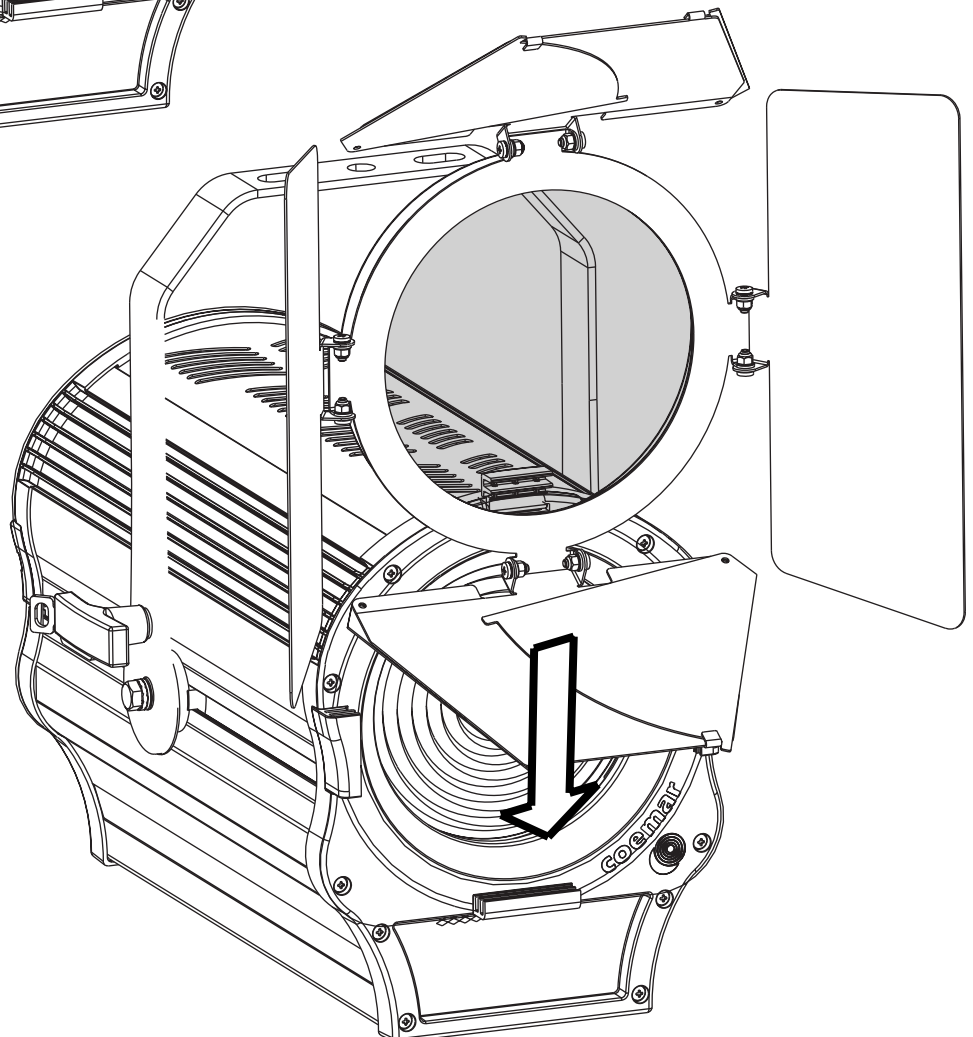

How to mount a 8-leaf brandoor



## 6. Powering up

### 6.1 Operating voltage and frequency

The unit may operate at voltage ranges from 80 to 264 V at a frequency of 50 or 60 Hz. It is not needed to effect any setup procedures: **Otello HD +** will automatically adjust its operation to suit any frequency or voltage within this range.

### 6.2 Connection to mains power

#### Mains cable characteristics


The mains cable provided is thermally resistant, complying to the most recent International standards.

Note: in case of cable replacement, similar cable with comparable thermal resistant qualities must be used exclusively (cable 3 X 1,5  $\varnothing$  external 10 mm, rated 300/500 V, tested to 2 KV, operating temperature  $-40^{\circ}\text{C} + 180^{\circ}\text{C}$ , Coemar cod. CV5311).

#### Connection to mains power

Otello HD + is equipped with two power connectors, one as input and one as output, which can be used to feed up to 8 (at 230 V) or 4 (at 115 V) fixtures.

The max constant absorption during normal exercise of **Otello HD +** is reported in the table at pages 7 and 8.

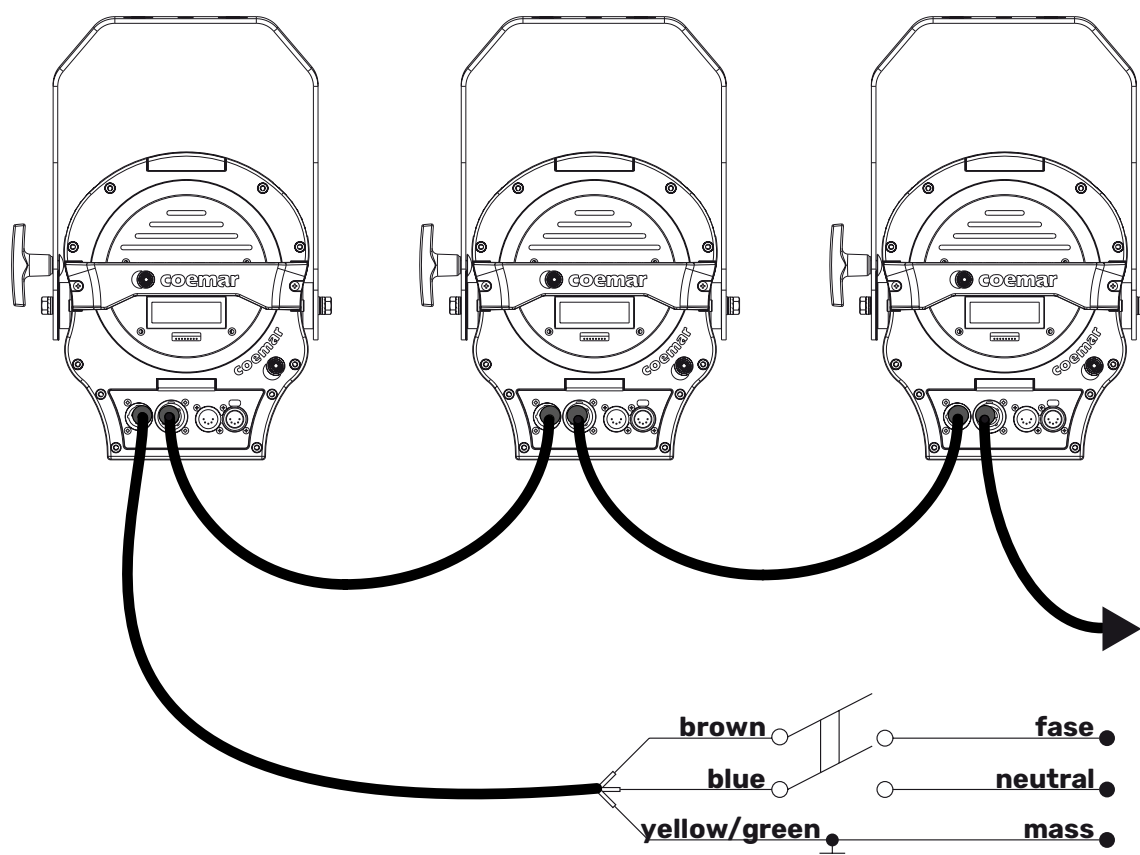


### **Warning!**

- The use of a thermal/magnetic circuit breaker is recommended. Strict adherence to regulatory norms is strongly recommended.
- Otello HD + should not be powered through a dimmer as this may damage the internal switching power supply.
- Prior to connecting the device to mains power, ensure that the mains characteristics are within the recommended range for the use of Otello HD +.
- All cabling and connections should be carried out by a suitably qualified personnel.

## **7. Control signal connections**

### **7.1 Control signal connection by XLR5 plugs**

The digital control signal is transmitted to the projector via a two pole cable screened in according to the International standards for DMX 512 data transmission. The connection must be serial, using connectors XLR5 male and female located on the back of Otello HD + labelled DMX512 IN e OUT.

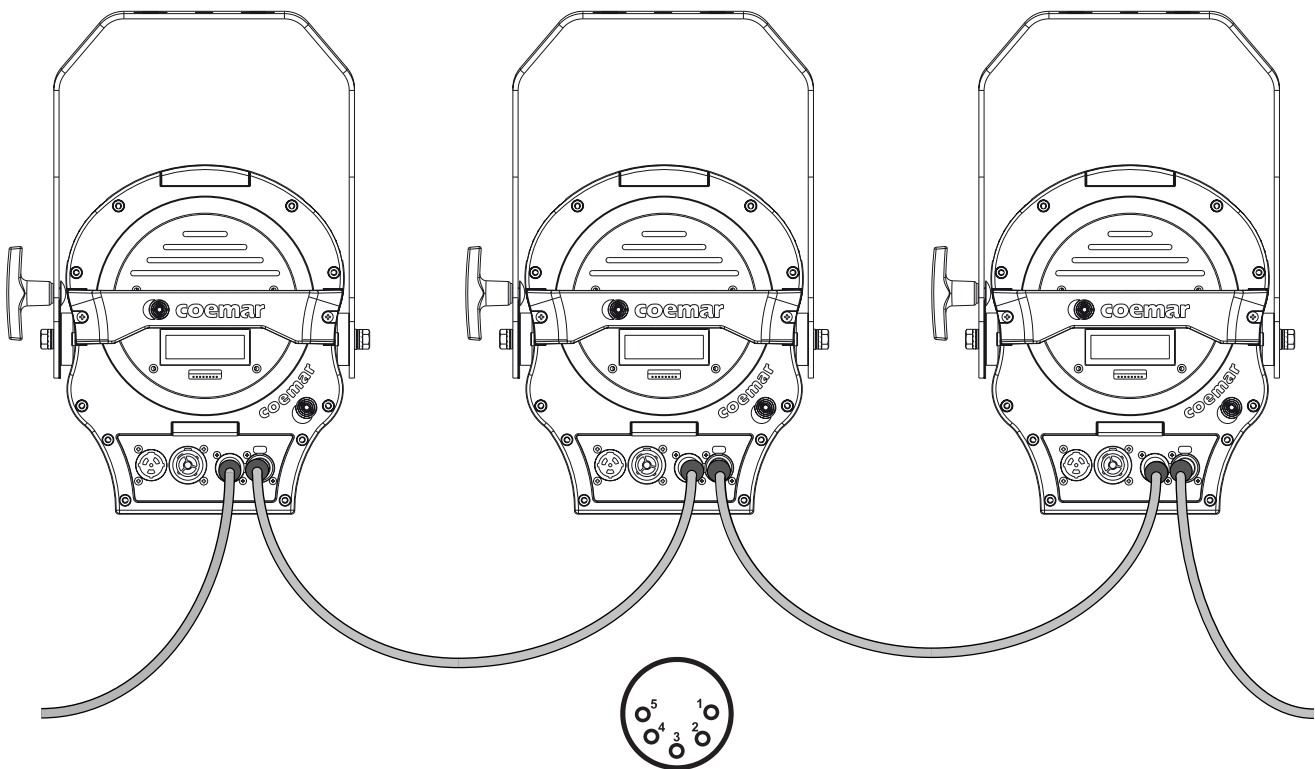

**Pin 1 = Ground (GND)**

**Pin 2 = Data -**

**Pin 3 = Data +**

**Pin 4 = Not connected**

**Pin 5 = Not connected**

**We council a maximum of 32 projector per line (depending by the quality of the DMX line)**

### **Warning!**

Make sure that screening and conductors are not in contact one another or with the metal housing of the connector.

Pin#1 and housing must never be connected to the power supply unit.

## 8. Turning the projector on

After having followed the preceding steps described, proceed with the power supply and turn on the projector connecting it to the mains power.

The software version installed on the internal microprocessors will be shown on the display, suddenly it will show the current DMX addressing. If the address blinks, it means that the DMX signal has not been received. Check the connection cable and the mixer functioning.

### 8.1 DMX address of the unit - FullSpectrum Version

Each projector can use **16 / 7 / 1**, **Studio mode**, **RGB mode**, **fine RGB mode** or **Sunrise mode** (manual / P.O. version) **17 / 8**, **Studio mode**, **RGB mode**, **fine RGB mode** or **Sunrise mode** (motorized version) configurations for its complete operation and is controlled by a DMX 512 signal.

### 8.2 DMX address of the unit - VariWhite Version

Each projector can use **6 / 4** (motorized version) or **5 / 2 / 1** (manual / P.O. version), **Sunrise mode** or **Raw mode** configurations for its complete operation and is controlled by a DMX 512 signal.


#### DMX addressing





When powered up initially, each projector will show A001, which indicates DMX address 001; for example, when set at 16 channels a projector thus addressed will respond to commands of channel 1 to 16 from your DMX 512 controller. A second unit must be addressed as A017, a third one as A033 and so on. The operation must be carried out on every LEDko FullSpectrum 6 HD which has an address different from A001.

#### Altering the DMX address:

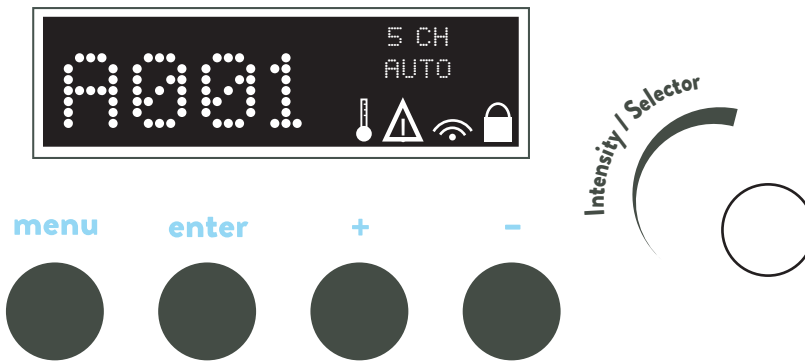1. Press the + or – button until the display shows the required DMX address. The digits on the display will blink to indicate that the variation has not been registered.
2. Press the enter key to confirm your selection. The digits on the display panel will cease to blink and the projector will now respond to the new address.

Note: by holding the + or – button down the scrolling will be faster; thus allowing a faster selection



-  It means the projector has entered protection
-  It means there is an error, it flashes intermittently with address
-  Wireless DMX Enabled
-  The keys are locked

#### Warning!!

If you alter the DMX address with no DMX signal connected, the digits on the display panel will continue to flash even after you have pressed ENTER button to confirm the address.

# 9. DMX chart - Otello HD FullSpectrum +

## 9.1 DMX modes

DMX channels ↓	16 channels	7 channels	1 channel	Studio mode	RGB mode	fine RGB mode	Sunrise mode
1	Master Dimmer	Master Dimmer	Master Dimmer	Master Dimmer	Master Dimmer	Master Dimmer	Master Dimmer
2	Red	Red		White Tone	Dimmer Fine	Dimmer Fine	Dimmer Fine
3	Green	Green		Green Saturation	Red	Red	Proportional CCT
4	Blue	Blue		Saturation	Green	Red Fine	Step CCT
5	Cyan	Cyan		Hue	Blue	Green	Green Saturation
6	Lime	Lime		Dimmer Fine	White Tone	Green Fine	Special Function
7	Amber	Amber		Special Function	Saturation	Blue	
8	Strobe Effect				Strobe Effect	Blue Fine	
9	Dimmer Fine				Special Function	White Tone	
10	Special Function					Saturation	
11	Red Tone					Strobe Effect	
12	Green Tone					Special Function	
13	Blue Tone						
14	White Tone						
15	Green Saturation						
16	Saturation						

## 9.2 DMX Chart: 16, 7, 1 channels (Manual / P.O. Zoom) 17 / 8 (Motorized Zoom)

channel 16 7 1			function	type of control	effect	decimal		percentage	
1	1	1 <sup>2</sup>	master dimmer	proportional	adjust luminous output intensity from 0 to 100%	0	- 255	0%	- 100%
2	2	-	red	proportional	proportional control of the color percentage from 0 % to 100 %	0	- 255	0%	- 100%
3	3	-	green	proportional	proportional control of the color percentage from 0 % to 100 %	0	- 255	0%	- 100%
4	4	-	blue	proportional	proportional control of the color percentage from 0 % to 100 %	0	- 255	0%	- 100%
5	5	-	cyan	proportional	proportional control of the color percentage from 0 % to 100 %	0	- 255	0%	- 100%
6	6	-	lime	proportional	proportional control of the color percentage from 0 % to 100 %	0	- 255	0%	- 100%
7	7	-	amber	proportional	proportional control of the color percentage from 0 % to 100 %	0	- 255	0%	- 100%
8	-	-	strobe effect	step	no effect	0	- 9	0%	- 4%
				proportional	variable speed strobing effect, from slow to fast	10	- 57	4%	- 22%
				step	stop strobe	58	- 59	23%	- 23%
				proportional	sequenced pulse effect, slow closing, fast opening (variable speed pulsing, from slow to fast)	60	- 108	24%	- 42%
				step	stop strobe	109	- 110	43%	- 43%
				proportional	sequenced pulse effect, fast closing, slow opening (variable speed pulsing, from slow to fast)	111	- 159	44%	- 62%
				step	stop strobe	160	- 161	63%	- 63%
				proportional	random strobe effect with variable speed from slow to fast	162	- 207	64%	- 81%
				step	stop strobe	208	- 209	82%	- 82%
				proportional	random strobe effect with variable speed from slow to fast	210	- 255	82%	- 100%
9	-	-	dimmer fine	proportional	fine dimmer control 16 bit	0	- 255	0%	- 100%
10	-	-	special functions	step	park	0	- 9	0%	- 4%
					no effect	10	- 22	4%	- 9%
					reset of all the motors, only once (usable only with <b>MOTORIZED ZOOM</b> version)	23	- 84	9%	- 33%
					fan at SILENT mode	85	- 96	33%	- 38%
					fan at STUDIO mode	97	- 108	38%	- 42%
					fan at AUTO mode	109	- 120	43%	- 47%
				proportional	fan speed control	121	- 133	47%	- 52%
				step	enables the automatic display blackout	134	- 185	53%	- 73%
					disables the automatic display blackout	186	- 199	73%	- 78%
					no effect	200	- 255	78%	- 100%

11 <sup>1</sup>	-	-	red tone	step	no effect	0	-	9	0%	-	4%
					COR01 - GELS RED 1	10	-	34	4%	-	13%
					COR02 - GELS RED 2	35	-	59	14%	-	23%
					COR03 - GELS RED 3	60	-	84	24%	-	33%
					COR04 - GELS RED 4	85	-	109	33%	-	43%
					COR05 - GELS RED 5	110	-	134	43%	-	53%
					COR06 - GELS RED 6	135	-	159	53%	-	62%
					COR07 - GELS RED 7	160	-	184	63%	-	72%
					COR08 - GELS RED 8	185	-	209	73%	-	82%
					COR09 - GELS RED 9	210	-	234	82%	-	92%
					COR10 - GELS RED 10	235	-	255	92%	-	100%
12 <sup>1</sup>	-	-	green tone	step	no effect	0	-	9	0%	-	4%
					COG01 - GELS GREEN 1	10	-	34	4%	-	13%
					COG02 - GELS GREEN 2	35	-	59	14%	-	23%
					COG03 - GELS GREEN 3	60	-	84	24%	-	33%
					COG04 - GELS GREEN 4	85	-	109	33%	-	43%
					COG05 - GELS GREEN 5	110	-	134	43%	-	53%
					COG06 - GELS GREEN 6	135	-	159	53%	-	62%
					COG07 - GELS GREEN 7	160	-	184	63%	-	72%
					COG08 - GELS GREEN 8	185	-	209	73%	-	82%
					COG09 - GELS GREEN 9	210	-	234	82%	-	92%
					COG10 - GELS GREEN 10	235	-	255	92%	-	100%
13 <sup>1</sup>	-	-	blue tone	step	no effect	0	-	9	0%	-	4%
					COB01 - GELS BLUE 1	10	-	34	4%	-	13%
					COB02 - GELS BLUE 2	35	-	59	14%	-	23%
					COB03 - GELS BLUE 3	60	-	84	24%	-	33%
					COB04 - GELS BLUE 4	85	-	109	33%	-	43%
					COB05 - GELS BLUE 5	110	-	134	43%	-	53%
					COB06 - GELS BLUE 6	135	-	159	53%	-	62%
					COB07 - GELS BLUE 7	160	-	184	63%	-	72%
					COB08 - GELS BLUE 8	185	-	209	73%	-	82%
					COB09 - GELS BLUE 9	210	-	234	82%	-	92%
					COB10 - GELS BLUE 10	235	-	255	92%	-	100%
14	-	-	white tone	step	no effect	0	-	9	0%	-	4%
					2.700 K	10	-	15	4%	-	6%
				proportional	proportional value from 2.700 K to 3.200 K	16	-	30	6%	-	12%
				step	3.200 K	31	-	45	12%	-	18%
				proportional	proportional value from 3.200 K to 4.000 K	46	-	60	18%	-	24%
				step	4.000 K	61	-	75	24%	-	29%
				proportional	proportional value from 4.000 K to 5.000 K	76	-	90	30%	-	35%
				step	5.000 K	91	-	105	36%	-	41%
				proportional	proportional value from 5.000 K to 5.600 K	106	-	120	42%	-	47%
				step	5.600 K	121	-	135	47%	-	53%
				proportional	proportional value from 5.600 K to 7.000 K	136	-	150	53%	-	59%
				step	7.000 K	151	-	165	59%	-	65%
				proportional	proportional value from 7.000 K to 8.000 K	166	-	180	65%	-	71%
				step	8.000 K	181	-	195	71%	-	76%
				proportional	proportional value from 8.000 K to 9.000 K	196	-	210	77%	-	82%
				step	9.000 K	211	-	225	83%	-	88%
				proportional	proportional value from 9.000 K to 10.000 K	226	-	240	89%	-	94%
				step	10.000 K	241	-	255	95%	-	100%

15 <sup>3</sup>	-	-	green saturation	step	no effect	0		0%	
				proportional	exalts the green color in the mixing and diminishes the presence of magenta	1	- 127	0%	- 20%
				step	no effect	128		50%	
				proportional	diminishes the presence of green in the mixing and exalts the magenta color	129	- 254	51%	- 99%
				step	no effect	255		100%	
16 <sup>4</sup>	-	-	saturation	proportional	the white tone fades to the tone built with the RGBWLA channels	0	- 255	0%	- 100%
17 <sup>5</sup>	8 <sup>5</sup>	-	zoom	proportional	proportional control of zoom from narrow to wide beam	0	- 255	0%	- 100%

Note 1: channels involving 11 - 12 - 13 macro colors can also be obtained by mixing channels 2 - 3 - 4 - 5 - 6 - 7.

Note 2: the one channel function mode can be selected through the "DMX SETTINGS" menu. This channel can be used only with **MANUAL/P.O. ZOOM** version.

Note 3: the rest position of the green saturation is 128. Diminishing the DMX value augments the presence of the green color. Increasing the DMX value augments the presence of magenta.

Note 4: increasing the value of the saturation DMX channel the white tone (channel 14) will fade to the color selected by the channel 2 - 3 - 4 - 5 - 6 - 7.

Note 5: this channel can be used only with **MOTORIZED ZOOM** version.



## 9.3 DMX Chart Studio mode

channel	function	type of control	effect	decimal		percentage	
1	master dimmer	proportional	adjust luminous output intensity from 0 to 100%	0	- 255	0%	- 100%
2	white tone	step	2.700 K	0	- 15	0%	- 6%
		proportional	proportional value from 2.700 K to 3.200 K	16	- 30	6%	- 12%
		step	3.200 K	31	- 45	12%	- 18%
		proportional	proportional value from 3.200 K to 4.000 K	46	- 60	18%	- 24%
		step	4.000 K	61	- 75	24%	- 29%
		proportional	proportional value from 4.000 K to 5.000 K	76	- 90	30%	- 35%
		step	5.000 K	91	- 105	36%	- 41%
		proportional	proportional value from 5.000 K to 5.600 K	106	- 120	53%	- 59%
		step	5.600 K	121	- 135	47%	- 53%
		proportional	proportional value from 5.600 K to 7.000 K	136	- 150	53%	- 59%
		step	7.000 K	151	- 165	59%	- 65%
		proportional	proportional value from 7.000 K to 8.000 K	166	- 180	65%	- 71%
		step	8.000 K	181	- 195	71%	- 76%
		proportional	proportional value from 8.000 K to 9.000 K	196	- 210	77%	- 82%
		step	9.000 K	211	- 225	83%	- 88%
		proportional	proportional value from 9.000 K to 10.000 K	226	- 240	89%	- 94%
		step	10.000 K	241	- 255	95%	- 100%
3 <sup>1</sup>	green saturation	step	no effect	0		0%	
		proportional	exalts the green color in the mixing and diminishes the presence of magenta	1	- 127	0%	- 20%
		step	no effect	128		50%	
		proportional	diminishes the presence of green in the mixing and exalts the green color	129	- 254	51%	- 99%
		step	no effect	255		100%	
4	saturation	proportional	the white tone fades to the tone built with the HUE channel	0	- 255	0%	- 100%
5 <sup>2</sup>	hue	proportional	reproduce the color crossfades around the color space	0	- 255	0%	- 100%
6	dimmer fine	proportional	fine dimmer control 16 bit	0	- 255	0%	- 100%
7	special functions	step	park	0	- 9	0%	- 4%
			no effect	10	- 22	4%	- 9%
			reset of all the motors, only once (usable only with <b>MOTORIZED ZOOM</b> version)	23	- 84	9%	- 33%
			fan at SILENT mode	85	- 96	33%	- 38%
			fan at STUDIO mode	97	- 108	38%	- 42%
			fan at AUTO mode	109	- 120	43%	- 47%
		proportional	fan speed control	121	- 133	47%	- 52%
		step	enables the automatic display blackout	134	- 185	53%	- 73%
			disables the automatic display blackout	186	- 199	73%	- 78%
			no effect	200	- 255	78%	- 100%
8 <sup>3</sup>	zoom	proportional	proportional control of zoom from narrow to wide beam	0	- 255	0%	- 100%

Note 1: the rest position of the green saturation is 128. Diminishing the DMX value augments the presence of the green color. Increasing the DMX value augments the presence of magenta.

Note 2: increasing the value of the saturation DMX channel (channel 4) the white light will fade to the color selected with the HUE channel (channel 5)

Note 3: channel 8 can be used only with **MOTORIZED ZOOM** version.

## 9.4 DMX Chart RGB mode

channel	function	type of control	effect	decimal		percentage	
1	master dimmer	proportional	adjust luminous output intensity from 0 to 100%	0	- 255	0%	- 100%
2	dimmer fine	proportional	fine dimmer control 16 bit	0	- 255	0%	- 100%
3	red	proportional	proportional control of the color percentage from 0 % to 100 %	0	- 255	0%	- 100%
4	green	proportional	proportional control of the color percentage from 0 % to 100 %	0	- 255	0%	- 100%
5	blue	proportional	proportional control of the color percentage from 0 % to 100 %	0	- 255	0%	- 100%
6	white tone	step	no effect	0	- 9	0%	- 4%
			2.700 K	10	- 15	4%	- 6%
		proportional	proportional value from 2.700 K to 3.200 K	16	- 30	6%	- 12%
		step	3.200 K	31	- 45	12%	- 18%
			proportional value from 3.200 K to 4.000 K	46	- 60	18%	- 24%
		step	4.000 K	61	- 75	24%	- 29%
			proportional value from 4.000 K to 5.000 K	76	- 90	30%	- 35%
		step	5.000 K	91	- 105	36%	- 41%
			proportional value from 5.000 K to 5.600 K	106	- 120	42%	- 47%
		step	5.600 K	121	- 135	47%	- 53%
			proportional value from 5.600 K to 7.000 K	136	- 150	53%	- 59%
		step	7.000 K	151	- 165	59%	- 65%
			proportional value from 7.000 K to 8.000 K	166	- 180	65%	- 71%
		step	8.000 K	181	- 195	71%	- 76%
			proportional value from 8.000 K to 9.000 K	196	- 210	77%	- 82%
		step	9.000 K	211	- 225	83%	- 88%
			proportional value from 9.000 K to 10.000 K	226	- 240	89%	- 94%
		step	10.000 K	241	- 255	95%	- 100%
7 <sup>1</sup>	saturation	proportional	the white tone fades to the tone built with the RGB channels	0	- 255	0%	- 100%
8	strobe effect	step	no effect	0	- 9	0%	- 4%
		proportional	variable speed strobing effect, from slow to fast	10	- 57	4%	- 22%
		step	stop strobe	58	- 59	23%	- 23%
		proportional	sequenced pulse effect, slow closing, fast opening (variable speed pulsing, from slow to fast)	60	- 108	24%	- 42%
			stop strobe	109	- 110	43%	- 43%
		proportional	sequenced pulse effect, fast closing, slow opening (variable speed pulsing, from slow to fast)	111	- 159	44%	- 62%
			stop strobe	160	- 161	63%	- 63%
		proportional	random strobe effect with variable speed from slow to fast	162	- 207	64%	- 81%
		step	stop strobe	208	- 209	82%	- 82%
		proportional	random strobe effect with variable speed from slow to fast	210	- 255	82%	- 100%

9	special functions	step	park	0	-	9	0%	-	4%
			no effect	10	-	22	4%	-	9%
			reset of all the motors, only once (usable only with <b>MOTORIZED ZOOM</b> version)	23	-	84	9%	-	33%
			fan at SILENT mode	85	-	96	33%	-	38%
			fan at STUDIO mode	97	-	108	38%	-	42%
			fan at AUTO mode	109	-	120	43%	-	47%
		proportional	fan speed control	121	-	133	47%	-	52%
		step	enables the automatic display blackout	134	-	185	53%	-	73%
			disables the automatic display blackout	186	-	199	73%	-	78%
			no effect	200	-	255	78%	-	100%
10 <sup>2</sup>	zoom	proportional	proportional control of zoom from narrow to wide beam	0	-	255	0%	-	100%

Note 1: increasing the value of the saturation DMX channel the white tone (channel 6) will fade to the color selected by the channel 3, 4 or 5

Note 2: channel 10 can be used only with **MOTORIZED ZOOM** version.

## 9.5 DMX Chart fine RGB mode

channel	function	type of control	effect	decimal		percentage	
1	master dimmer	proportional	adjust luminous output intensity from 0 to 100%	0	- 255	0%	- 100%
2	dimmer fine	step	fine dimmer control 16 bit	0	- 255	0%	- 100%
3	red	proportional	proportional control of the color percentage from 0 % to 100 %	0	- 255	0%	- 100%
4	red fine	step	fine red control 16 bit	0	- 255	0%	- 100%
5	green	proportional	proportional control of the color percentage from 0 % to 100 %	0	- 255	0%	- 100%
6	green fine	step	fine green control 16 bit	0	- 255	0%	- 100%
7	blue	proportional	proportional control of the color percentage from 0 % to 100 %	0	- 255	0%	- 100%
8	blue fine	step	fine blue control 16 bit	0	- 255	0%	- 100%
9	white tone	step	no effect	0	- 9	0%	- 4%
			2.700 K	10	- 15	4%	- 6%
		proportional	proportional value from 2.700 K to 3.200 K	16	- 30	6%	- 12%
		step	3.200 K	31	- 45	12%	- 18%
		proportional	proportional value from 3.200 K to 4.000 K	46	- 60	18%	- 24%
		step	4.000 K	61	- 75	24%	- 29%
		proportional	proportional value from 4.000 K to 5.000 K	76	- 90	30%	- 35%
		step	5.000 K	91	- 105	36%	- 41%
		proportional	proportional value from 5.000 K to 5.600 K	106	- 120	42%	- 47%
		step	5.600 K	121	- 135	47%	- 53%
		proportional	proportional value from 5.600 K to 7.000 K	136	- 150	53%	- 59%
		step	7.000 K	151	- 165	59%	- 65%
		proportional	proportional value from 7.000 K to 8.000 K	166	- 180	65%	- 71%
		step	8.000 K	181	- 195	71%	- 76%
		proportional	proportional value from 8.000 K to 9.000 K	196	- 210	77%	- 82%
		step	9.000 K	211	- 225	83%	- 88%
		proportional	proportional value from 9.000 K to 10.000 K	226	- 240	89%	- 94%
		step	10.000 K	241	- 255	95%	- 100%
10 <sup>1</sup>	saturation	proportional	the white tone fades to the tone built with the RGB channels	0	- 255	0%	- 100%
11	strobe	step	no effect	0	- 9	0%	- 4%
		proportional	variable speed strobing effect, from slow to fast	10	- 57	4%	- 22%
		step	stop strobe	58	- 59	23%	- 23%
		proportional	sequenced pulse effect, slow closing, fast opening (variable speed pulsing, from slow to fast)	60	- 108	24%	- 42%
		step	stop strobe	109	- 110	43%	- 43%
		proportional	sequenced pulse effect, fast closing, slow opening (variable speed pulsing, from slow to fast)	111	- 159	44%	- 62%
		step	stop strobe	160	- 161	63%	- 63%
		proportional	random strobe effect with variable speed from slow to fast	162	- 207	64%	- 81%
		step	stop strobe	208	- 209	82%	- 82%
		proportional	random strobe effect with variable speed from slow to fast	210	- 255	82%	- 100%

12	special functions	step	park	0	-	9	0%	-	4%
			no effect	10	-	22	4%	-	9%
			reset of all the motors, only once (usable only with <b>MOTORIZED ZOOM</b> version)	23	-	84	9%	-	33%
			fan at SILENT mode	85	-	96	33%	-	38%
			fan at STUDIO mode	97	-	108	38%	-	42%
			fan at AUTO mode	109	-	120	43%	-	47%
		proportional	fan speed control	121	-	133	47%	-	52%
		step	enables the automatic display blackout	134	-	185	53%	-	73%
			disables the automatic display blackout	186	-	199	73%	-	78%
			no effect	200	-	255	78%	-	100%
13 <sup>2</sup>	zoom	proportional	proportional control of zoom from narrow to wide beam	0	-	255	0%	-	100%

Note 1: increasing the value of the saturation DMX channel the white tone (channel 6) will fade to the color selected by the channel 3, 4 or 5

Note 2: channel 13 can be used only with **MOTORIZED ZOOM** version.

## 9.6 DMX Chart SUNRISE mode

channel	function	type of control	effect	decimal		percentage		
1	master dimmer	proportional	adjust luminous output intensity from 0 to 100%	0	- 255	0%	-	100%
2	dimmer fine	proportional	fine dimmer control 16 bit	0	- 255	0%	-	100%
3	proportional cct	proportional	2.700 K	0		0%		
			proportional value from 2.700 K to 4000 K	1	- 44	0%	-	17%
			4.000 K	45		18%		
			proportional value from 4.000 to 5.000 K	46	- 79	18%	-	31%
			5.000 K	80		31%		
			proportional value from 5.000 to 5.600 K	81	- 100	32%	-	39%
			5.600 K	101		40%		
			proportional value from 5.600 K to 10.000 K	102	- 254	40%	-	100%
			10.000 K	255		100%		
4	step cct	step	no effect	0	- 9	0%	-	4%
			2.700 K	10	- 36	4%	-	14%
			3.200 K	37	- 63	15%	-	25%
			4.000 K	64	- 90	25%	-	35%
			5.000 K	91	- 117	36%	-	46%
			5.600 K	118	- 144	46%	-	56%
			7.000 K	145	- 171	57%	-	67%
			8.000 K	172	- 198	67%	-	78%
			9.000 K	199	- 225	78%	-	88%
			10.000 K	226	- 255	89%	-	100%
5	green saturation	step	no effect	0		0%		
		proportional	exalts the green color in the mixing and diminishes the presence of magenta	1	- 127	0%	-	20%
		step	no effect	128		50%		
		proportional	diminishes the presence of green in the mixing and exalts the green color	129	- 254	51%	-	99%
		step	no effect	255		100%		
6	special functions	step	park	0	- 9	0%	-	4%
			no effect	10	- 22	4%	-	9%
			reset of all the motors, only once (usable only with <b>MOTORIZED ZOOM</b> version)	23	- 84	9%	-	33%
			fan at SILENT mode	85	- 96	33%	-	38%
			fan at STUDIO mode	97	- 108	38%	-	42%
			fan at AUTO mode	109	- 120	43%	-	47%
		proportional	fan speed control	121	- 133	47%	-	52%
		step	enables the automatic display blackout	134	- 185	53%	-	73%
			disables the automatic display blackout	186	- 199	73%	-	78%
			no effect	200	- 255	78%	-	100%
7 <sup>1</sup>	zoom	proportional	proportional control of zoom from narrow to wide beam	0	- 255	0%	-	100%

Note: If channels 3 and 4 are used simultaneously, channel 4 prevails.

Note 1: channel 7 can be used only with **MOTORIZED ZOOM** version.

# 10. DMX chart - Otello HD VariWhite +

## 10.1 DMX modes

DMX channels ↓	5 channels	2 channels	1 channel	Sunrise mode	Raw mode	2 (MK1) channels	6 channels
1	Master Dimmer	Master Dimmer	Master Dimmer	Master Dimmer	Warm White Led	Master Dimmer	Master Dimmer
2	Dimmer Fine	White Tone		Dimmer Fine	Warm White Led Fine	White Tone	Dimmer Fine
3	White Tone			Proportional White Tone	Cold White Led		White Tone
4	Strobe Effect			Step White Tone	Cold White Led Fine		White Temperature Fine
5	Special Function			Special Function			Strobe Effect
6							Special Function

## 10.2 DMX chart 5 channels (Manual / P.O. Zoom) 6 channels (Motorized Zoom)

channel	function	type of control	effect	decimal		percentage	
1	master dimmer	proportional	adjust luminous output intensity from 0 to 100%	0	- 255	0%	- 100%
2	dimmer fine	proportional	fine dimmer control 16 bit	0	- 255	0%	- 100%
3	white tone	step	2.700 K	0	- 6	0%	- 2%
		proportional	proportional value from 2.700 K to 3.200 K	7	- 33	3%	- 13%
		step	3.200 K	34	- 60	13%	- 24%
		proportional	proportional value from 3.200 K to 4.000 K	61	- 87	24%	- 34%
		step	4.000 K	88	- 114	35%	- 45%
		proportional	proportional value from 4.000 K to 5.000 K	115	- 141	45%	- 55%
		step	5.000 K	142	- 168	56%	- 66%
		proportional	proportional value from 5.000 K to 5.600 K	169	- 195	66%	- 76%
		step	5.600 K	196	- 222	77%	- 87%
		proportional	proportional value from 5.600 K to 6.500 K	223	- 249	87%	- 98%
		step	6.500 K	250	- 255	98%	- 100%
4	strobe effect	step	no effect	0	- 9	0%	- 4%
		proportional	variable speed strobing effect, from slow to fast	10	- 57	4%	- 22%
		step	stop strobe	58	- 59	23%	- 23%
		proportional	sequenced pulse effect, slow closing, fast opening (variable speed pulsing, from slow to fast)	60	- 108	24%	- 42%
		step	stop strobe	109	- 110	43%	- 43%
		proportional	sequenced pulse effect, fast closing, slow opening (variable speed pulsing, from slow to fast)	111	- 159	44%	- 62%
		step	stop strobe	160	- 161	63%	- 63%
		proportional	random strobe effect with variable speed from slow to fast	162	- 207	64%	- 81%
		step	stop strobe	208	- 209	82%	- 82%
		proportional	random strobe effect with variable speed from slow to fast (warm / cold white in alternation)	210	- 255	82%	- 100%
5	special functions	step	park	0	- 9	0%	- 4%
			no effect	10	- 22	4%	- 9%
			reset of all the motors, only once (usable only with <b>MOTORIZED ZOOM</b> version)	23	- 84	9%	- 33%
			fan at SILENT mode	85	- 96	33%	- 38%
			fan at STUDIO mode	97	- 108	38%	- 42%
			fan at AUTO mode	109	- 120	43%	- 47%
		proportional	fan speed control	121	- 133	47%	- 52%
		step	enables the automatic display blackout	134	- 185	53%	- 73%
			disables the automatic display blackout	186	- 199	73%	- 78%
			no effect	200	- 255	78%	- 100%
6 <sup>1</sup>	zoom	proportional	proportional control of zoom from narrow to wide beam	0	- 255	0%	- 100%

Note 1: channel 6 can be used only with **MOTORIZED ZOOM** version.



## 10.3 DMX chart 2 / 1 channels (Manual / P.O. Zoom) 4 channels (Motorized Zoom)

channel		function	type of control	effect	decimal		percentage	
1	1	master dimmer	proportional	adjust luminous output intensity from 0 to 100%	0	- 255	0%	- 100%
2	-	white tone	proportional	proportional value from 2.700 K to 6.500 K	0	- 255	0%	- 100%
3 <sup>1</sup>	-	special functions	step	park	0	- 9	0%	- 4%
				no effect	10	- 22	4%	- 9%
				reset of all the motors, only once (usable only with <b>MOTORIZED ZOOM</b> version)	23	- 84	9%	- 33%
				fan at SILENT mode	85	- 96	33%	- 38%
				fan at STUDIO mode	97	- 108	38%	- 42%
				fan at AUTO mode	109	- 120	43%	- 47%
			proportional	fan speed control	121	- 133	47%	- 52%
			step	enables the automatic display blackout	134	- 185	53%	- 73%
				disables the automatic display blackout	186	- 199	73%	- 78%
				no effect	200	- 255	78%	- 100%
4 <sup>1</sup>	-	zoom	proportional	proportional control of zoom from narrow to wide beam	0	- 255	0%	- 100%
Note 1: channel 3 and 6 can be used only with <b>MOTORIZED ZOOM</b> version.								

## 10.4 DMX chart Sunrise mode

channel	function	type of control	effect	decimal		percentage	
1	master dimmer	proportional	adjust luminous output intensity from 0 to 100%	0	- 255	0%	- 100%
2	dimmer fine	proportional	fine dimmer control 16 bit	0	- 255	0%	- 100%
3	proportional white tone	proportional	2.700 K	0		0%	
			proportional value from 2.700 K to 4.000 K	1	- 86	0%	- 34%
			4.000 K	87		34%	
			proportional value from 4.000 K to 5.000 K	88	- 152	35%	- 60%
			5.000 K	153		60%	
			proportional value from 5.000 K to 5.600 K	154	- 192	60%	- 75%
			5.600 K	193		76%	
			proportional value from 5.600 K to 6.000 K	194	- 254	76%	- 100%
			6.000 K	255		100%	
4	step white tone	step	no effect	0	- 9	0%	- 4%
			2.700 K	10	- 50	4%	- 20%
			3.200K	51	- 91	20%	- 36%
			4.000K	92	- 132	36%	- 52%
			5.000K	133	- 173	52%	- 68%
			5.600K	174	- 213	68%	- 84%
			6.000K	214	- 255	84%	- 100%
5 <sup>1</sup>	special functions	step	park	0	- 9	0%	- 4%
			no effect	10	- 22	4%	- 9%
			reset of all the motors, only once (usable only with <b>MOTORIZED ZOOM</b> version)	23	- 84	9%	- 33%
			fan at SILENT mode	85	- 96	33%	- 38%
			fan at STUDIO mode	97	- 108	38%	- 42%
			fan at AUTO mode	109	- 120	43%	- 47%
		proportional	fan speed control	121	- 133	47%	- 52%
		step	enables the automatic display blackout	134	- 185	53%	- 73%
			disables the automatic display blackout	186	- 199	73%	- 78%
			no effect	200	- 255	78%	- 100%
6 <sup>1</sup>	zoom	proportional	proportional control of zoom from narrow to wide beam	0	- 255	0%	- 100%

**Note:** If channels 3 and 4 are used simultaneously, channel 4 prevails.

Note 1: channel 5 and 6 can be used only with **MOTORIZED ZOOM** version.

## 10.5 DMX Chart Raw mode

channel	function	type of control	effect	decimal		percentage	
1	warm white led	proportional	adjust luminous output intensity of warm white led from 0 to 100%	0	- 255	0%	- 100%
2	warm white led fine	proportional	warm white led fine control 16 bit	0	- 255	0%	- 100%
3	cold white led	proportional	adjust luminous output intensity of cold white led from 0 to 100%	0	- 255	0%	- 100%
4	cold white led fine	proportional	cold white led fine control 16 bit	0	- 255	0%	- 100%
5 <sup>1</sup>	special functions	step	park	0	- 9	0%	- 4%
			no effect	10	- 22	4%	- 9%
			reset of all the motors, only once (usable only with <b>MOTORIZED ZOOM</b> version)	23	- 84	9%	- 33%
			fan at SILENT mode	85	- 96	33%	- 38%
			fan at STUDIO mode	97	- 108	38%	- 42%
			fan at AUTO mode	109	- 120	43%	- 47%
		proportional	fan speed control	121	- 133	47%	- 52%
		step	enables the automatic display blackout	134	- 185	53%	- 73%
			disables the automatic display blackout	186	- 199	73%	- 78%
			no effect	200	- 255	78%	- 100%
6 <sup>1</sup>	zoom	proportional	proportional control of zoom from narrow to wide beam	0	- 255	0%	- 100%

Note 1: channel 5 and 6 can be used only with **MOTORIZED ZOOM** version.

## 10.6 DMX Chart 2 channels (MK1)

channel	function	type of control	effect	decimal		percentage	
1	master dimmer	proportional	adjust luminous output intensity from 0 to 100%	0	- 255	0%	- 100%
2	white tone	step	3200 K	0	- 10	0%	- 4%
			2700 K	11	- 16	4%	- 6%
			2800 K	17	- 22	7%	- 9%
			2900 K	23	- 28	9%	- 11%
			3000 K	29	- 34	11%	- 13%
			3100 K	35	- 40	14%	- 16%
			3200 K	41	- 46	16%	- 18%
			3300 K	47	- 52	18%	- 20%
			3400 K	53	- 58	21%	- 23%
			3500 K	59	- 64	23%	- 25%
			3600 K	65	- 70	25%	- 27%
			3700 K	71	- 76	28%	- 30%
			3800 K	77	- 82	30%	- 32%
			3900 K	83	- 88	33%	- 35%
			4000 K	89	- 94	35%	- 37%
			4100 K	95	- 100	37%	- 39%
			4200 K	101	- 106	40%	- 42%
			4300 K	107	- 112	42%	- 44%
			4400 K	113	- 118	44%	- 46%
			4500 K	119	- 124	47%	- 49%
			4600 K	125	- 130	49%	- 51%
			4700 K	131	- 136	51%	- 53%
			4800 K	137	- 142	54%	- 56%
			4900 K	143	- 148	56%	- 58%
			5000 K	149	- 154	58%	- 60%
			5100 K	155	- 160	61%	- 63%
			5200 K	161	- 166	63%	- 65%
			5300 K	167	- 172	65%	- 67%
			5400 K	173	- 178	68%	- 70%
			5500 K	179	- 184	70%	- 72%
			5600 K	185	- 190	73%	- 75%
			5700 K	191	- 196	75%	- 77%
			5800 K	197	- 202	77%	- 79%
			5900 K	203	- 208	80%	- 82%
			6000 K	209	- 214	82%	- 84%
			6100 K	215	- 220	84%	- 86%
			6200 K	221	- 226	87%	- 89%
			6300 K	227	- 232	89%	- 91%
			6400 K	233	- 238	91%	- 93%
			6500 K	239	- 244	94%	- 96%
			5600 K	245	- 255	96%	- 100%

## 10.7 DMX Chart 6 channels

channel	function	type of control	effect	decimal		percentage	
1	master dimmer	proportional	adjust luminous output intensity from 0 to 100%	0	- 255	0%	- 100%
2	dimmer fine	proportional	fine dimmer control 16 bit	0	- 255	0%	- 100%
3	white tone	step	3200 K	0	- 10	0%	- 4%
			2700 K	11	- 16	4%	- 6%
			2800 K	17	- 22	7%	- 9%
			2900 K	23	- 28	9%	- 11%
			3000 K	29	- 34	11%	- 13%
			3100 K	35	- 40	14%	- 16%
			3200 K	41	- 46	16%	- 18%
			3300 K	47	- 52	18%	- 20%
			3400 K	53	- 58	21%	- 23%
			3500 K	59	- 64	23%	- 25%
			3600 K	65	- 70	25%	- 27%
			3700 K	71	- 76	28%	- 30%
			3800 K	77	- 82	30%	- 32%
			3900 K	83	- 88	33%	- 35%
			4000 K	89	- 94	35%	- 37%
			4100 K	95	- 100	37%	- 39%
			4200 K	101	- 106	40%	- 42%
			4300 K	107	- 112	42%	- 44%
			4400 K	113	- 118	44%	- 46%
			4500 K	119	- 124	47%	- 49%
			4600 K	125	- 130	49%	- 51%
			4700 K	131	- 136	51%	- 53%
			4800 K	137	- 142	54%	- 56%
			4900 K	143	- 148	56%	- 58%
			5000 K	149	- 154	58%	- 60%
			5100 K	155	- 160	61%	- 63%
			5200 K	161	- 166	63%	- 65%
			5300 K	167	- 172	65%	- 67%
			5400 K	173	- 178	68%	- 70%
			5500 K	179	- 184	70%	- 72%
			5600 K	185	- 190	73%	- 75%
			5700 K	191	- 196	75%	- 77%
			5800 K	197	- 202	77%	- 79%
			5900 K	203	- 208	80%	- 82%
			6000 K	209	- 214	82%	- 84%
			6100 K	215	- 220	84%	- 86%
			6200 K	221	- 226	87%	- 89%
			6300 K	227	- 232	89%	- 91%
			6400 K	233	- 238	91%	- 93%
			6500 K	239	- 244	94%	- 96%
			5600 K	245	- 255	96%	- 100%

4	white temperature fine	step	no effect	0		0%	
		proportional	fine white temperature control (from temperature selected to the previous step)	1	- 126	1%	- 49%
		step	no effect	127	- 128	50%	- 50%
		proportional	fine white temperature control (from temperature selected to the following step)	129	- 254	51%	- 99%
		step	no effect	255		100%	
5	strobe effect	step	no effect	0	- 9	0%	- 4%
		proportional	variable speed strobing effect, from slow to fast	10	- 57	4%	- 22%
		step	stop strobe	58	- 59	23%	- 23%
		proportional	sequenced pulse effect, slow closing, fast opening (variable speed pulsing, from slow to fast)	60	- 108	24%	- 42%
		step	stop strobe	109	- 110	43%	- 43%
		proportional	sequenced pulse effect, fast closing, slow opening (variable speed pulsing, from slow to fast)	111	- 159	44%	- 62%
		step	stop strobe	160	- 161	63%	- 63%
		proportional	random strobe effect with variable speed from slow to fast	162	- 207	64%	- 81%
		step	stop strobe	208	- 209	82%	- 82%
		proportional	random strobe effect with variable speed from slow to fast	210	- 255	82%	- 100%
6 <sup>1</sup>	special functions	step	park	0	- 9	0%	- 4%
			600 Hz	10	- 22	4%	- 9%
			no effect	23	- 84	9%	- 33%
			fan at SILENT mode	85	- 96	33%	- 38%
			fan at STUDIO mode	97	- 108	38%	- 42%
			fan at AUTO mode	109	- 120	43%	- 47%
		proportional	fan speed control	121	- 133	47%	- 52%
		step	enables the automatic display blackout	134	- 185	53%	- 73%
			disables the automatic display blackout	186	- 199	73%	- 78%
			LED control frequency tuning 1.500 Hz	200	- 205	78%	- 80%
			LED control frequency tuning 2.000 Hz	206	- 211	81%	- 83%
			LED control frequency tuning 5.000 Hz	212	- 217	83%	- 85%
			no effect	218	- 240	85%	- 94%
			LED control frequency tuning 20.000 Hz	241	- 255	95%	- 100%

Note 1: SPECIAL FUNCTIONS channel is not compatible with MK1 VERSION

# 11. Setup via RDM (DMX version)

## 11.1 Quick guide to menu

The **Otello HD +** required RDM (Remote Device Management) to set up fixtures. Using an RDM compliant DMX controller, you can communicate with all the fixtures on a data link without needing to connect to each fixture individually. RDM lets you set the DMX addresses of all the fixtures on the link, carry out fixture configuration and retrieve fixture data including details of any error that has been logged. If two or more identical fixtures are set up with the same DMX address and in the same DMX mode, they will receive the same instructions and behave identically. Setting up identical fixtures with the same address is a good tool for troubleshooting unexpected behavior and an easy way to achieve synchronized action. Setting DMX addresses via RDM involves running a scan to identify the fixtures that are present on the data link and then allocating addresses either automatically or manually.

To use RDM:

1. Obtain an RDM-compatible controller such as the RDM UPGRADE INTERFACE B (cod. AC10011A001) application running on a Windows PC.
2. Use a USB cable to connect the PC to a USB/DMX interface box
3. Connect the interface box to the data link.
4. Power the fixture on and carry out an RDM discovery / scan in your RDM-compatible controller.
5. You can then configure or retrieve data from the fixtures on the data link.

## 11.2 RDM Chart

PARAMETER	DESCRIPTION
DMX ADDRESS	Set DMX Address: (1-512)
CURVE	Set Dimming Curve: Linear, Logarithmic, Exponential, Halogen, Standard
FREQUENCY	Fixed at 20.000 Hz
LOCK PIN	Set Lock Pin
LOCK STATE	Set Screen Lock
FACTORY DEFAULT	Factory Reset
PERSONALITY	Set Personality <b>FullSpectrum version:</b> <b>Manual / PO zoom version:</b> 16 / 7 / 1 / Studio mode / RGB mode / fine RGB mode / Sunrise mode <b>Motorized zoom version:</b> 17 / 8 / Studio mode / RGB mode / fine RGB mode / Sunrise mode Set Personality <b>VariWhite version:</b> <b>Manual / PO zoom version:</b> 5 / 2 / 1 / Sunrise mode / Raw mode <b>Motorized zoom version:</b> 6 / 4 / Sunrise mode / Raw mode
SENSOR	Visualize Sensor
LED HOURS	Visualize Led Life Hours
DEVICE HOURS	Visualize Device Life Hours

## 11.3 RDM Error Chart

ERROR	DESCRIPTION	SOLUTION
MEMORY	Memory Reading Error	Perform A "Factory Reset"
HW MEMORY	Memory Hardware Error	Contact Coemar
DMX ADDR	DMX Addressing Error	The Personality Dimension Exceeds 512 Channels
NTC ERROR	Temperature Sensor Disconnected	Check Wiring NTC Led
SHORT NTC	Short-Circuited Temperature Sensor	Check Wiring NTC Led
OVER TEMP	Electronic Board Overtemperature	Ambient temperature too high, place the projector in an environment with temperature below 40°C



# 12. Display panel functions

## 12.1 Quick guide to menu

To access the functions menus just press the MENU button. Then press + or – buttons to scroll the pages and press the ENTER button to access to any other function.

By suitably using all the functions of Otello HD +, which can be activated through its display panel, it is possible to change some of the parameters and to add some functions. Changing the preset settings made by Coemar can vary the functions of the projector so that it will respond differently to the controller; therefore carefully read about the functions described here before carrying out any possible selection.

## 12.2 Rapid count

Through the display panel of Otello HD + it is possible to quickly change the various numbers displayed for the different functions in the following 3 manners:

1. Pressing the + or – buttons will cause the count to be quicker.
2. Pressing first + and then – and then holding them down simultaneously will cause the numbers to jump to the highest value.
3. Pressing first – and then + and then holding them down simultaneously will cause the number to jump to the lowest value.

## 12.3 Potentiometer Knob

In order to change quickly the CCT, the colors and many other settings, you can use the Potentiometer Knob; for example to change the CCT push the “MENU” button and use the Potentiometer Knob to scroll all the settings until you see the CCT displayed, push the Potentiometer Knob and a new screen will appear on the display where you can chose the CCT from 2.700 K to 20.000 K, once decided push again the Potentiometer Knob, now you can chose the light intensity from 255 to 0, by pushing another time the Potentiometer Knob.



This will be the first screen that will appear on the display once the projector is turned on. To change the DMX address press the “+” button and chose the DMX address desired.

N.B. If the projector is not connected to the DMX signal, A001 will blink intermittently


By pressing the “MENU” button you can enter the **Otello HD +** main menu.

N.B. Instead of use the “+”, “-” or “ENTER” buttons it is possible to use the Potentiometer knob by rotating it.

Rotate the Potentiometer knob in clockwise sense to replicate the “+” button, in counterclockwise sense to replicate the “-” button or push it to replicate the “ENTER” button.

# FullSpectrum Version

## 12.4 Main functions menu

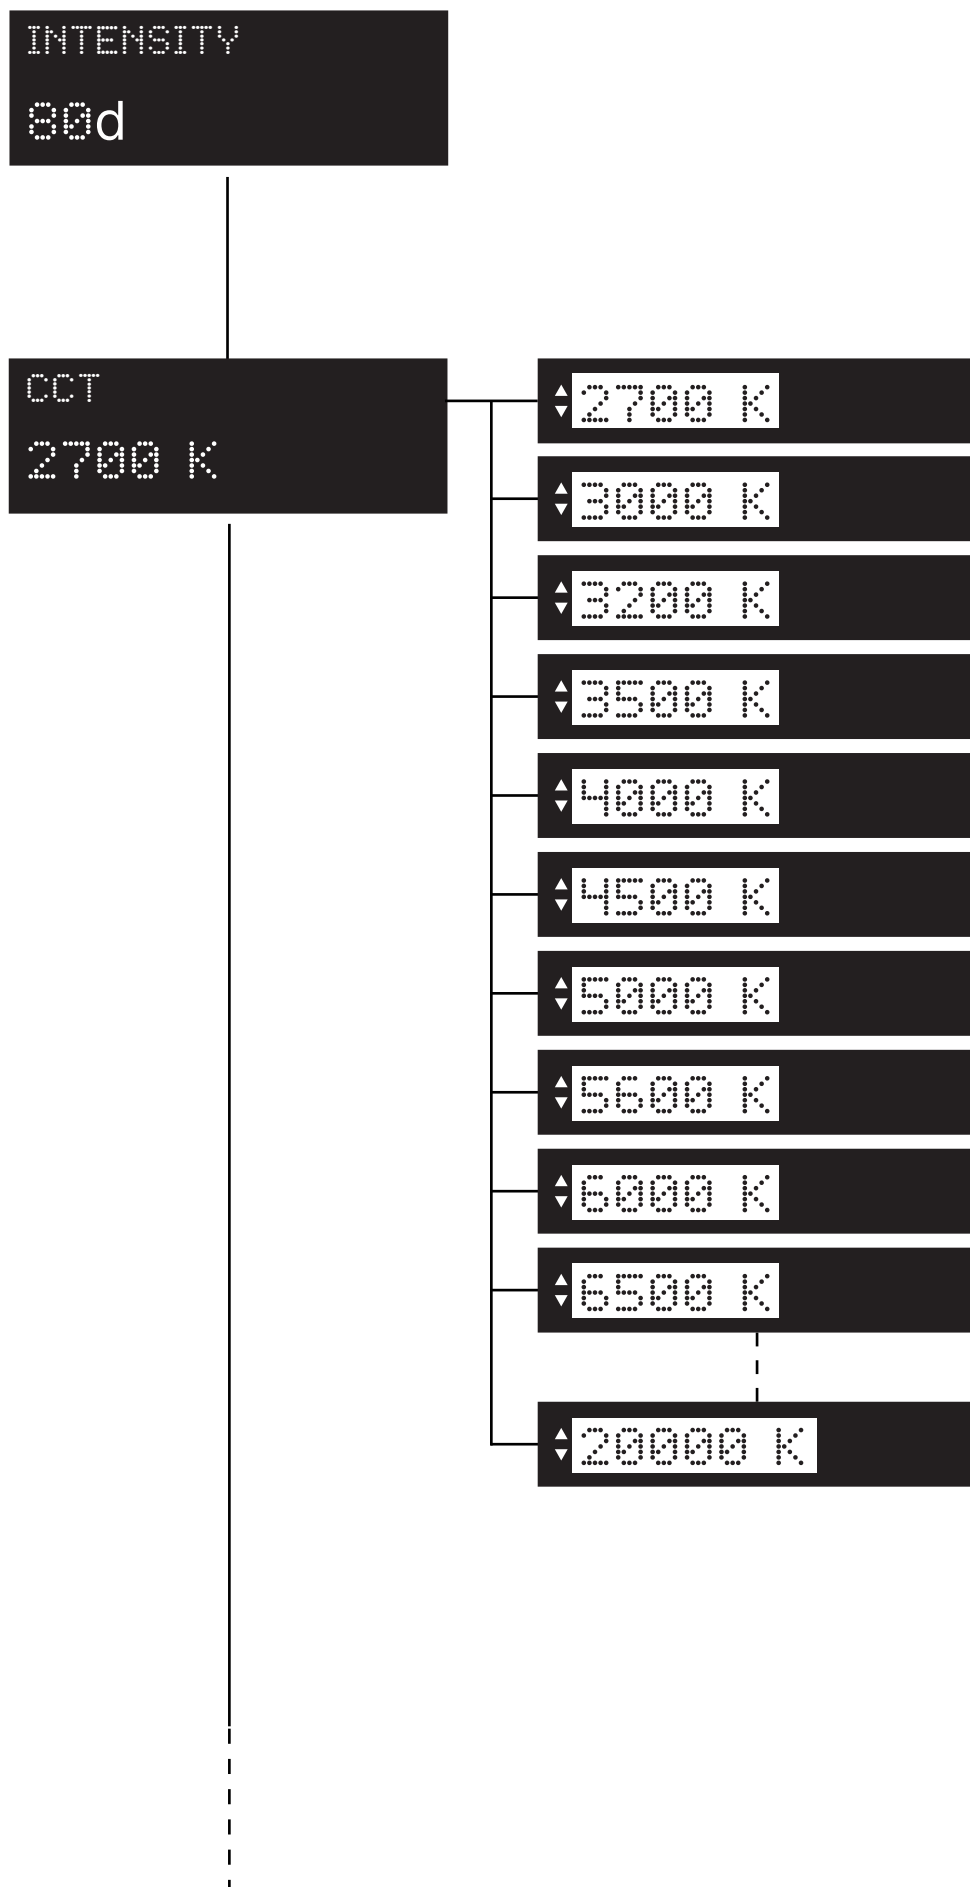


### INTENSITY:

Allows to adjust the luminous output intensity from 0 to 255 (d: decimal units).

### CCT:

This channel offers a preset library of various white CCT with a range that goes from 2.700 K and up to 20.000 K, manually selectable without the need of a DMX console.

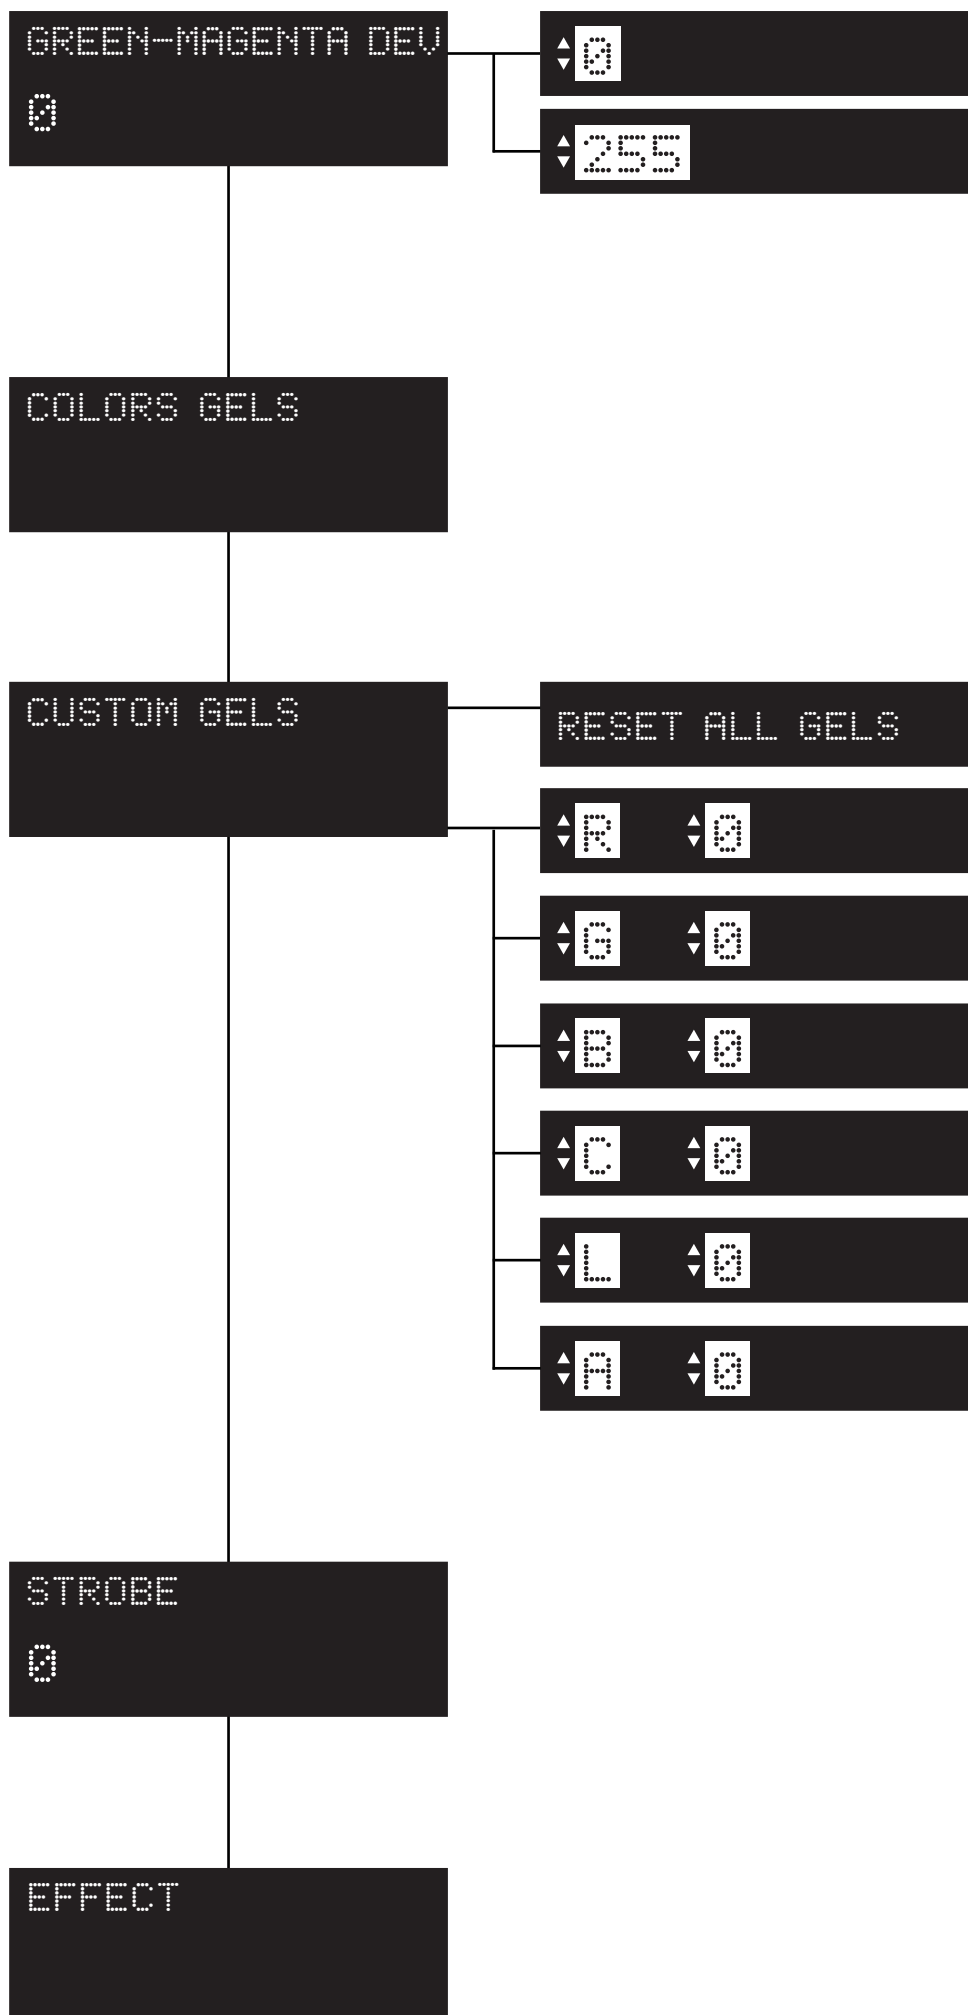


**GREEN-MAGENTA DEV:**  
Allows to adjust the luminous output intensity from 0 to 255 (d: decimal units).

**COLOR GELS:**  
All the gels presets will appear under this menu.

**CUSTOM GELS:**  
This settings allows you to create your own custom gel by mixing the six color at your will. Every color is adjustable from 0 to 255.

**STROBE:**  
Manually sets the strobe DMX channel.

**EFFECTS:**  
Effects settings (section **EFFECTS**).

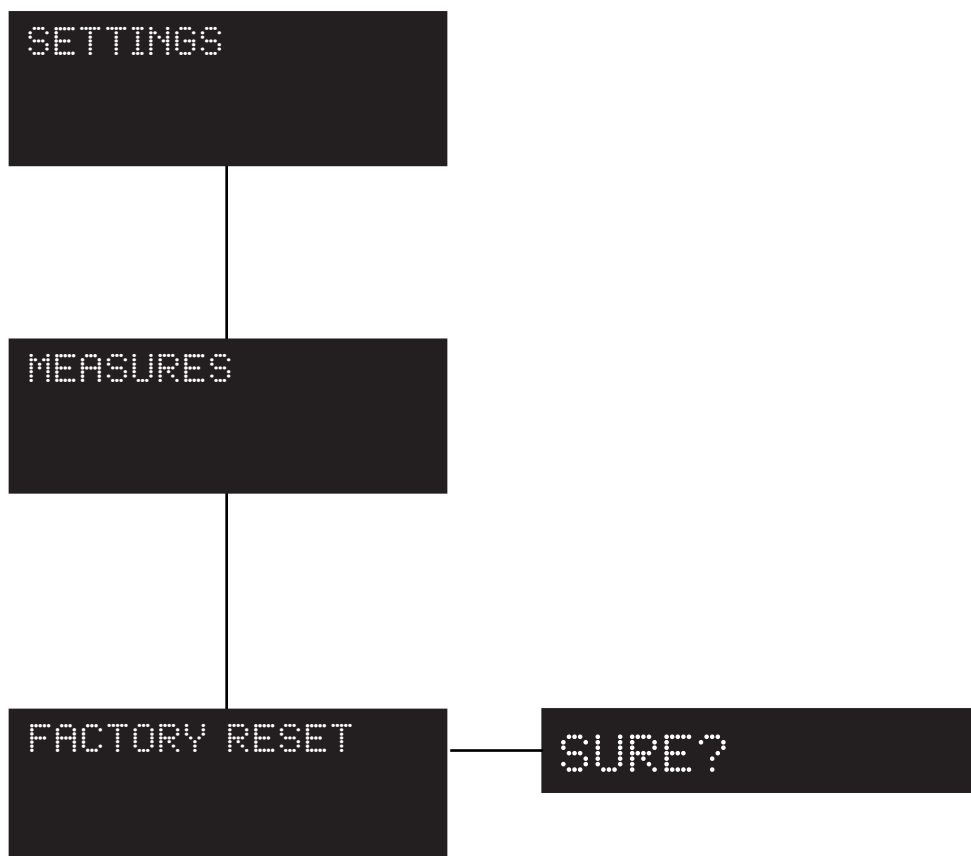**SETTINGS:**

Manually sets various settings of the projector (section **SETTINGS**).


**MEASURES:**

Check all the measures and product status (section **MEASURES**).

**FACTORY RESET:**

Allows to return to the factory settings:  
Light Intensity: 80  
DMX Channels: 16  
Fan: Auto mode.

## 12.5 Settings

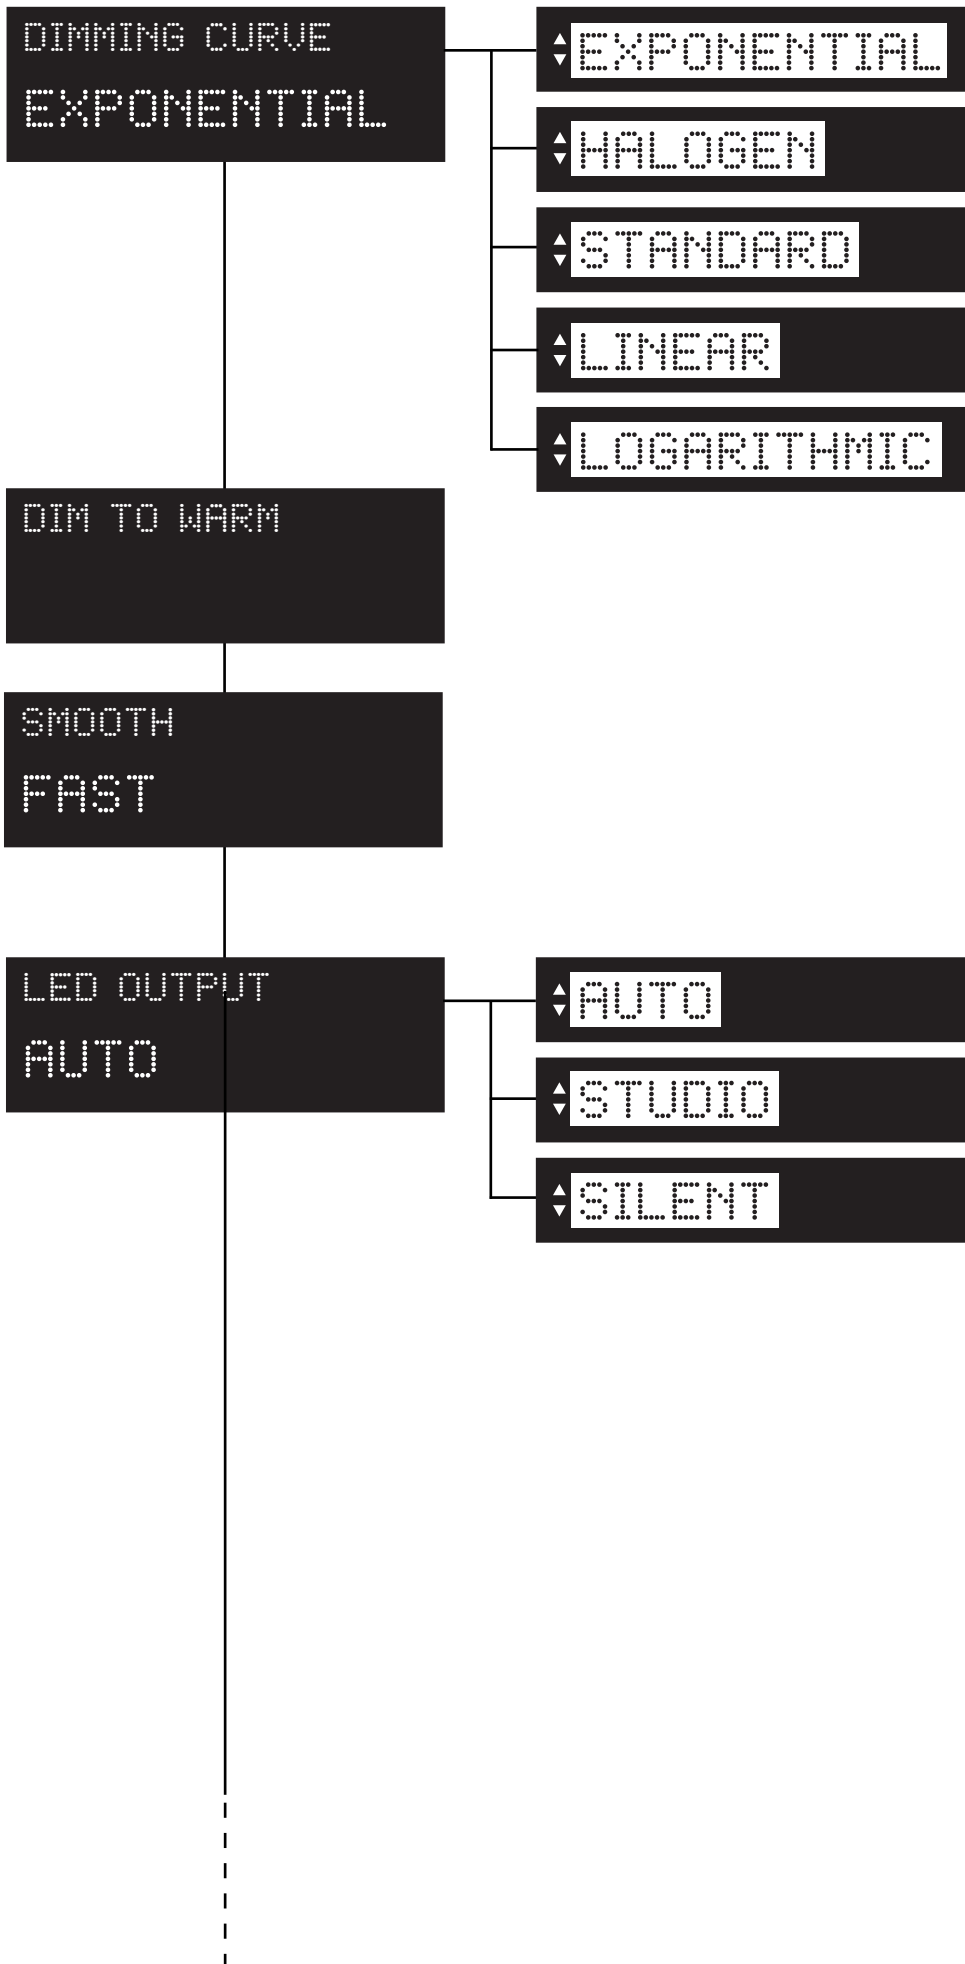

### DIMMING CURVE:

It allows the selection of different dimmer curves: exponential (default), halogen, standard, linear and logarithmic.

**DIM TO WARM:**

Inserts a softening of the dimmer dynamics and red shift. It works for all the CCTs.

**SMOOTH:**

Allows to change the speed of every dimming curve between **FAST** (standard), **SLOW**, **VERY SLOW**.


**LED OUTPUT:**

Manually sets the fan mode.

**AUTO (default):** Fan with automatic operating speed to guarantee maximum light output in all conditions of use, ideal for live events, exhibitions and architectural installations.

**STUDIO:** Fan at automatic operation speed with limited speed to guarantee silent operation of the product (moderately limited light output, will decrease in case of overheat) ideal for broadcast or theatre applications.

**SILENT:** This setting will keep the speed of the fan at the minimum level (moderately limited light output, will decrease in case of overheat) ideal for environments that require maximum silence.

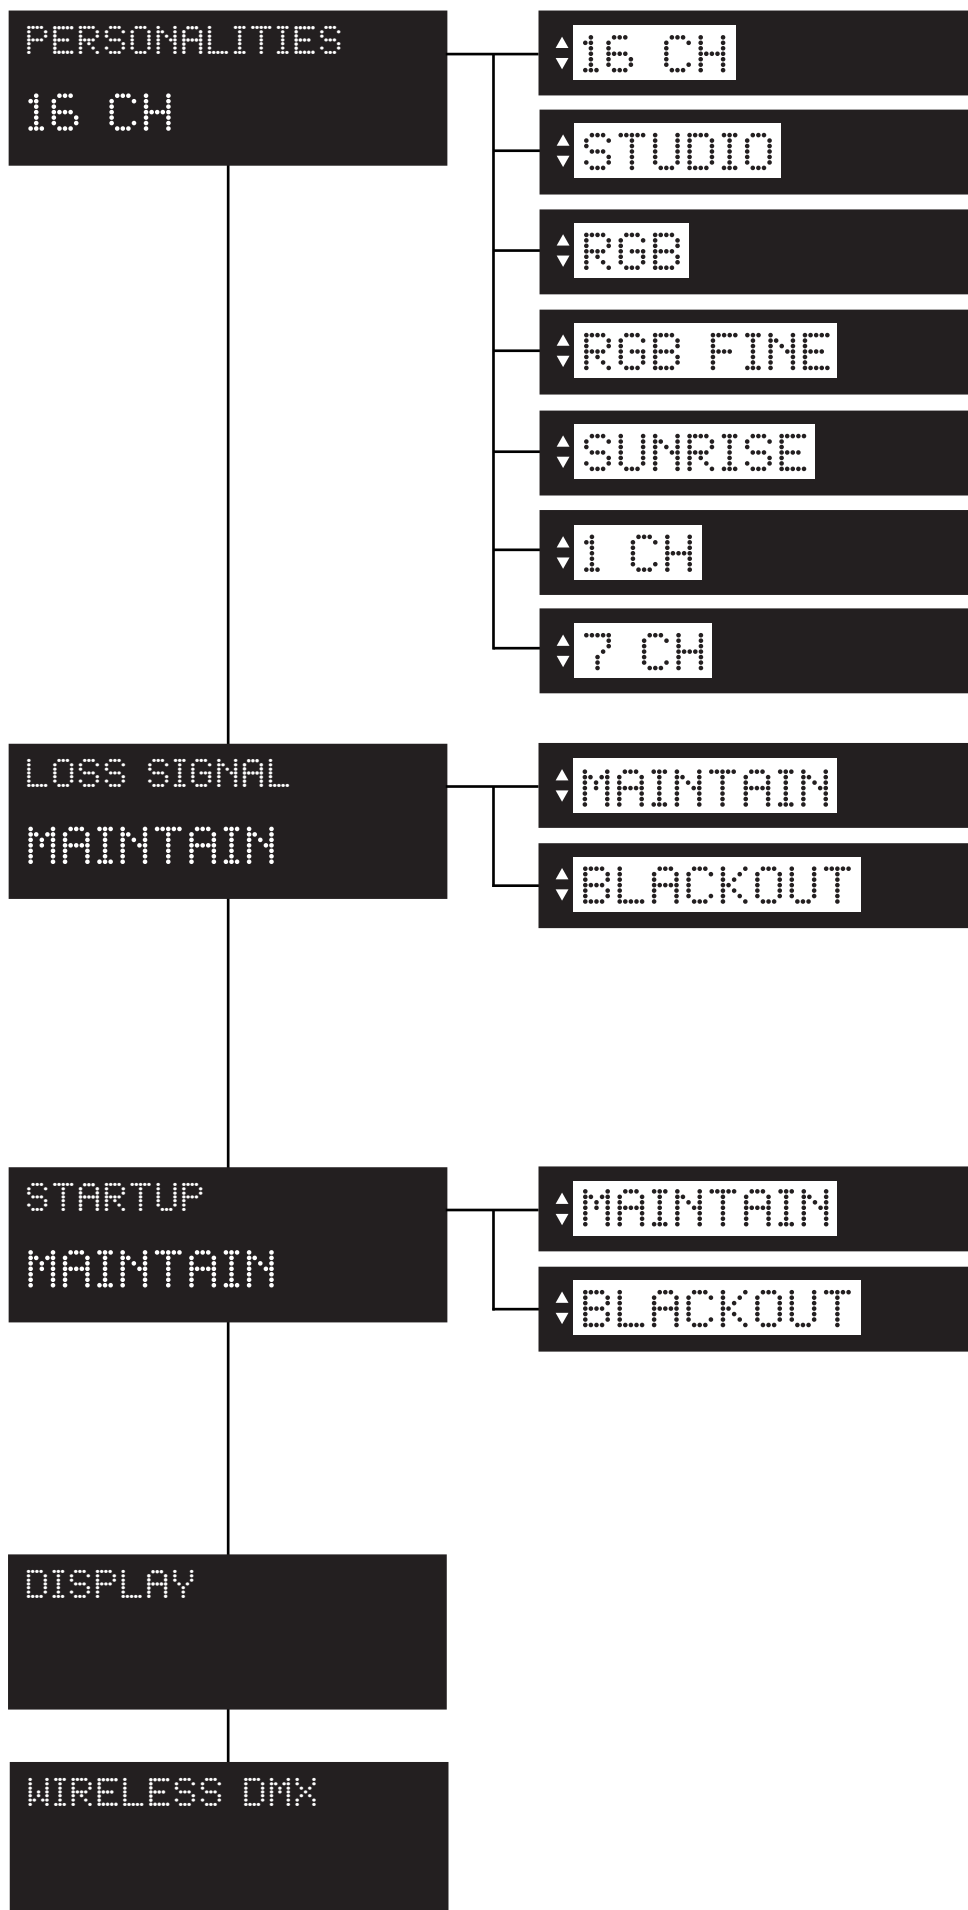

## PERSONALITIES:

It is possible to choose between **16**, **STUDIO**, **RGB**, **RGB FINE**, **SUNRISE**, **1** or **7** modalities, in which the projector will operate. N.B. This configuration represents the Manual Zoom version

## LOSS SIGNAL:

It is possible to choose between “maintain” (this function allows to keep the settings even in case of **LOSS SIGNAL**) and “blackout” (in case of **LOSS SIGNAL**, the projector will go into blackout).

## STARTUP:

It is possible to choose between “maintain” (this function allows to keep the settings in case of **STARTUP**) and “blackout” (in case of **STARTUP**, the projector will go into blackout).


## DISPLAY:

Display settings (section **11.6 DISPLAY**).

## WIRELESS DMX (OPTIONAL):

Wireless DMX settings (section **WIRELESS DMX**).

## 12.6 Display

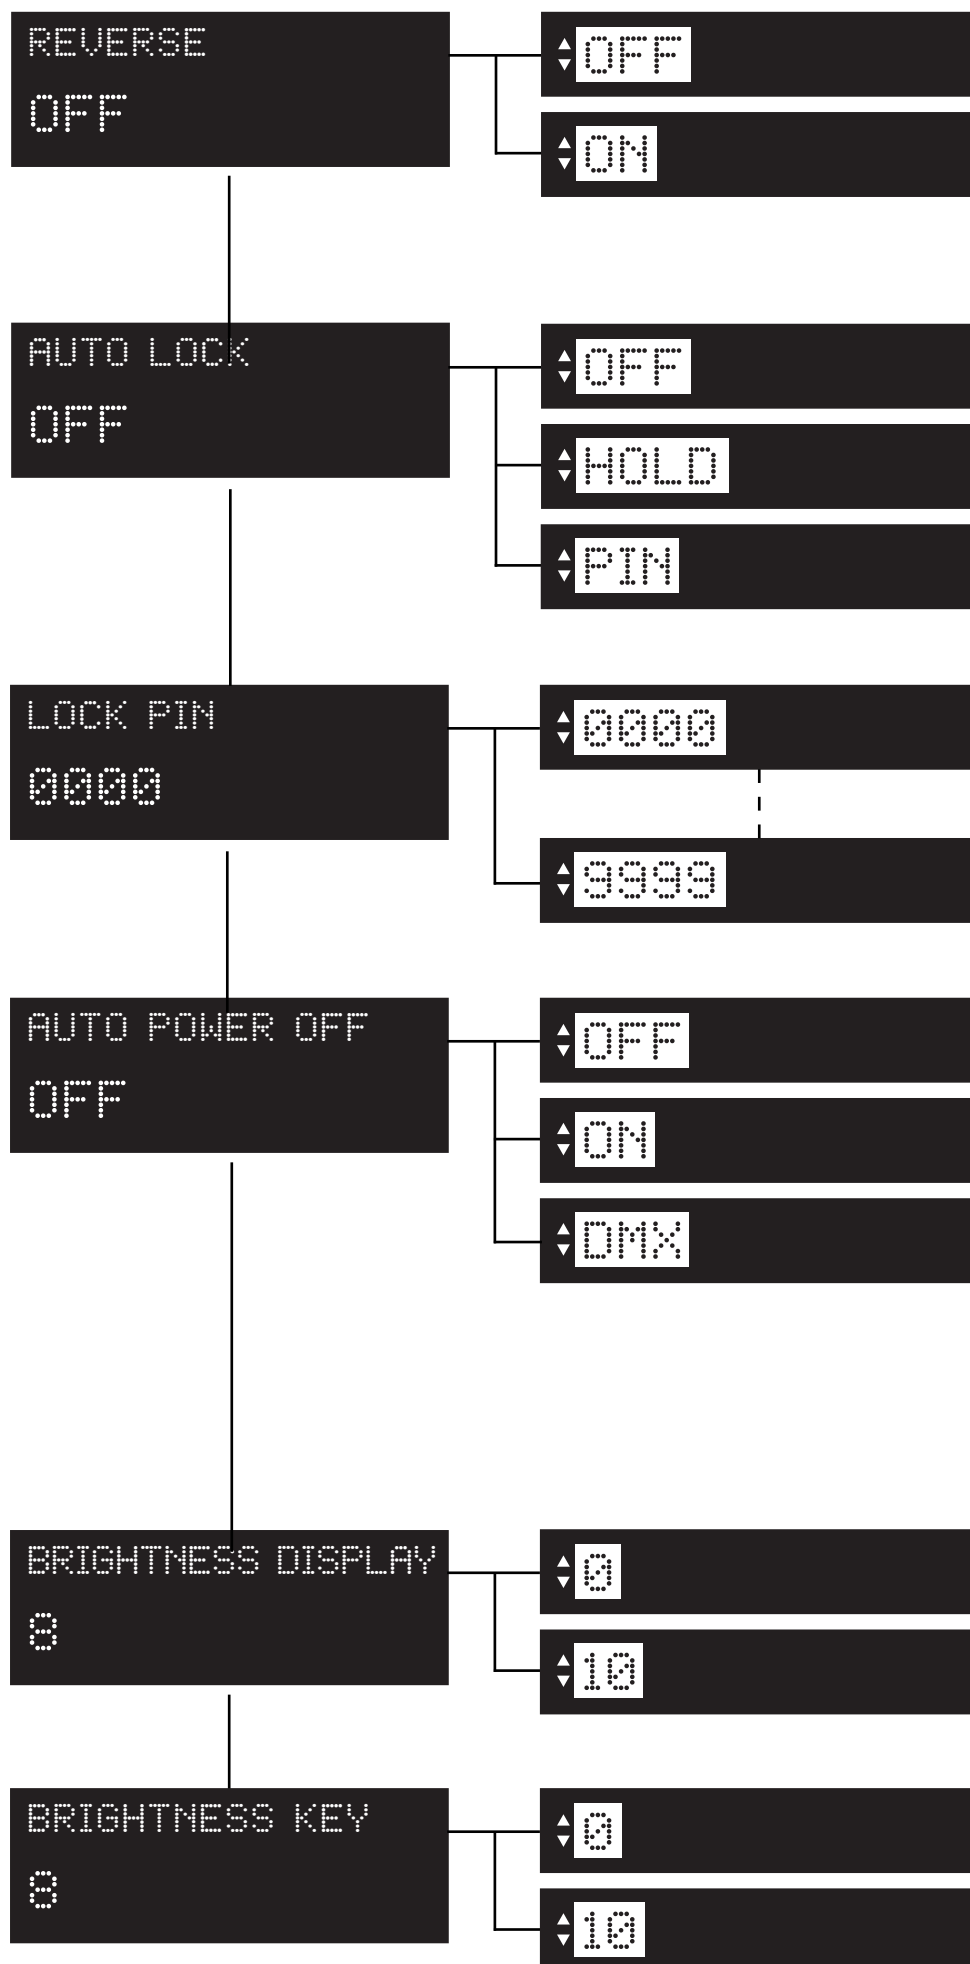

### REVERSE:

It allows to turn by 180° the reading of the display. When you chose "ON" wait the turn of the display without clicking.

### AUTO LOCK:

Locks the keys.

**OFF:** Auto Lock function in OFF

**HOLD:** Press any key for 3 seconds to unlock.

**PIN:** Use your personal lock pin to unlock.

### LOCK PIN:

Allows to set your personal lock pin (from 0000 to 9999).

### AUTO POWER OFF:

**OFF:** Auto Power OFF in OFF

**ON:** Causes the projector display to turn off after 30 seconds of inactivity.

**DMX:** Causes the projector display to turn off after 30 seconds of inactivity, but the display will turn automatically ON in case of signal loss


### BRIGHTNESS DISPLAY:

Allows to change the brightness of the display (from 0 to 10).

### BRIGHTNESS KEY:

Allows to change the brightness of the key (from 0 to 10).

## 12.7 Effects

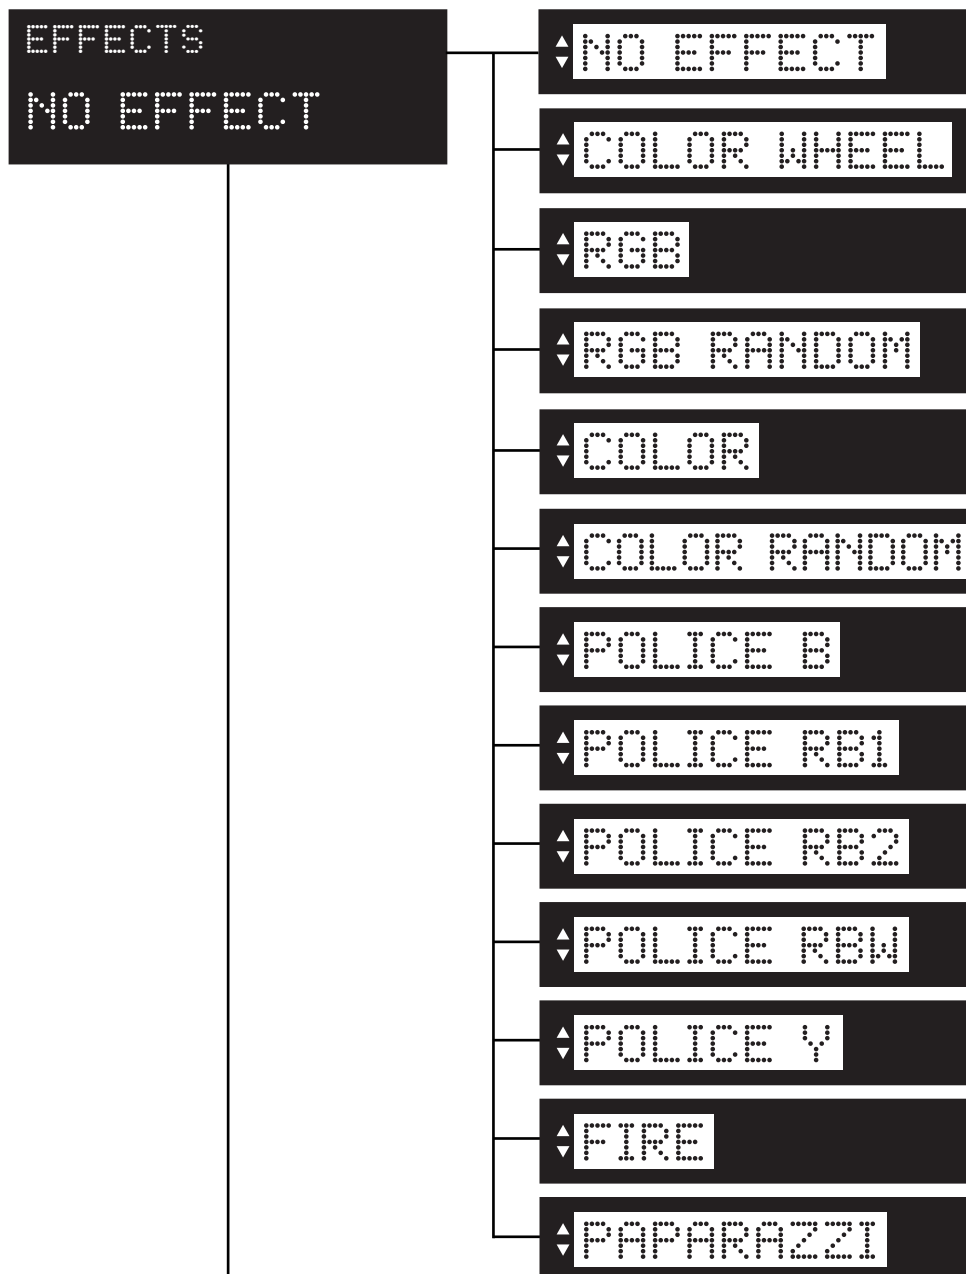

### EFFECTS:

It is possible to choose between the following effects:

#### **COLOR WHEEL:**

replicates the color wheel by applying a fade effect between colors (Red, Yellow, Green, Cyan, Blue, Magenta);

**RGB:** replicates the RGB colors in rotation following the order Red, Green, Blue;

**RGB RANDOM:** replicates randomly the RGB colors in rotation

**COLOR:** replicates the color wheel (Red, Yellow, Green, Cyan, Blue, Magenta);

**COLOR RANDOM:** replicates randomly the color wheel (Red, Yellow, Green, Cyan, Blue, Magenta);

**POLICE B:** replicates the police flashing lights (type B);

**POLICE RB1:** replicates the police flashing lights (type RB1);

**POLICE RB2:** replicates the police flashing lights (type RB2);


**POLICE RBW:** replicates the police flashing lights (type RBW);

**POLICE Y:** replicates the yellow police flashing lights;

**FIRE:** replicates the effect of fire from minimum (candle type) to maximum (blaze type);

**PAPARAZZI:** replicates the Paparazzi effect, a random flashing white light.



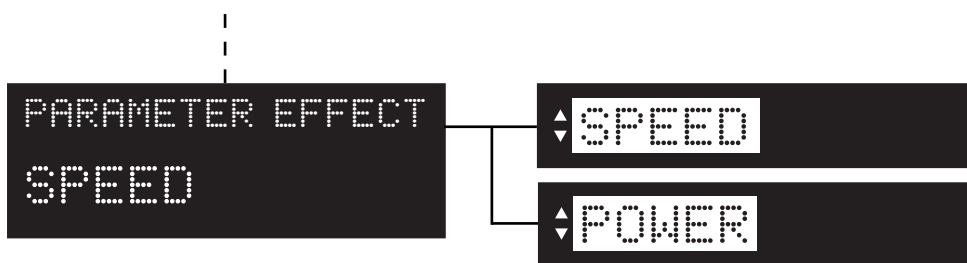

### PARAMETER EFFECT:

It allows to change the parameter of the effect selected.

**SPEED:** increases the speed of all effects;

**POWER:** increases the intensity of the effects listed below;

**N.B.** When you select a parameter effect it works for all effects and not individually.

Here below a chart where you can see which parameter works with the associated effect.

EFFECT \ PARAMETER	PARAMETER	
	Speed	Power
Color Wheel	●	/
RGB	●	/
RGB Random	●	/
Color	●	/
Color Random	●	/
Police B	/	/
Police RB1	/	/
Police RB2	/	/
Police RBW	/	/
Police Y	/	/
Fire	●	●
Paparazzi	●	/

## 12.8 Measures

```
TEMPERATURES
 ° F   MIN NOW MAX
LED:  -°C -°C -°C
BOARD: -°C -°C -°C
```

```
TEMP HISTORIES
 ° F   MIN NOW MAX
LED:  -°C -°C -°C
BOARD: -°C -°C -°C
```

```
DMX INPUT
1  0
```

```
▲ 1
▼
▲ 5
▼
```

```
DMX REFRESH RATE
0 HZ
```

```
FAN STATUS
      %    RPM
LED:  -    -
AUX:  -    -
```

### TEMPERATURES:

Shows the current temperature values of the fixture.

**LED:** shows the LED module temperature.

**BOARD:** shows the electronic mainboard temperature.

### TEMPERATURES HISTORIES:

Shows the history temperature of the fixture.

**LED:** shows the LED module temperature.

**BOARD:** shows the electronic mainboard temperature.

### DMX INPUT:


Shows the value of the DMX channels received by the fixture on every channel (from 1 to 5) that the fixture occupies on the line.

### DMX REFRESH RATE:

Shows the refresh rate of the DMX signal sent by the console.

### FAN STATUS:

Shows the percentage fan usage.

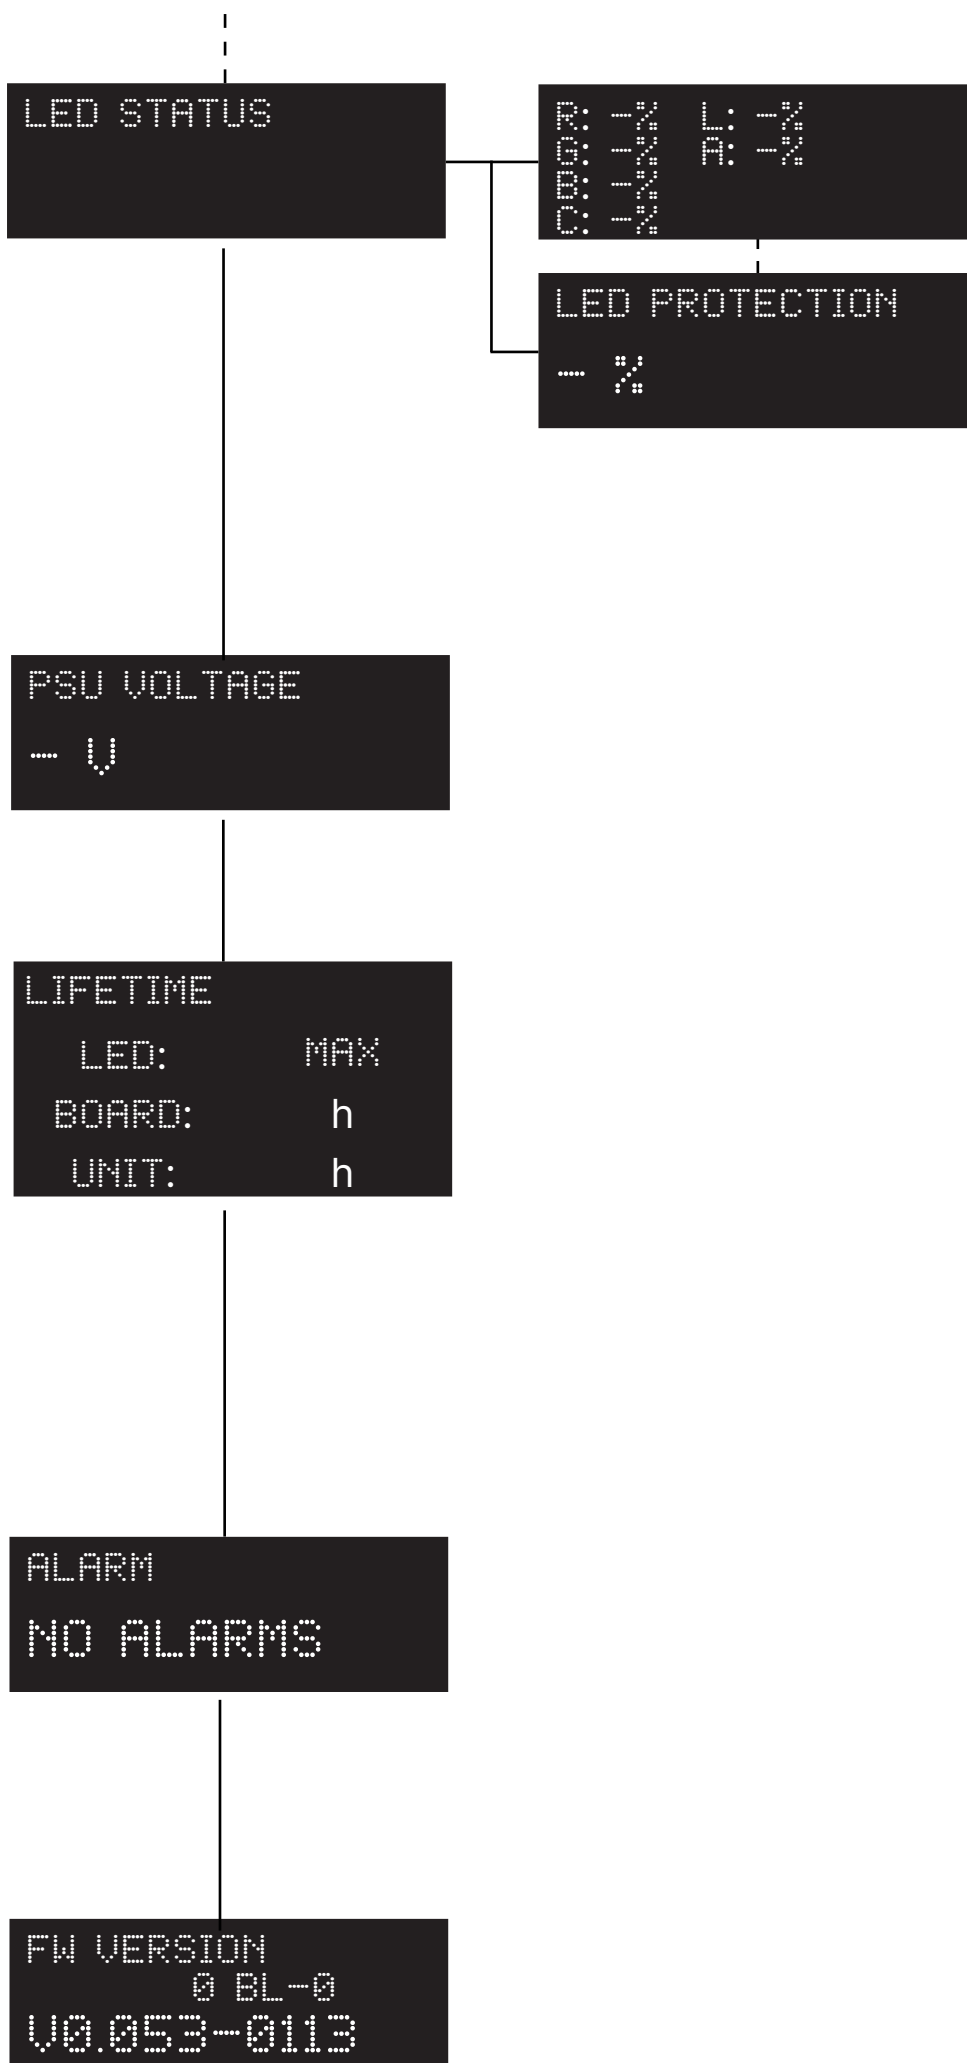

**LED STATUS:**  
Shows the percentage value of the LED status.

**LED PROTECTION:**  
Percentage of the maximum power in order to keep the projector in temperature.

**PSU VOLTAGE:**  
Shows the power supply voltage.


**LIFETIME:**  
Shows the hours counter of the fixture.  
**LED:** shows the overall LED module life when it is turned on.  
**BOARD:** shows the overall LED driver life currently installed.  
**UNIT LIFE:** shows the overall hours of life of the fixture when powered.  
**NOTE:** this items can be reset in case of LED module replacement.

**ALARM:**  
This menu eventually shows the alarm statuses if there is any (section **ERROR MESSAGES**).

**FIRMWARE VERSION:**  
Shows the firmware version currently installed in the fixture (as you can see in the example).


# VariWhite Version

## 12.9 Main functions menu

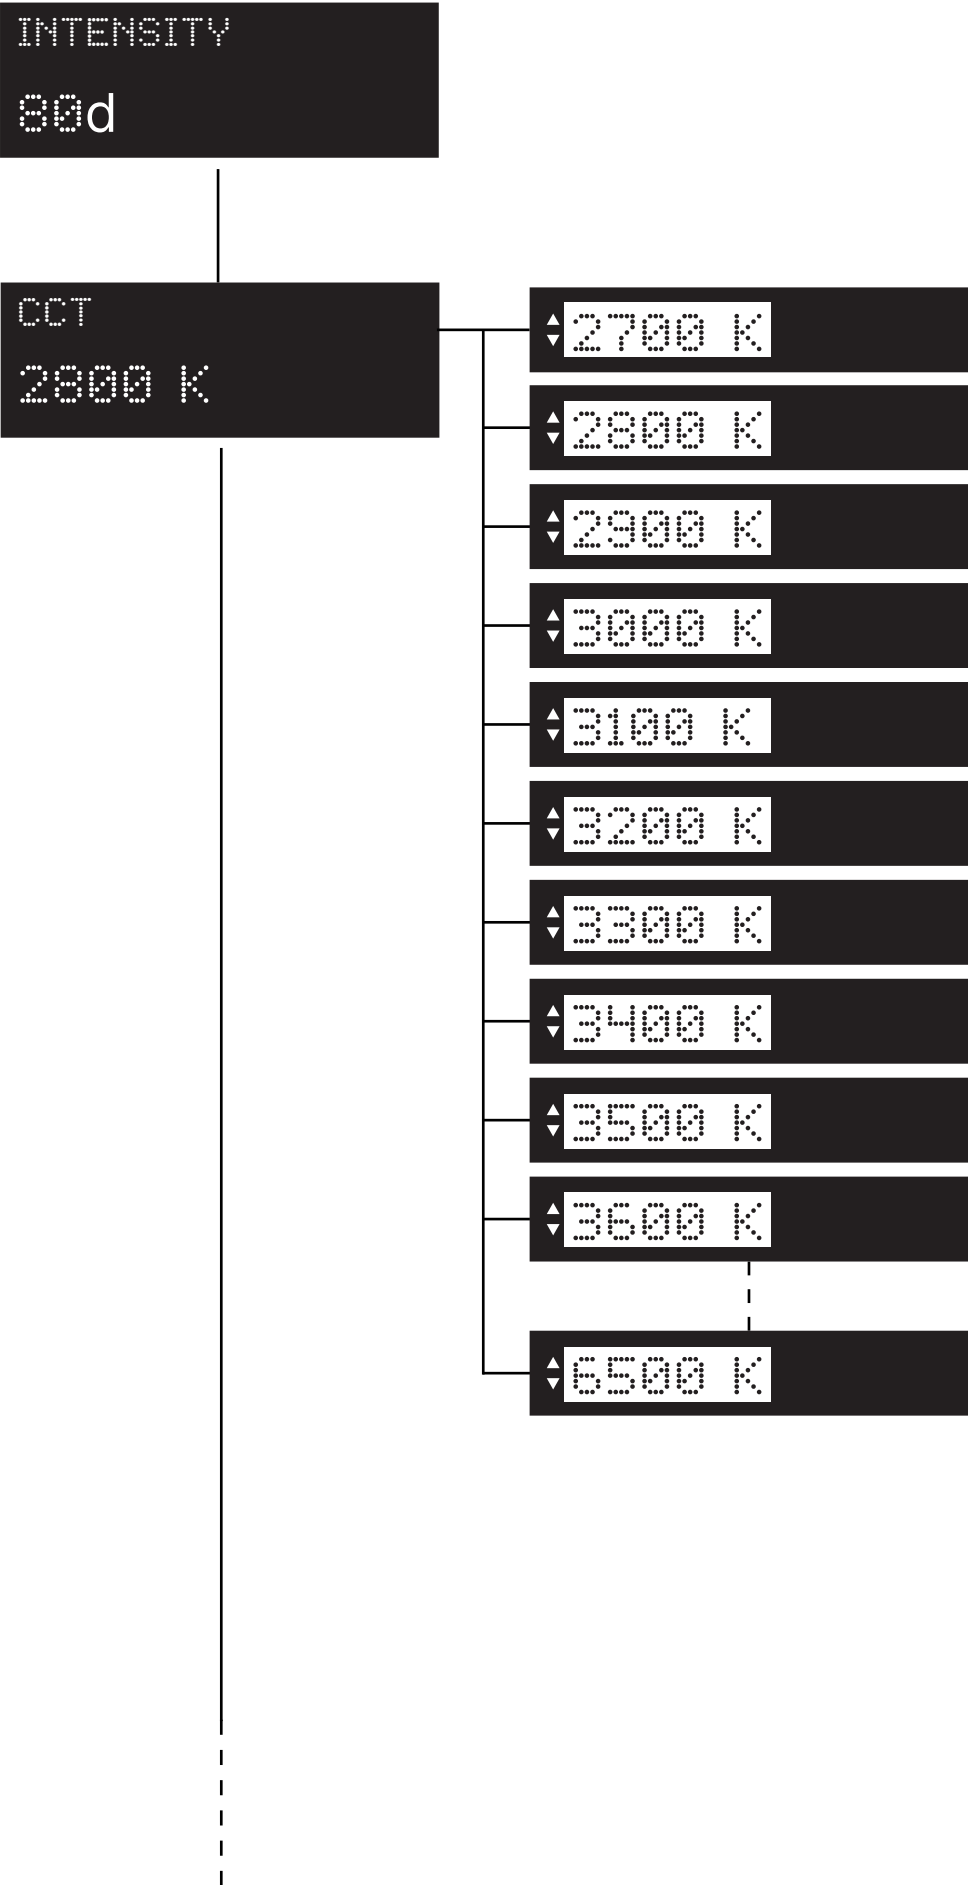

**INTENSITY:**  
Allows to adjust the luminous output intensity from 0 to 255 (d: decimal units).

**CCT:**  
This channel offers a preset library of various white CCT with a range that goes from 2.700 K and up to 6.500 K, manually selectable without the need of a DMX console.

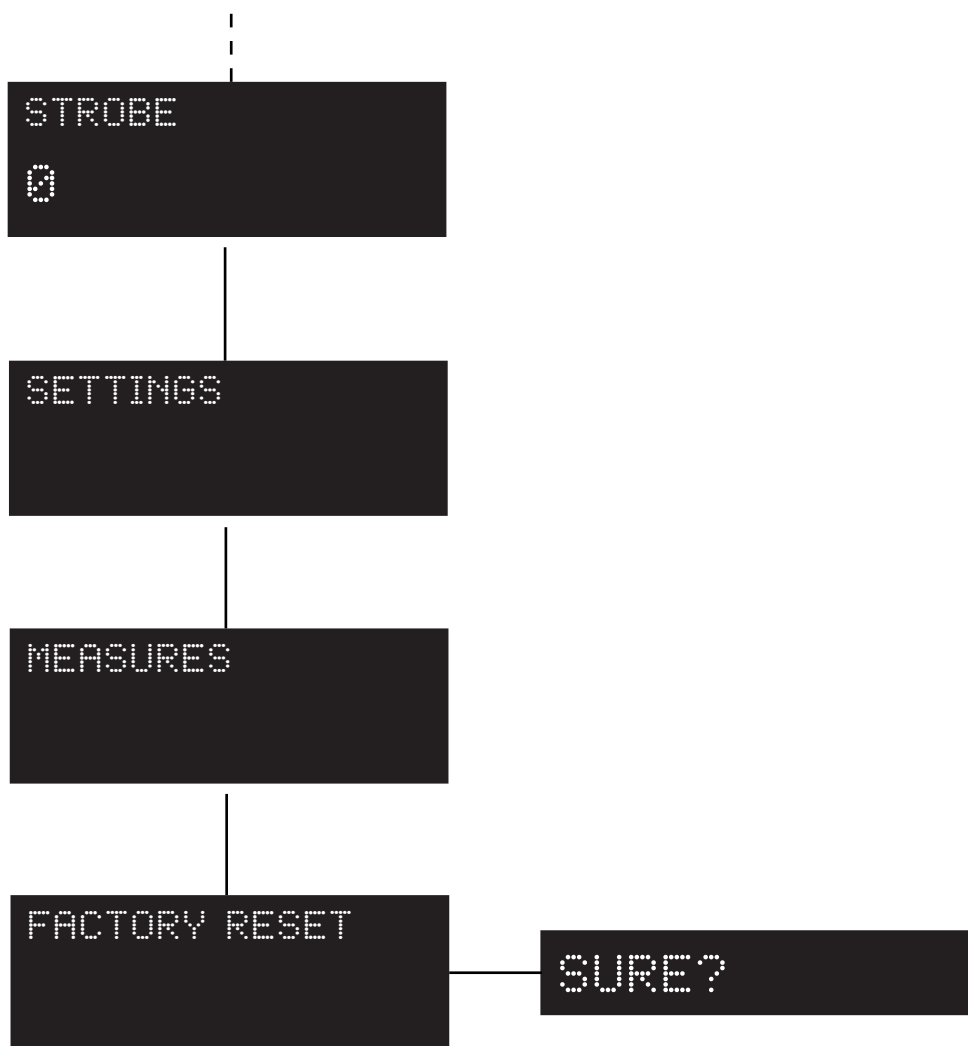

**STROBE:**

Manually sets the strobe DMX channel.

**SETTINGS:**

Manually sets various settings of the projector (section **SETTINGS**).


**MEASURES:**

Check all the measures and product status (section **MEASURES**).

**FACTORY RESET:**

Allows to return to the factory settings:  
Light Intensity: 80  
CCT: 4.400 K  
DMX Channels: 5  
Fan: Auto mode  
Strobe: 0

## 12.10 Settings

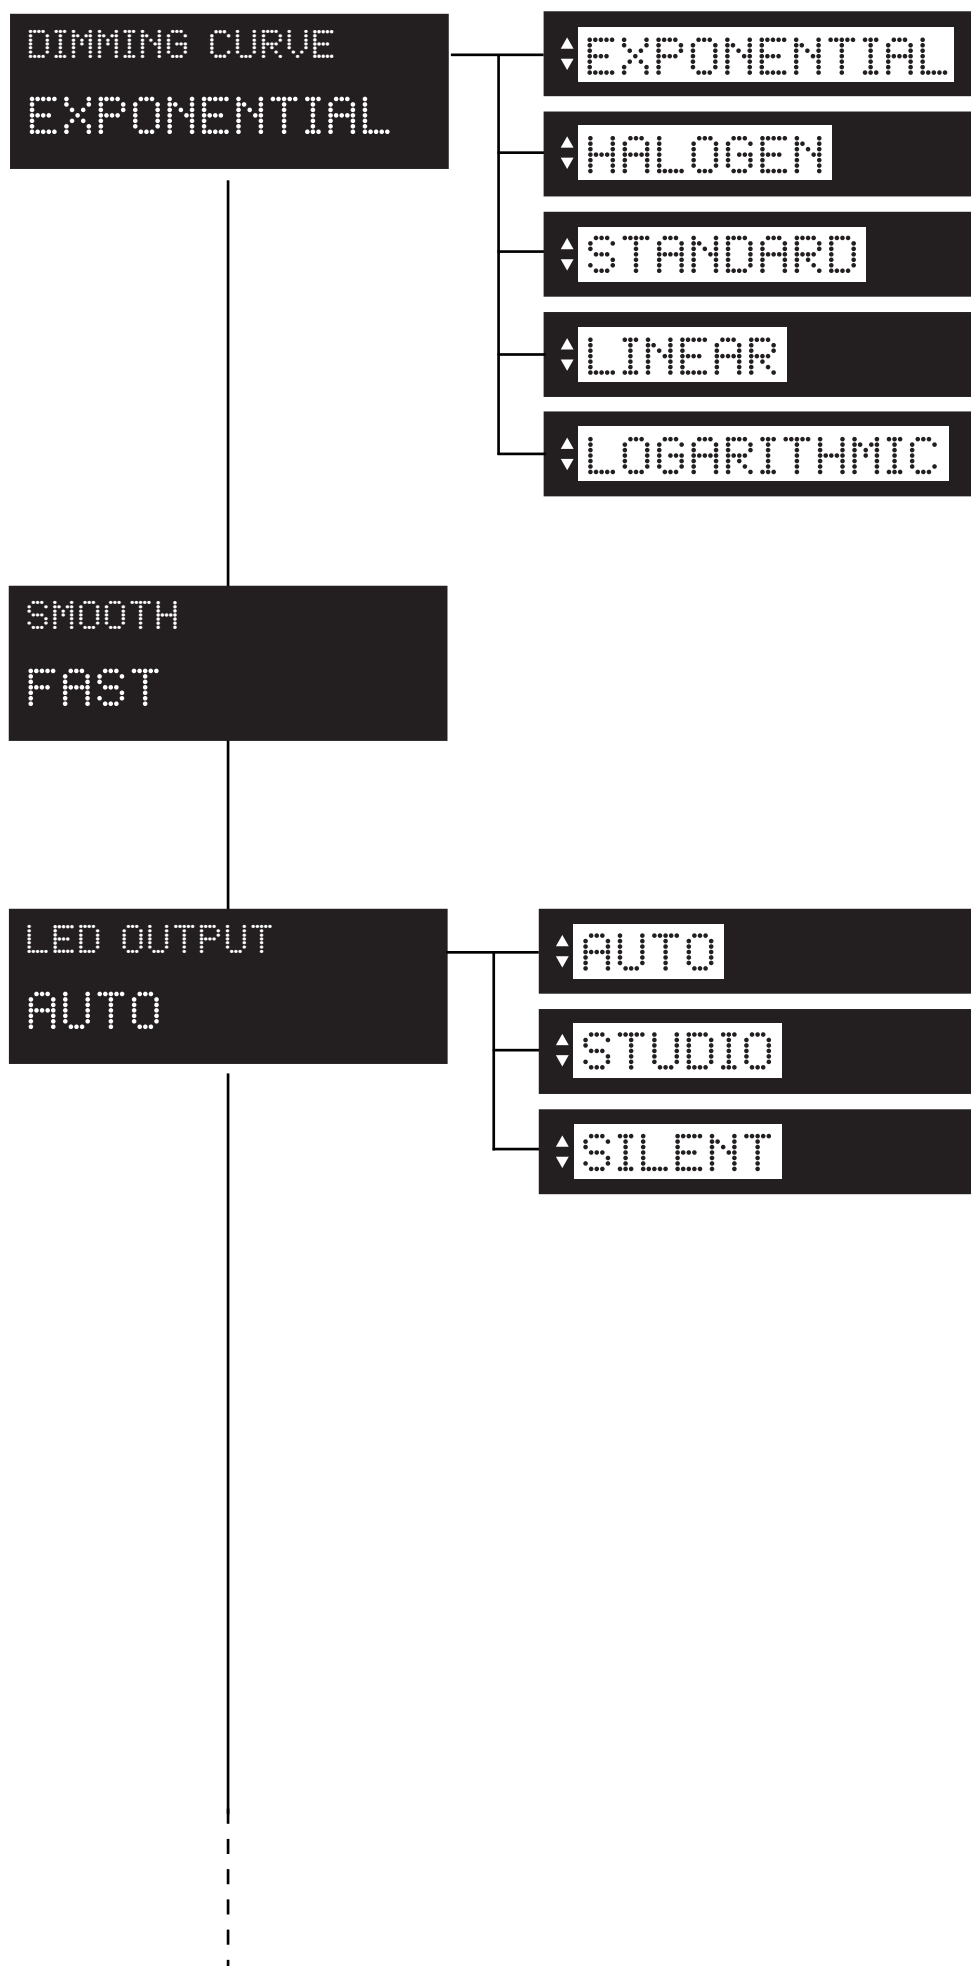

### DIMMING CURVE:

It allows the selection of different dimmer curves: exponential (default), halogen, standard, linear and logarithmic.

### SMOOTH:


Allows to change the speed of every dimming curve between **FAST** (standard), **SLOW**, **VERY SLOW**.

### LED OUTPUT:

Manually sets the fan mode. **AUTO (default):** Fan with automatic operating speed to guarantee maximum light output in all conditions of use, ideal for live events, exhibitions and architectural installations.

**STUDIO:** Fan at automatic operation speed with limited speed to guarantee silent operation of the product (moderately limited light output, will decrease in case of overheating) ideal for broadcast or theatre applications.

**SILENT:** This setting will keep the speed of the fan at the minimum level (moderately limited light output, will decrease in case of overheating) ideal for environments that require maximum silence.

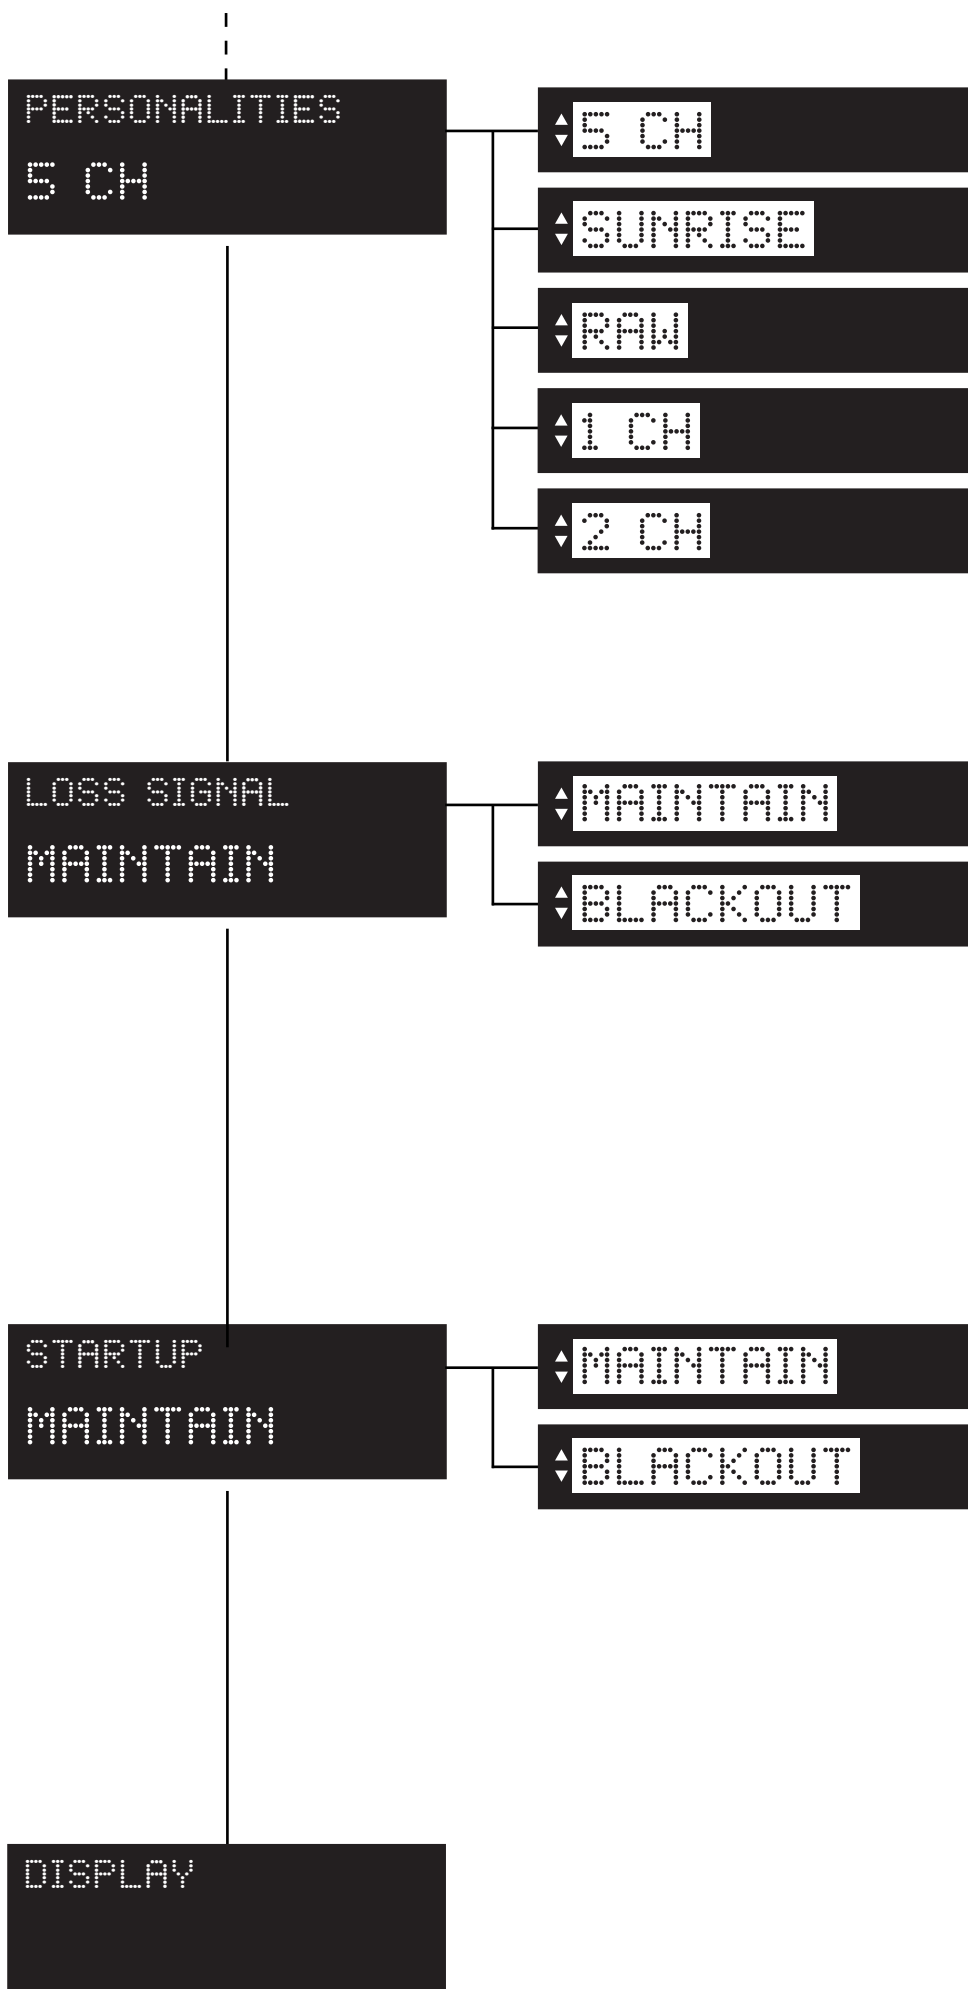

### PERSONALITIES:

It is possible to choose between **5**, **SUNRISE**, **RAW**, **1** or **2** modalities, in which the projector will operate.

N.B. This configuration represents the Manual Zoom version

### LOSS SIGNAL:

It is possible to choose between "maintain" (this function allows to keep the settings even in case of LOSS SIGNAL) and "blackout" (in case of LOSS SIGNAL, the projector will go into blackout).


### STARTUP:

It is possible to choose between "maintain" (this function allows to keep the settings in case of STARTUP) and "blackout" (in case of STARTUP, the projector will go into blackout).

### DISPLAY:

Display settings  
(section **DISPLAY**)

## 12.11 Display

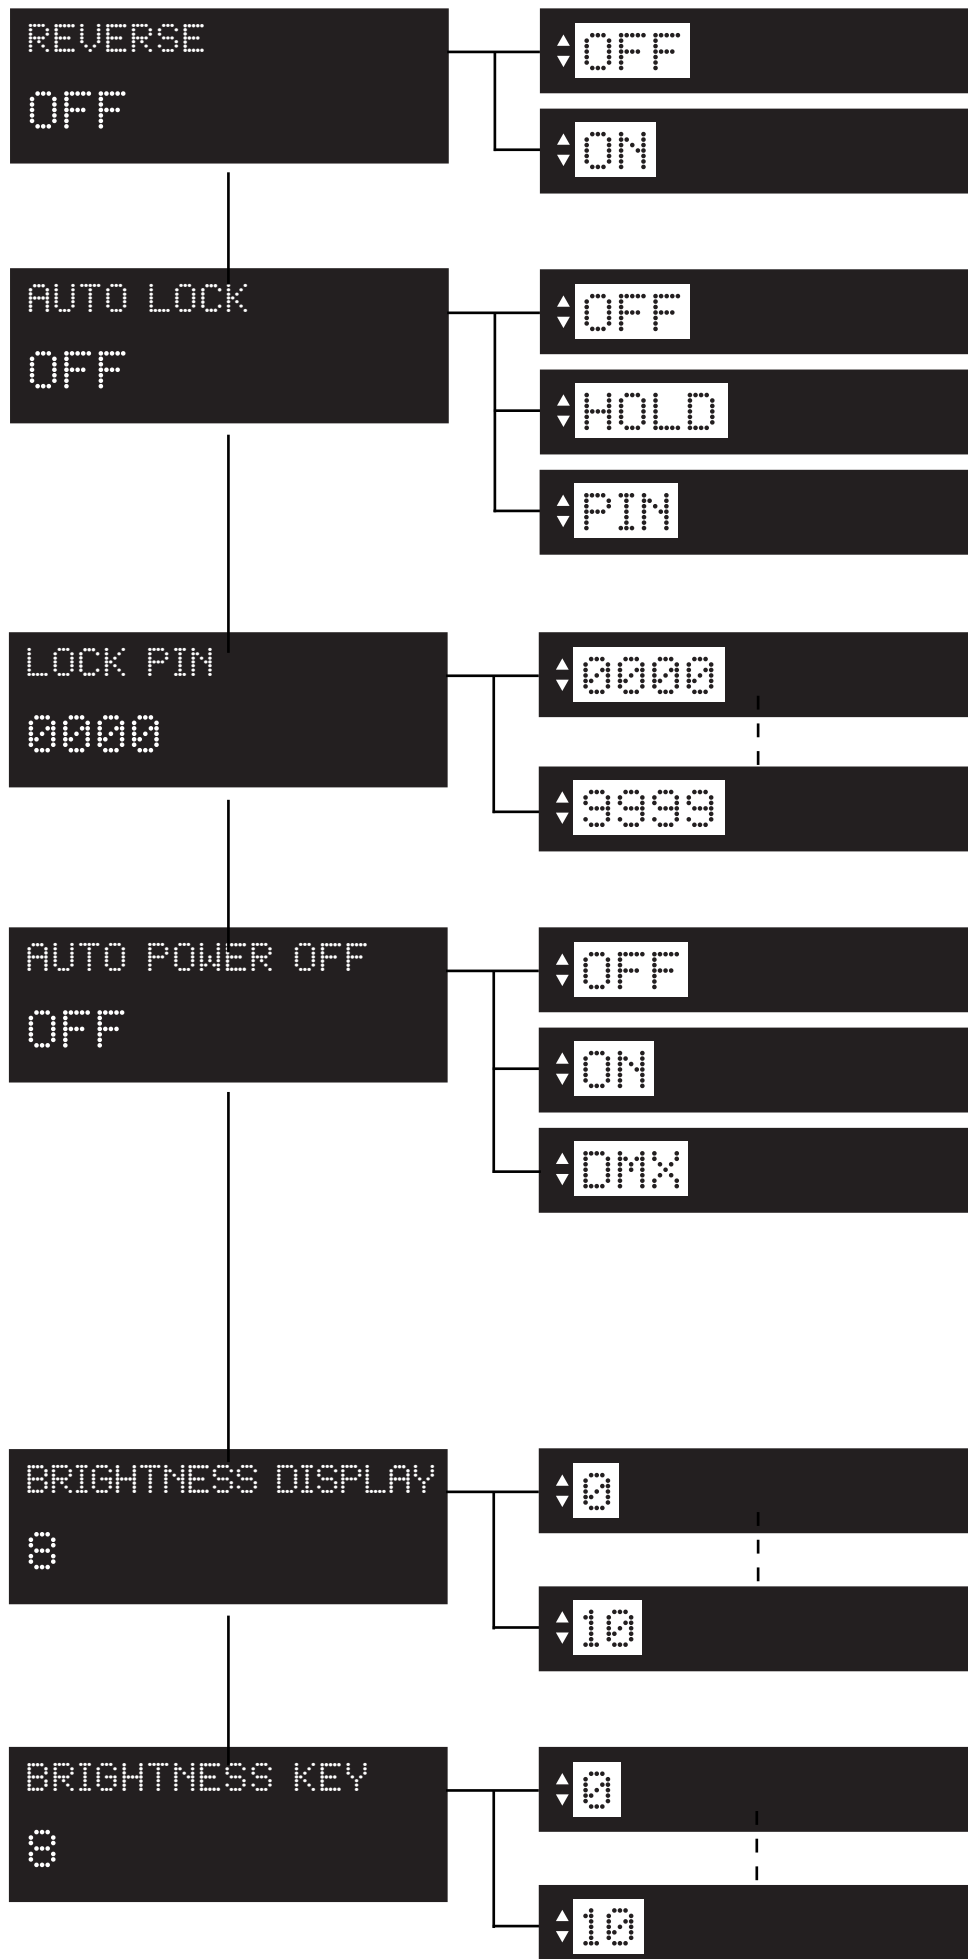

### REVERSE:

It allows to turn by 180° the reading of the display. When you chose "ON" wait the turn of the display without clicking.

### AUTO LOCK:

Locks the keys.

**OFF:** Auto Lock function in OFF

**HOLD:** Press any key for 3 seconds to unlock.

**PIN:** Use your personal lock pin to unlock.

### LOCK PIN:

Allows to set your personal lock pin (from 0000 to 9999).

### AUTO POWER OFF:

**OFF:** Auto Power OFF in OFF

**ON:** Causes the projector display to turn off after 30 seconds of inactivity.

**DMX:** Causes the projector display to turn off after 30 seconds of inactivity, but the display will turn automatically ON in case of signal loss

### BRIGHTNESS DISPLAY:

Allows to change the brightness of the display (from 0 to 10).

### BRIGHTNESS KEY:

Allows to change the brightness of the key (from 0 to 10).



## 12.12 Measures

```
TEMPERATURES
 ° F   MIN NOW MAX
LED:  -°C -°C -°C
BOARD: -°C -°C -°C
```

```
TEMP HISTORIES
 ° F   MIN NOW MAX
LED:  -°C -°C -°C
BOARD: -°C -°C -°C
```

```
DMX INPUT
1  0
```

```
▲ 1
▼
▲ 5
▼
```

```
DMX REFRESH RATE
0 HZ
```

```
FAN STATUS
      %    RPM
LED:  -    -
AUX:  -    -
```

### TEMPERATURES:

Shows the current temperature values of the fixture.

**LED:** shows the LED module temperature.

**BOARD:** shows the electronic mainboard temperature.

### TEMPERATURES HISTORIES:

Shows the history temperature of the fixture.

**LED:** shows the LED module temperature.

**BOARD:** shows the electronic mainboard temperature.

### DMX INPUT:


Shows the value of the DMX channels received by the fixture on every channel (from 1 to 5) that the fixture occupies on the line.

### DMX REFRESH RATE:

Shows the refresh rate of the DMX signal sent by the console.

### FAN STATUS:

Shows the percentage fan usage.

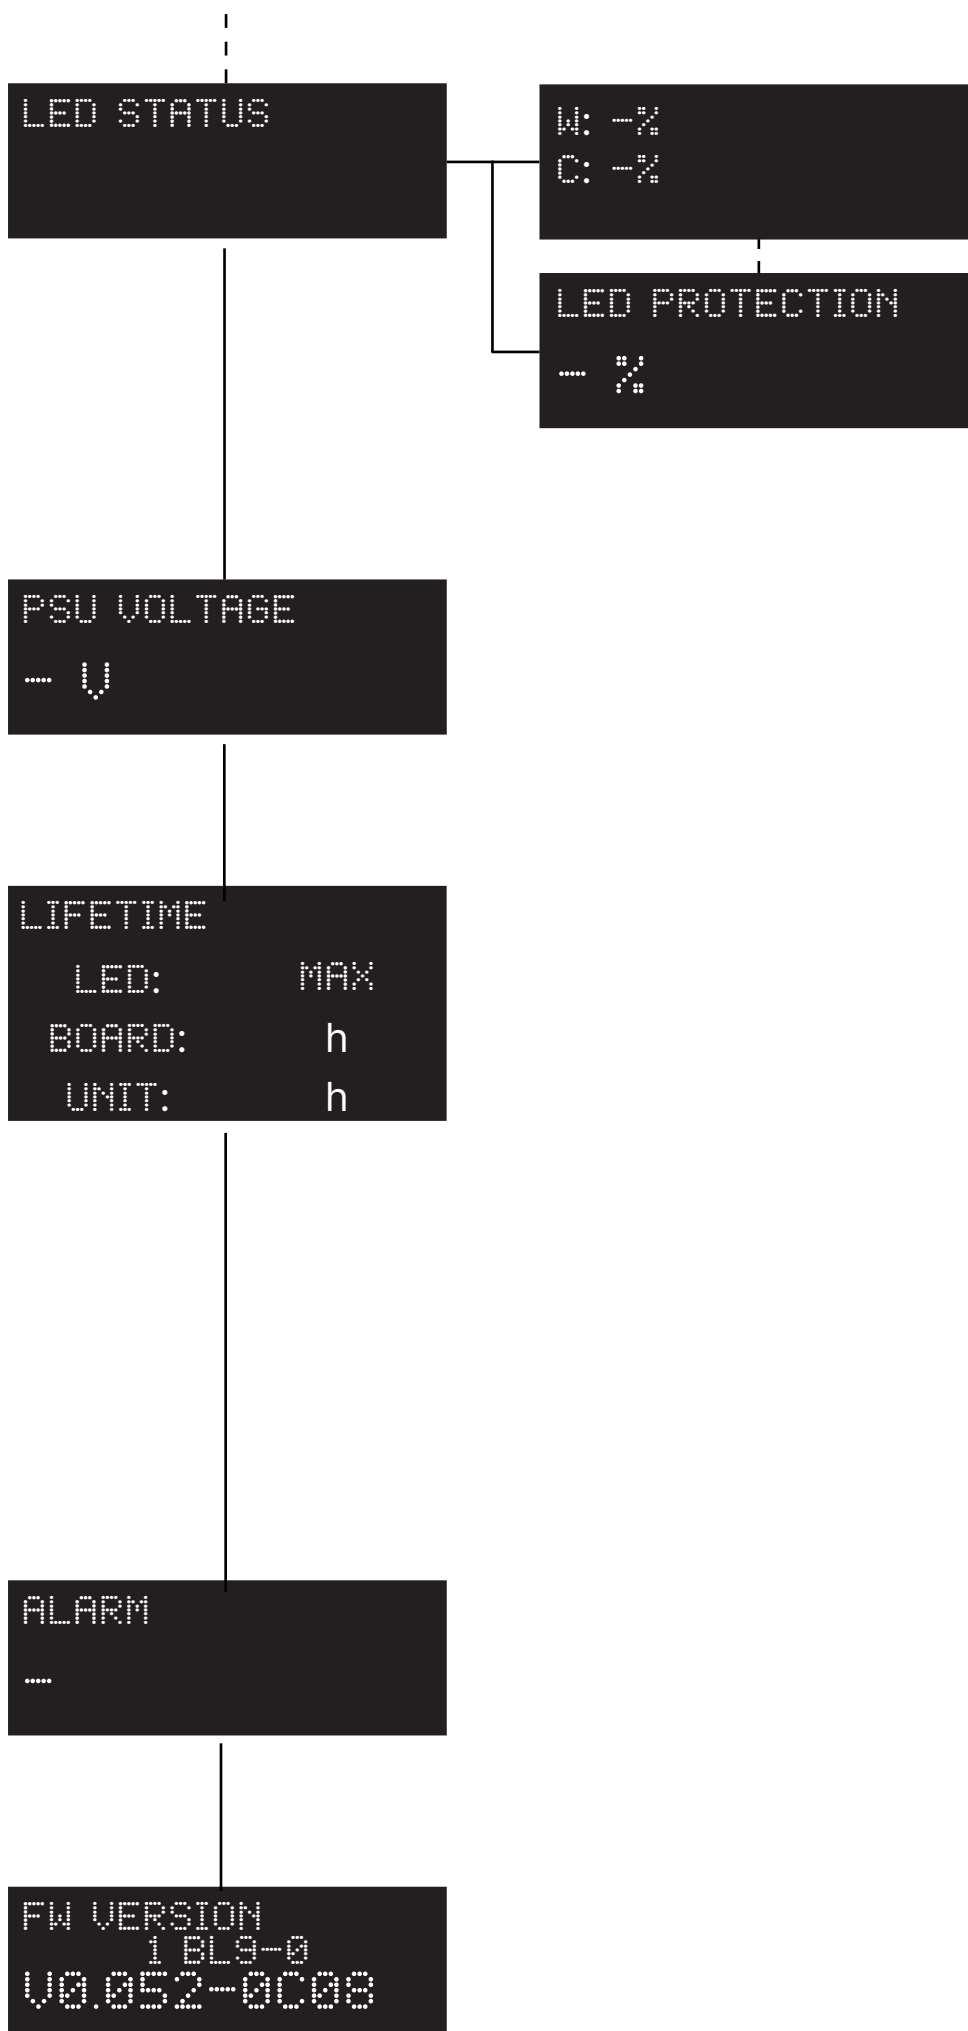

### LED STATUS:

Shows the percentage value of the LED status.

### LED PROTECTION:

Percentage of the maximum power in order to keep the projector in temperature.

### PSU VOLTAGE:

Shows the power supply voltage.

### LIFETIME:

Shows the hours counter of the fixture.

**LED:** shows the overall LED module life when it is turned on.

**BOARD:** shows the overall LED driver life currently installed.

**UNIT LIFE:** shows the overall hours of life of the fixture when powered.

**NOTE:** this items can be reset in case of LED module replacement.

### ALARM:


This menu eventually shows the alarm statuses if there is any (section **ERROR MESSAGES**).

### FIRMWARE VERSION:

Shows the firmware version currently installed in the fixture (as you can see in the example).

# 13. Wireless DMX Menu (OPTIONAL)

## 13.1 Wireless DMX

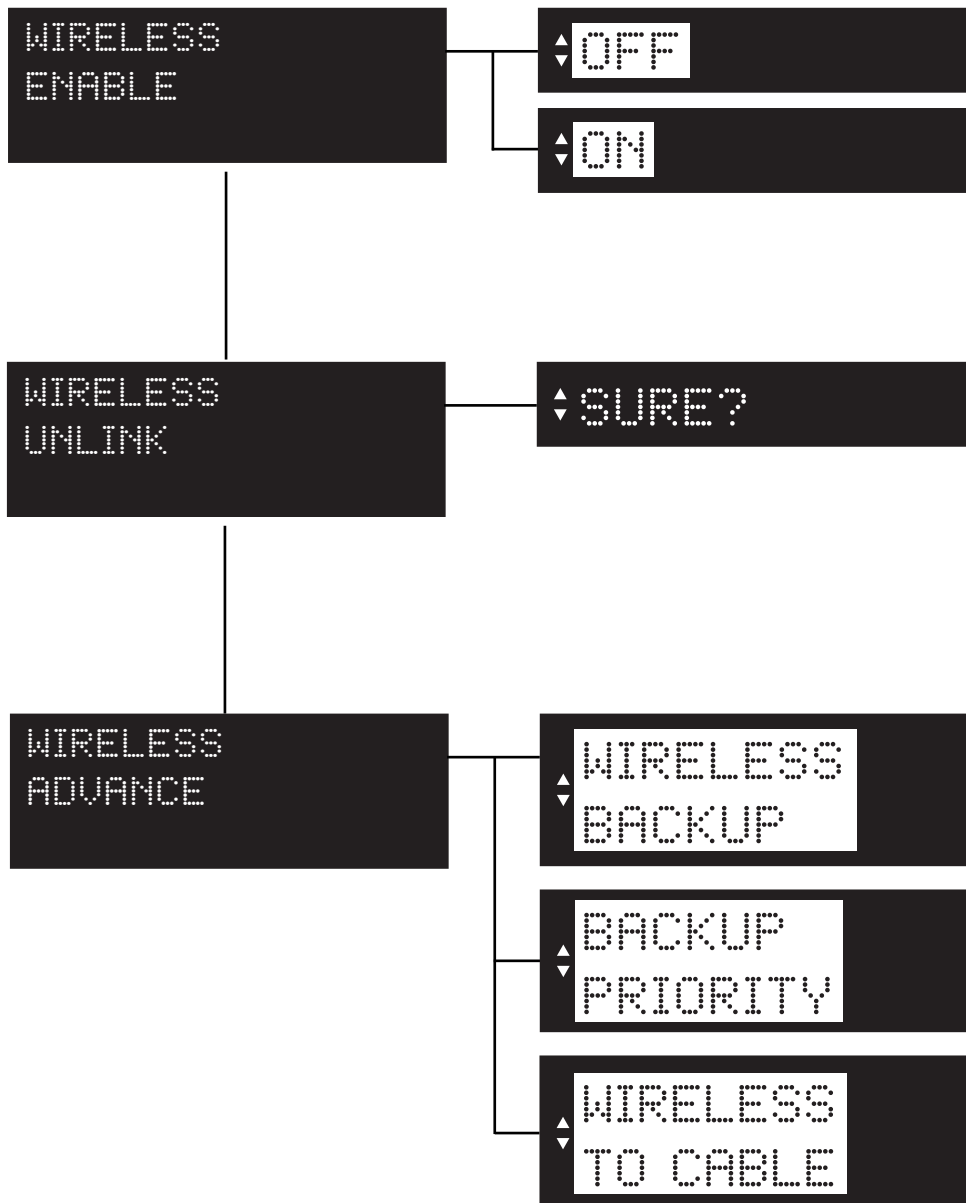

### WIRELESS ENABLE:

It allows enable all the WIRELESS functions.

### WIRELESS UNLINK:

This function is used to disconnect the projector from the wireless transmitter.

### WIRELESS ADVANCE:

#### WIRELESS BACKUP:

Activate Backup mode (Off / On).

#### BACKUP PRIORITY:

Select the main DMX stream in backup mode: **cable or wireless**

#### WIRELESS TO CABLE:

Replicate the DMX signal received via Wireless with the cable (Off / On).

**ATTENTION:** do not connect other sources, such as consoles, DMX when the function is active.

# 14. Special Function and Error Messages

## 14.1 Special functions of the fixture

### Storing the DMX signal

To use the fixture without an active DMX console it is possible to store the DMX settings in two ways:

- Through the **PRESET** menu;
- Disconnecting the DMX signal when the fixture is on. When the signal is unconnected the fixtures stores the signal;

### Automatic fan standby

To decrease the noise and the power consumption the cooling fan turns off after 40 seconds without emitting light.

## 14.2 Error messages

If a malfunction occurs, **Otello HD +** has a self-diagnostic system that will show the error message on the display. The following table will explain in detail the most common errors. If, despite of suggested intervention, the problem persists, call the **Coemar** Service Center.

Error code	Description
MEMORY	<b>Memory Error</b> Indicates that the projector has lost its memory and saved data
HW MEMORY	<b>HW Memory Error</b> Indicates that there is an Hardware Memory Error
DMX ADDR	<b>DMX Address Error</b> The projector address is too high and does not allow to receive all the necessary channels. We recall in this connection that some controllers do not generate all the 512 channels.
NTC ERROR	<b>NTC Error</b> LED temperature sensor missing or damaged.
SHORT NTC	<b>Short NTC Error</b> Error of the LED's sensor circuit.
FAN SPEED	<b>Fan Speed Error</b> Auto diagnostic routine found that the Fan may be damaged, contact Coemar assistance for the module replacement. <b>IMPORTANT:</b> to ensure the sensor is giving correct readings or that the fan rotates correctly, set the fan to the maximum level.
OVERTEMP	<b>Over temperature Error</b> Indicates that the product has reached a too high temperature.

## 15. Accessories and Spare parts

**Otello HD +** is a very versatile fixture, optional accessories for its customization are available under request:

Accessory name	Code
8-Leaf Barndoor	BC10044A001
1.5 m power cable with PowerCON TRUE1 Top and bare ends	GKIT17 (USA) / GKIT16 (EU)
Color frame holder	BC10044A005

All the components of **Otello HD +** are available as spare parts from your Coemar dealer or Service. Accurate description of the fixture, model number and type will assist us in providing for your requirements in an efficient and effective manner.

# 16. Maintenance

---

## 16.1 Firmware update

The firmware of **Otello HD +** can be updated through DMX input (with RDM protocol, ANSI E1.20, interface code AC10011A001). Contact **Coemar** assistance to receive the software and the device updater.

---

## 16.2 Periodic cleaning

### Lenses

Even a thin layer of dust can reduce the luminous output and alter the consistency of the beam. Regularly clean all filters and lenses using a soft cotton cloth, dampened with a special lens cleaning solution.

### Cleaning of the unit

Use a soft brush or a common vacuum cleaner or a source of compressed air for removing dust. For the cleaning of the housing use a soft cloth and a non-aggressive cleaner. Check that the internal fans and heat exchanger must be perfectly clean.

---

## 16.3 Periodic controls

### Mechanical components

Check the correct working of the mechanical parts and, if needed, replace them. Make sure the projector is not mechanically damaged. If necessary, replace the worn parts.

### Electrical components

Check all electrical connections, in particular for correct grounding and correct attachment of all extractable connectors. Press the connectors if necessary and reposition as before.

---

## 16.4 Fuses

**Otello HD +** has an automatic fuse that in most cases does not need to be replaced. Auto recovery protection

# 17. F.A.Q. and answers

The following list shows common issues that may be simply solved. If issues persist, the unit must be repaired by a qualified personnel or just contact your **Coemar** service.

Question	Possible solution
<b>Otello HD +</b> does not emit light	<b>Projector not powered on:</b> <ul style="list-style-type: none"><li>• Make sure the power cable is plugged in or test the input voltage;</li></ul> <b>Wrong DMX address:</b> <ul style="list-style-type: none"><li>• Check the DMX Address setting and the output signal of the controller;</li></ul>
<b>Otello HD +</b> is not responding to DMX signal	<b>DMX signal may not reach Otello HD +:</b> <ul style="list-style-type: none"><li>• Inspect the cable connection, correct poor connections or inefficient repair or replace damaged cables;</li><li>• Check DMX address of the unit;</li></ul>

## Help from Coemar Technical Services

If you are having difficulties and your problem is not addressed by this document, contact Coemar Technical Services directly at one of this email address: [info@coemar.com](mailto:info@coemar.com) or [service@coemar.com](mailto:service@coemar.com).

Or call the number +39 0376 1514412


When calling for help, take these steps first:

- Prepare a detailed description of the problem
- Go near the equipment for troubleshooting

User notes

[illegible]



	Information on disposal of the equipment
	<p>The equipment at the end of its useful life must be disposed of at an appropriate recycling center for waste electrical and electronic equipment. The treatment and disposal of environmentally friendly, helps prevent potential negative environmental and health and promote the reuse and / or recycling of materials making up the equipment. Illegal disposal by the user includes the application of administrative sanctions provided by law.</p>



**Coemar Lighting s.r.l.**

Via Carpenedolo 90

46043 Castiglione delle Stiviere, Mantova, Italy

phone. +39 0376/1514412 - fax +39 0376/1514380

[info@coemar.com](mailto:info@coemar.com)

Coemar reserves the right to change specifications without prior notice