


# pin lite LED

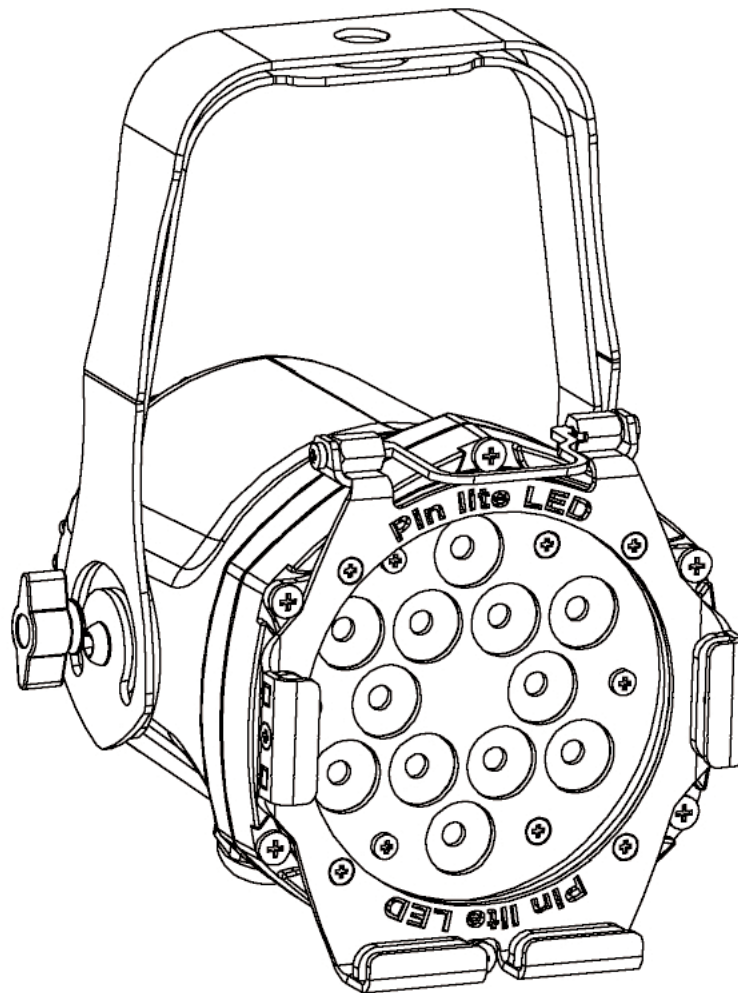

**manuale di istruzioni  
instructions manual**

Version 1.0

# pin *Lite* LED

numero di serie/serial number

data di acquisto/date of purchase

fornitore/retailer

indirizzo/address

cap/città/suburb

provincia/capital city

stato/state

tel./fax/

Prendete nota, nello spazio apposito, dei dati relativi al modello e al rivenditore del vostro **Pin Lite LED**: questi dati ci permetteranno di assistervi con la massima rapidità e precisione.

*Please note in the space provided above the relative service information of the model and the retailer from whom you purchased your **Pin Lite LED**: this information will assist us in providing spare parts, repairs or in answering any technical enquiries with the utmost speed and accuracy.*

**ATTENZIONE:** la sicurezza dell'apparecchio è garantita solo con l'uso appropriato delle presenti istruzioni, pertanto è necessario conservarle.

**WARNING:** the security of the fixture is granted only if these instructions are strictly followed; therefore it is absolutely necessary to keep this manual.

# Index

<b>1. Packaging and transportation</b>	Pag. 4
1.1. Packaging	" 4
1.2. Transportation	" 4
<b>2. General information</b>	Pag. 4
2.1. Important safety information	" 4
2.2. Warranty conditions	" 4
2.3. Certification	" 4
<b>3. Product specifications</b>	Pag. 5
3.1. Technical characteristics	" 5
3.2. Dimensions	" 5
3.3. Projector components	" 5
<b>4. Installation</b>	Pag. 6
4.1. Mechanical installation	" 6
4.2. Attaching a safety chain	" 7
4.3. Adjusting beam direction	" 7
4.4. Opening and closing up the projector	" 8
4.5. Adjusting the beam angle	" 8
<b>5. Powering up</b>	Pag. 10
5.1. Operating voltage and frequency	" 10
5.2. Mains connection	" 10
<b>6. DMX signal functions</b>	Pag. 11
6.1. Connecting DMX signal	" 11
6.2. Powering up	" 11
6.3. DMX addressing	" 12
6.4. DMX functions	" 12
<b>7. Test function</b>	Pag. 13
<b>8. Light ON function</b>	Pag. 13
<b>9. Auto function</b>	Pag. 14
9.1. Master/Slave mode	" 14
9.2. Stand Alone mode	" 15
<b>10. DR1 function</b>	Pag. 16
10.1. Setting up functionality using DR1 (FUNC)	" 16
10.2. Functions modes using DR1 (MODE)	" 17
10.3. Diagnostic functions using DR1 (MEAS)	" 18
10.4. Electronic alignment and software upgrade	" 18
10.5. Error messages using DR1	" 19
<b>11. Switch panel signals</b>	Pag. 20
<b>12. Thermal protection</b>	Pag. 20
<b>13. Maintenance</b>	Pag. 20
<b>14. Spare parts</b>	Pag. 20
<b>15. Accessory</b>	Pag. 20
<b>16. Frequently asked questions</b>	Pag. 21

## English

Congratulations on having purchased a **Coemar** product. You have assured yourself of a fixture of the highest quality, both in componentry and in the technology used. We renew our invitation to you to complete the service information on the previous page, to expedite any request for service information or spares (in case of problems encountered either during, or subsequent to, installation). This information will assist in providing prompt and accurate advice from your **Coemar** service centre..

Following the instructions and procedures outlined in this manual will ensure the maximum efficiency of this product for years to come.

## 1. Packaging and transportation

### 1.1. Packaging

Open the packaging and ensure that no part of the equipment has suffered damage in transit. In case of damage to the equipment, contact your carrier immediately by telephone or fax, following this with formal notification in writing.

#### Packing list

Ensure the packaging contains:

- 1 Pin Lite LED
- 1 Instruction manual

### 1.2. Transportation

The **Pin Lite LED** should be transported in either its original packaging or in an appropriate flight case.

## 2. General information

### 2.1. Important safety information

#### Fire prevention:

1. Never locate the fixture on a flammable surface.
2. Minimum distance from flammable materials: 0.5 m.
3. Minimum distance from the closest illuminable surface: 0,5 m.
4. Replace any blown or damaged fuses only with those of identical values. Refer to the schematic diagram if there is any doubt.
5. Connect the projector to mains power via a thermal magnetic circuit breaker.

#### Prevention against electric shock:

1. High voltage is present in the internal of the unit. Isolate the projector from mains supply prior to performing any function which involves touching the internal of the unit.
2. For mains connection, adhere strictly to the guidelines outlined in this manual.
3. The level of technology inherent in the **Pin Lite LED** requires the use of specialised personnel for all service applications; refer all work to your authorised **Coemar** service centre.
4. A good earth connection is essential for proper functioning of the projector. Never operate the unit without proper earth connection.
5. The mains cable should not come into contact with other cabling.
6. Never handle the unit with wet hands or in a damp environment.

#### Safety:

1. The projector should always be installed with bolts, clamps, and other fixings which are suitably rated to support the weight of the unit.
2. Always use a secondary safety chain of a suitable rating to sustain the weight of the unit in case of the failure of the primary fixing point.
3. Never install the fixture in an enclosed area lacking sufficient air flow; the ambient temperature should not exceed 35°C.
4. The external surface of the unit, at various points, may exceed 80°C. Never handle the unit until at least 10 minutes have elapsed since the unit was turned off..

#### Protection rating of the body against liquids and solids:

1. The standard version of the fixture is classified ordinary apparatus; its protection grade against penetration by external agents, solid or liquid, is **IP 20**
2. The IP version of the projector has an **IP 65** protection rating; this indicates that it is protected against dust and significant showers of water. This protection rating allows the fixture to be installed in an exposed location in inclement weather.

### 2.2. Warranty conditions

1. The fixture is guaranteed for a period of 12 months against manufacturing faults and faulty materials.
2. Faults due to incorrect operation or operation in an inappropriate manner are not covered by the warranty.
3. The warranty is immediately void if the fixture has been operated or serviced by unqualified or unauthorised personnel.
4. The warranty does not include fixture replacement.
5. The model and serial numbers must be supplied for any warranty claims or advice from our authorised service personnel.

### 2.3. Certification




1. The fixture satisfies the essential requirements of the directive EMC 89/336/EEC, 93/68/EEC, BT73/23/EEC.
2. The fixture is in accordance with the standard EN 50419 (RoHS) and satisfies the requirements of the directive 2002/96/EC (WEEE).

### 3. Product specifications

#### 3.1. Technical characteristics


<b>Power:</b>	90/250 Vac 50/60Hz Autosensing
<b>Nominal current:</b>	0.18A @ 230Vac 0.45A @ 115V
<b>Power factor:</b>	$\cos \varphi = 0,5$
<b>Led power:</b>	36 Led x 1W
<b>Minimum ambient temperature:</b>	-15°C / 5°F
<b>Maximum ambient temperature:</b>	35°C / 95°F
<b>Weight:</b>	3.6 Kg / 7.9 lbs
<b>IP Rating:</b>	IP20 (standard version) IP65 (IP version)

#### 3.2. Dimensions

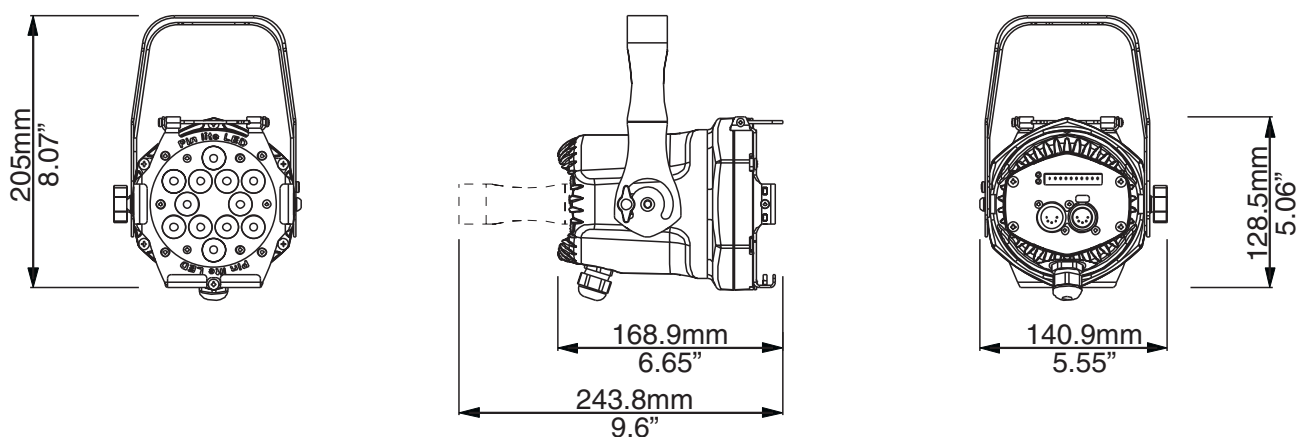

#### 3.3. Projector components

The principal components of the **Pin Lite LED** are shown in the diagram below.

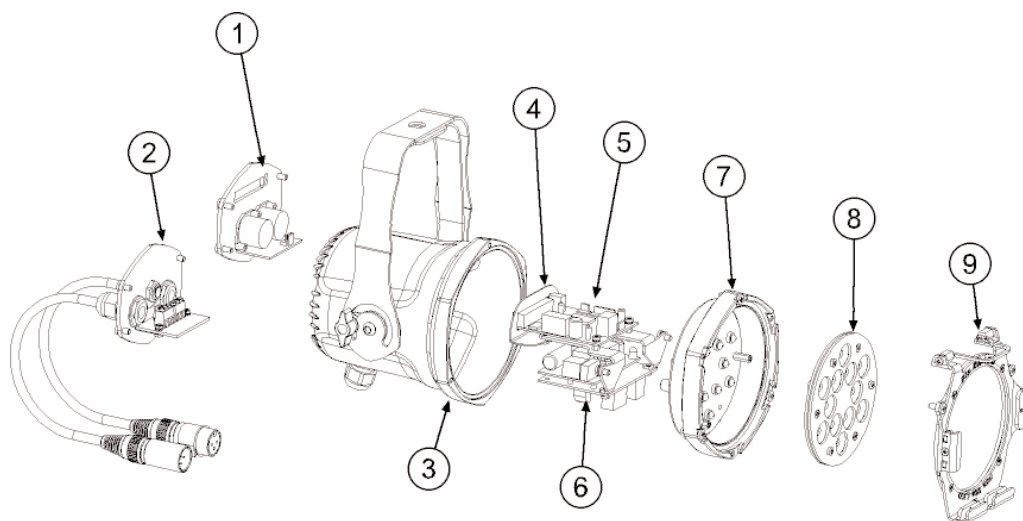

#### Descrizione dei componenti

1. IP20 rear panel
2. IP65 rear panel
3. Projector body
4. Dip-switch panel
5. Led control PCB
6. Switching power supply
7. Head
8. Lens group
9. Front frame


## 4. Installation

### 4.1. Mechanical installation

**Pin Lite LED** may be floor mounted or hung from an appropriate structure in any position.


#### Permanent installation

Use the hole "A" ( $\varnothing 13$ ) on the yoke of the **Pin Lite LED** for robust, permanent installation.

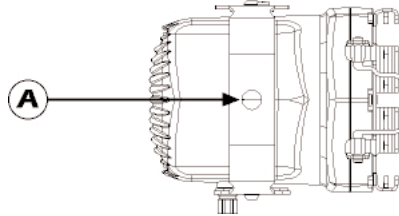

#### Mobile installations

If hanging the fixture from a lighting truss or similar, we recommend the use of appropriate clamps "B", affixed to the yoke in the hole "A" provided, as shown in the following diagram.

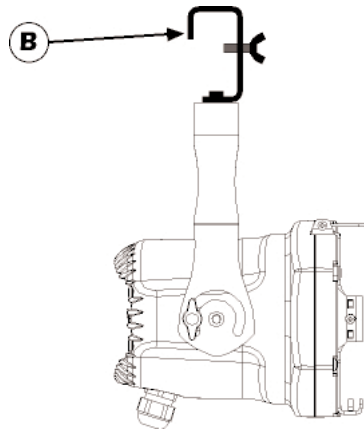


### **ATTENTION!!**

**Always ensure that your support structure and fixings (bolts, clamps, etc.) are rated to support the weight of the fixture.**

Never install the fixture in a position in an accessible position to personnel who may ignore or be unaware of the safety directions mentioned in this manual.

### 4.2. Safety chain


When hanging the **Pin Lite LED** we recommend the use of a safety chain "C" affixed to the yoke and to the suspension device. The safety chain should be either a metal wire rope or a metal chain, both suitably rated for the purpose.

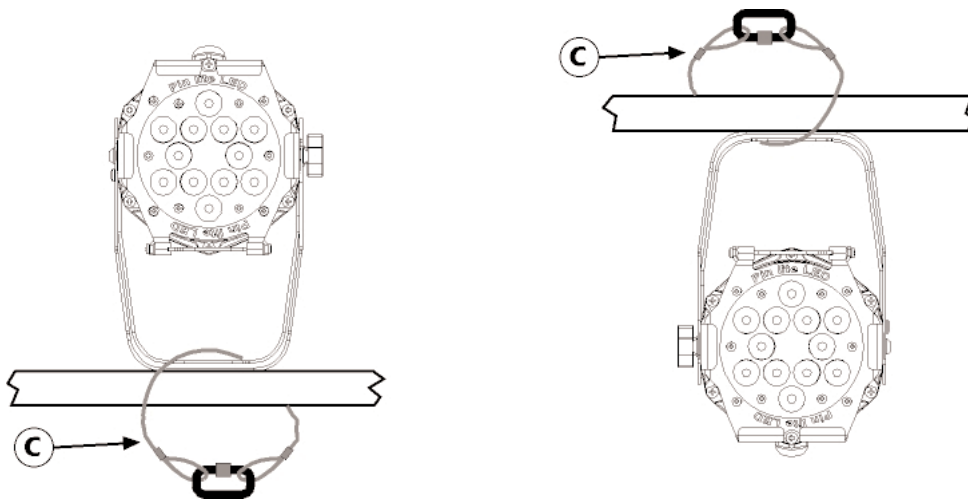


### 4.3. Adjusting beam direction

The **Pin Lite LED** can be tilted to adjust the beam output. To perform this adjustment, follow the instructions set out below.

1. Loosen the handle "D" located on the side of the projector, thus allowing the inclination to be changed.

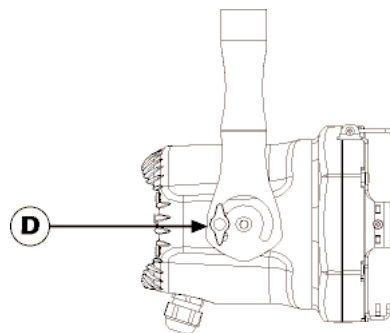

2. Adjust the projector's tilt.

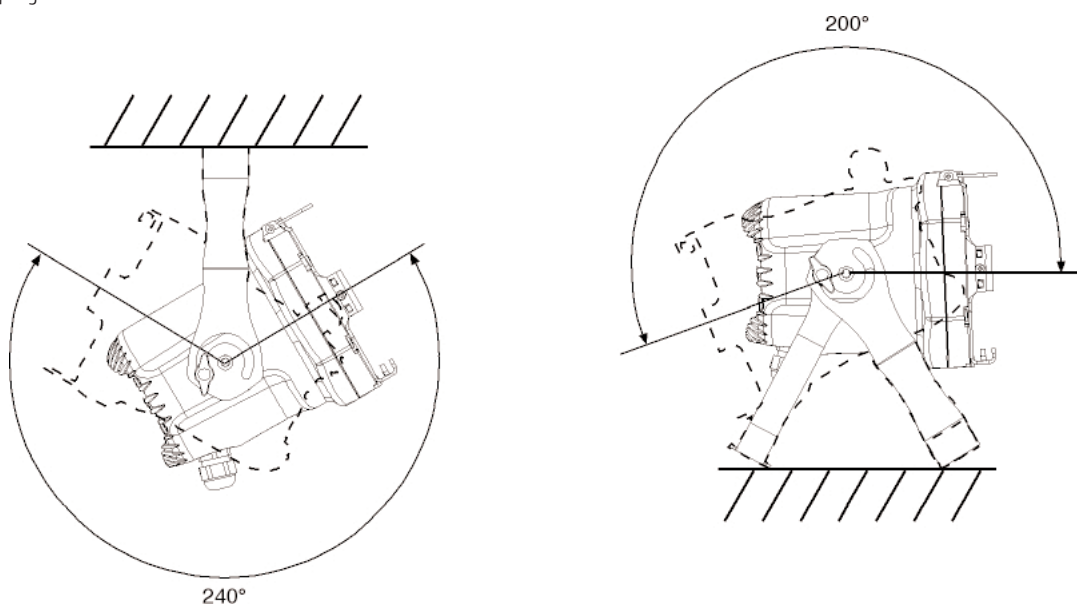

3. Refasten the handle "D" on the side of the projector.


## English

### 4.4. Opening and closing up the projector

The various procedures which follow can only be performed with the projector housing removed.

To gain access to the internal of the projector use a suitable screwdriver to remove the 3 screws "E" which affix the front frame and remove it.

In the IP version, to access the rear area (switch panel), fully untighten the 4 screws "F" that fix of the rear panel and remove it from the unit.

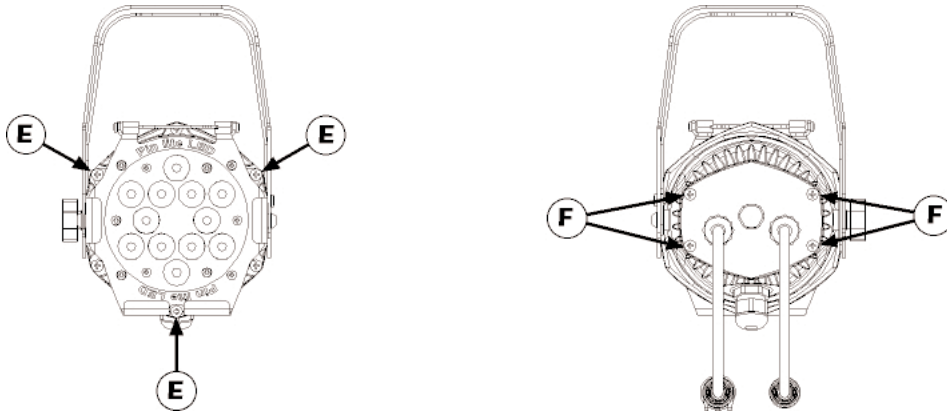

You should now have complete access to the internal of the projector and can proceed to carry out the procedures described below. Close the unit by following the previous points the other way round.

#### **ATTENTION!!**

**Remove mains power prior to opening up the projector.**  
**In the IP version, before close up the unit, check that the garnishings are inserted in their places.**  
**Both screws "E" and "F" must be uniformly fixed, screwing them alternately in short steps.**

### 4.5. Adjusting the beam angle

Several optional optical groups are available for **Pin Lite LED**. They are used to vary the beam dimension and make it suitable for different lighting applications and specifically: a group of lenses for a larger projection angle, a flood reflector and several filters that can be fitted either internally or externally to the unit.

The standard optical group, fitted on **Pin Lite LED**, is composed by a group of lenses that gives 12° beam angle.


Here following you will find instructions to install different optical groups.

1. Open the unit as shown on paragraph 4.4 **Open and close the unit**
2. Remove the 3 screws "G".
3. Replace the lenses "L" and ensure that the led of "H" disc fit perfectly in the lenses seats

If you wish to use an optional filter holder (code **CO9188**) follow the instructions as per point 4 and 5.


4. After having positioned the lenses group insert the "M" filter
5. Lock it with the "N" filter holder

6. Tighten the 3 "G" fixing screws
7. Close the unit

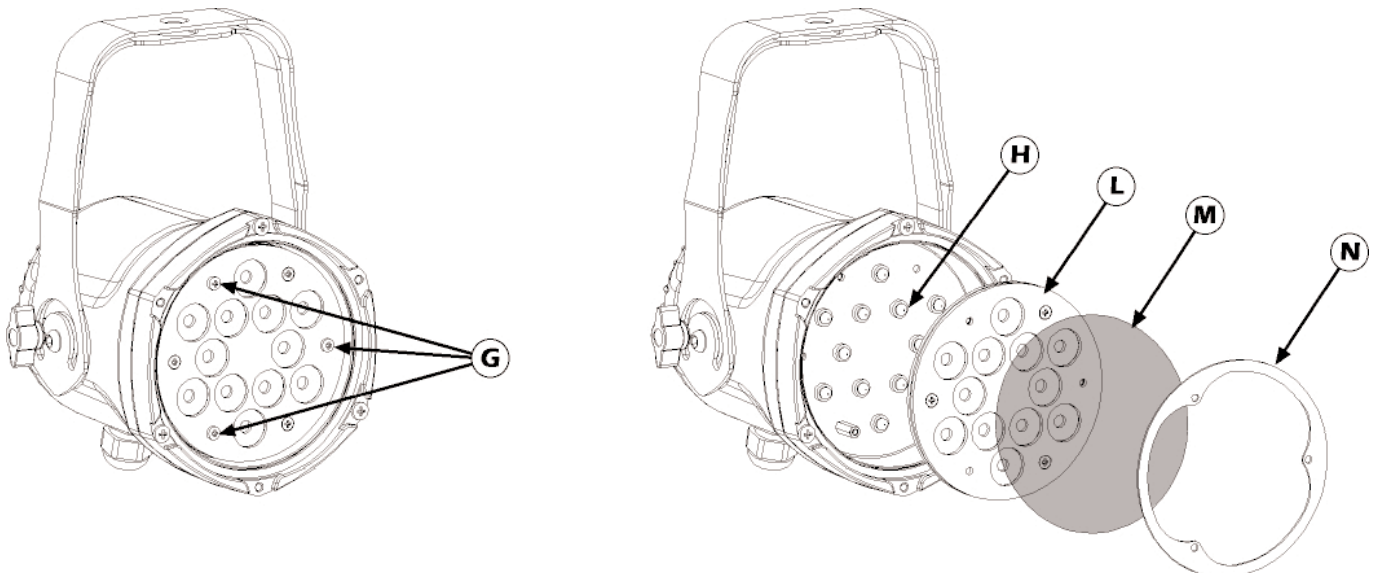




To further increase the beam angle the “**R**” flood reflector is available (code **CO9187**) and it must be fitted instead of the lenses group and filter holder.

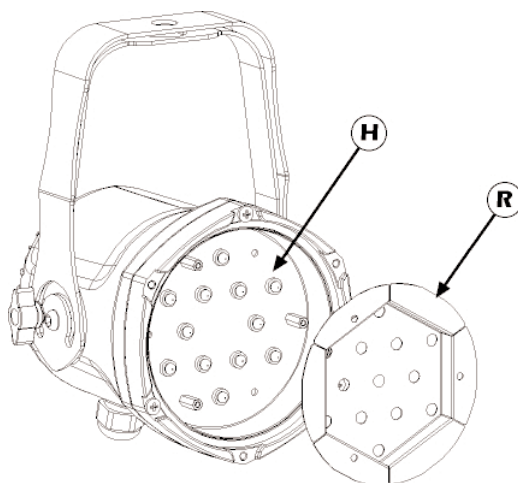

To vary the wideness of the beam without opening the unit, it's possible to install an external filter holder “**S**” (code **CO9188/1**), as shown on following drawing.

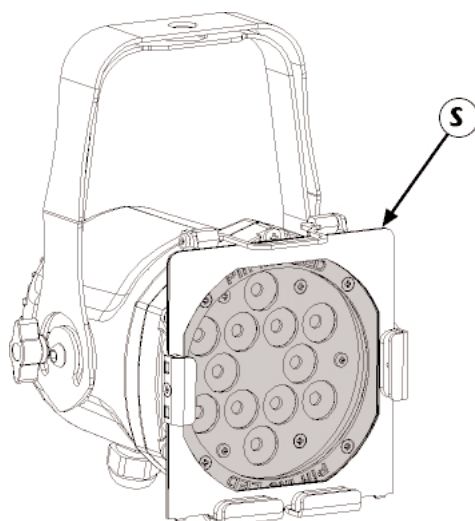

The following table details the range of beam angle and diffusion filters available for the **Pin Lite LED**.

Optical group	Beam angle (1/2 peak angle)
Narrow Lenses (standard)	10°
Narrow Lenses + Light Frost Filter	12°
Narrow Lenses + Frost Filter	14°
Narrow Lenses + Strip Frost Filter	<b>Beam Shake</b>
Medium Lenses ( <b>cod. CO9186</b> )	20°
Medium Lenses + Light Frost Filter	22°
Medium Lenses + Frost Filter	24°
Medium Lenses + Strip Frost Filter	<b>Beam Shake</b>
Flood	81°

### 5.1. Operating voltage and frequency

The fixture may operate at voltages ranging from 90 to 250V AC at a frequency of 50 or 60 Hz.

**It is not necessary to effect any setup procedures, Pin Lite LED will automatically adjust its operation to suit any frequency or voltage within this range.**

### 5.2. Mains connection

#### Cabling

The mains cable provided can be one of the following type:

**1.** Neoprene cable Type HO7RN-F 3x1.5 mmq (cod. **CV5333**)

**2.** Neoprene cable type FT-2 P-7K 3x1.5 mmq (cod. **CV5307**)

Both types are suitable for outdoor applications and comply to the most recent international standards: CEI 20-19, UNEL 35364, CENELEC HD 22.


**N.B.** In case of cable replacement, similar cable with comparable qualities must be used exclusively (cable 3x1.5  $\varnothing$  external 10 mm, rated 450/750V, operating temperature -25° +60°).

#### Connection to mains power

for connection purposes, ensure you plug is of a suitable rating:

- 230/240V 0.2 amps constant current.
- 208V 0.25 amps constant current.
- 100/115V 0.5 amps constant current.

Locate the mains cable which exits the base of the unit and connect as shown below:

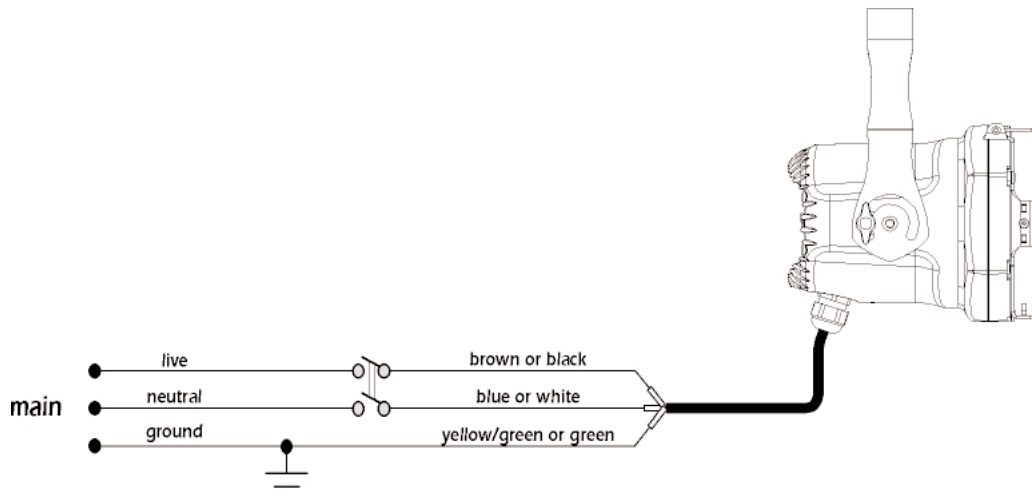

#### ATTENTION!!

- The use of a thermal/magnetic circuit breaker for each fixture is recommended. Strict adherence to regulatory norms is strongly recommended.
- Pin Lite LED should not be powered through a Dimmer as this may damage the internal switching powersupply.
- Prior to connecting the device to mains power, ensure that the mains characteristics are within the recommended range for use with the Pin Lite LED.
- A good earth connection is essential for the correct operation of the Pin Lite LED. Never install the unit unless the yellow/gree earth cable is securely connected.
- All cabling and connections should be carried out by suitably qualified personnel.

## 6. DMX signal functions

**Pin Lite LED** can operate in two modes:

1. using DMX512 control signal
2. automated "STAND ALONE" or "MASTER/SLAVE" modes (see chapter 9. **AUTO function**)

### 6.1. Connecting DMX signal


Control signal is digital and is transmitted via two pair screened cable, as recommended in international standards for the transmission of DMX512. Connection is serial, utilising the XLR3 sockets located on the rear panel of the **Pin Lite LED**.

#### Signal connection via the XLR3 connectors

Connection is to international standards. Connection is as indicated below:

- pin 1 = GND
- pin 2 = data -
- pin 3 = data +

Should your DMX 512 controller output signal via a cannon XLR5 (5 pin), pins 4 and 5 should remain unconnected.

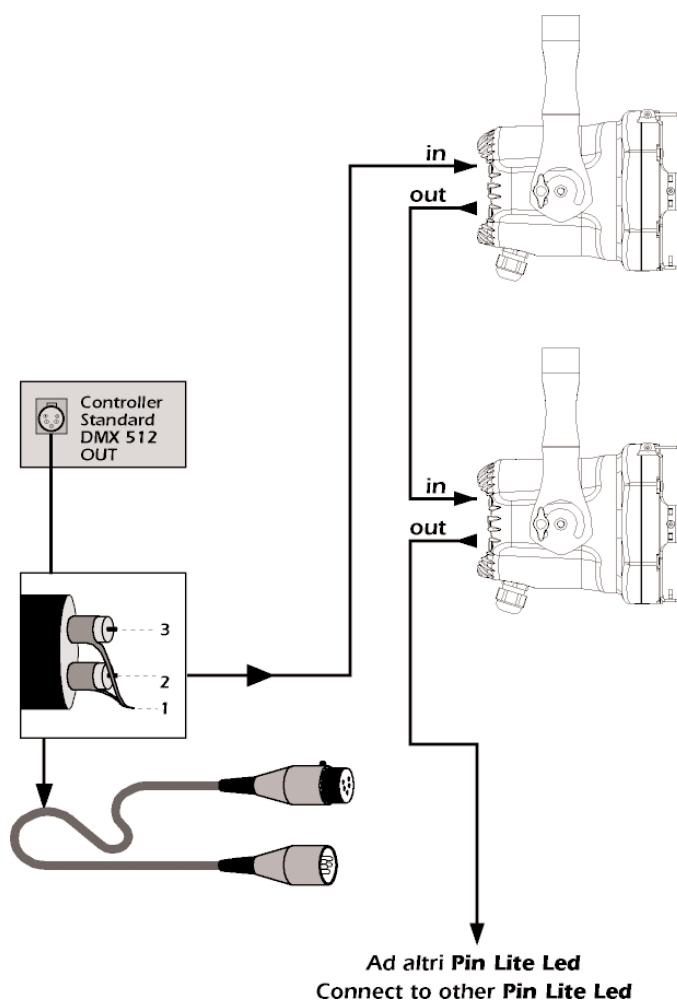

### ATTENTION!!

Ensure that all data conductors are isolated from one another, the screening and the metal housing of the connector. Pin number 1 and the housing should never be connected to mains power.

### 6.2. Powering up

After having followed the preceding steps, turn on mains power on to the unit. The **POWER** led located near the dip-switch panel will come on.

#### Turning on power with DMX signal connected.

The yellow DMX led will flash to indicate that **DMX 512** is being correctly received. If the yellow led is off, DMX signal is not being received (see section 16. **Frequently asked questions**).

## English

### 6.3. DMX addressing



Via the dip-switch panel, it is possible to assign a DMX address to the fixture. The address is determined by the sum of the values associated with the dip switches set to the on position.

Each **Pin Lite LED** utilises **6 channels** of **DMX 512** signal for complete control.

**IMPORTANT NOTE:** the following points are valid for all the instructions which follow.

1. Setting a dip-switch to the **ON** position activates its function
2. The **DMX** address may be altered without the need to turn the **Pin Lite LED** off.

The following are examples only for setting DMX addresses.

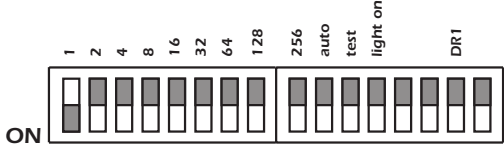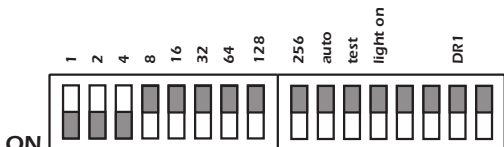	<p><b>Pin Lite LED</b> number 1 Address <b>DMX 001</b> is obtained by setting dip-switch <b>1</b> to the <b>ON</b> position</p>
	<p><b>Pin Lite LED</b> number 2 Address <b>DMX 007</b> is obtained by setting dip-switches <b>1, 2 &amp; 4</b> to the <b>ON</b> position</p>

### 6.4. DMX functions

channel	function	type of control	effect	decimal	percentage
1	master dimmer	proportional	adjust luminous output intensity from 0 to 100%	0 - 255	0% - 100%
2	red	proportional	proportional control of the percentage of red colour from 0 to 100%	0 - 255	0% - 100%
2 (A)	speed	proportional	fade speed between colours of the program selected from channel 6; from fast to slow (from 1 second to 1 minute)	0 - 255	0% - 100%
<b>Note 1: the second function 2 (A) is enabled when channel 6 is active</b>					
3	green	proportional	proportional control of the percentage of green colour from 0 to 100%	0 - 255	0% - 100%
3 (A)	pause	proportional	control of the pause time between colours (steps) of the program selected from channel 6; the pause time is adjustable proportionally from 1 second to 3.30 minutes	0 - 255	0% - 100%
<b>Note 2: the second function 3 (A) is enabled when channel 6 is active</b>					
4	blue	proportional	proportional control of the percentage of blue colour from 0 to 100%	0 - 255	0% - 100%
5	strobe effect	step	no effect	0 - 9	0% - 4%
		proportional	variable speed strobing effect, from slow to fast	10 - 57	4% - 22%
		step	stop strobe	58 - 59	23% - 23%
		proportional	sequenced pulse effect, slow closing, fast opening (variable speed pulsing, from slow to fast)	60 - 108	24% - 42%
		step	stop strobe	109 - 110	43% - 43%
		proportional	sequenced pulse effect, fast closing, slow opening (variable speed pulsing, from slow to fast)	111 - 159	44% - 62%
		step	stop strobe	160 - 161	63% - 63%
		proportional	random strobe effect with variable speed from slow to fast and synchronised colours	162 - 207	64% - 81%
		step	stop strobe	208 - 209	82% - 82%
6	automated functions	step	no effect	0 - 9	0% - 4%
			automated program 1	10 - 50	4% - 20%
			automated program 2	51 - 91	20% - 36%
			automated program 3	92 - 132	36% - 52%
			automated program 4	133 - 173	52% - 68%
			random program repeat	174 - 214	68% - 84%
			repeat all programs in sequence	215 - 255	84% - 100%

## 7. Test function

With the dip-switch set to the ON position, **Pin Lite LED** will test each individual channel without the need for a DMX controller to be connected.

For example:

	<p>set the dip-switch to <b>ON</b> on the <b>Pin Lite LED</b>. The fixture will perform a quick sequential channel test</p>
--	---

## 8. Light ON Function

Via this function the leds of the **Pin Lite LED** may be set to always on at a predetermined intensity. When set to **ON** the dip-switch, illumination level and colour can be set by a combination of settings as shown in the table below.

dip-switch 1	dip-switch 2	dip-switch 4	Red
on	off	off	illumination level 20%
off	on	off	illumination level 30%
on	on	off	illumination level 40%
off	off	on	illumination level 50%
on	off	on	illumination level 60%
off	on	on	illumination level 80%
on	on	on	illumination level 100%
dip-switch 8	dip-switch 16	dip-switch 32	Green
on	off	off	illumination level 20%
off	on	off	illumination level 30%
on	on	off	illumination level 40%
off	off	on	illumination level 50%
on	off	on	illumination level 60%
off	on	on	illumination level 80%
on	on	on	illumination level 100%
dip-switch 64	dip-switch 128	dip-switch 256	Blue
on	off	off	illumination level 20%
off	on	off	illumination level 30%
on	on	off	illumination level 40%
off	off	on	illumination level 50%
on	off	on	illumination level 60%
off	on	on	illumination level 80%
on	on	on	illumination level 100%

Other examples of possible setting combinations are shown below.

	<p><b>LIGHT ON</b> dip-switch set to <b>ON</b>  <b>RED</b> at 20% (dip-switch 1 set to <b>ON</b>)  <b>GREEN</b> at 30% (dip-switch 16 set to <b>ON</b>)  <b>BLUE</b> at 50% (dip-switch 256 set to <b>ON</b>)</p>
--	---

	<p><b>LIGHT ON</b> dip-switch set to <b>ON</b>  <b>RED</b> off  <b>GREEN</b> off  <b>BLUE</b> at 100% (dip-switches 64, 128, 256 set to <b>ON</b>)</p>
--	--

### ATTENTION!!



Setting the Light ON dip-switch to active inhibits control via DMX signal.  
The three colour dip-switches set to the OFF position turn off the colour.

## 9. Auto function

This function can be used to determine the operating mode of the projector (either **STAND ALONE** or **MASTER/SLAVE**), make program selections or alter the crossfade times. Setting this function to on inhibits control via DMX signal.

### 9.1. MASTER/SLAVE mode

In MASTER/SLAVE mode, it is possible to control, via a projector set as MASTER, a series of **Pin Lite LED** units set to act as SLAVE fixtures. The table below displays the settings required for fixtures to be connected in this manner.

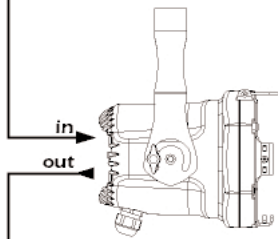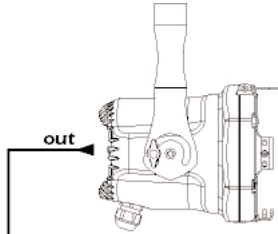

Ad altri Pin Lite Led SLAVE  
Connect to other Pin Lite Led SLAVE

MASTER											
										<p><b>Pin Lite LED set as MASTER running program 1</b></p>	

To configure a **Pin Lite LED as MASTER** is simply a matter of setting the **Auto** dip-switch to the **ON** position and selecting a program for it to follow by making a selection from the following dip-switches: **1-2-4-8-256**. There are 4 programs which can be selected.

- dip switches **1-2-4-8** select programs 1, 2, 3, and 4 respectively.
- dip-switch **256** runs all four programs sequentially

**ATTENTION!!**

It is only possible to select one program at a time.

SLAVE											
										<p><b>Pin Lite LED set to SLAVE</b></p>	

To configure a **Pin Lite LED as SLAVE** is simply a matter of setting the **Auto** dip-switch to the **ON**. **All** other dip-switches should be set to **OFF**.

After having selected the program you wish to run, dip-switches **16** and **32** may be used to set the wait time for each scene in the selected program. In this manner, programs can be made to run faster or slower according to your requirements. The following table outlines the dip-switch settings and their associated wait times.

time (wait time)		
dip-switch 16	dip-switch 32	
off	off	hold time 3 second
on	off	hold time 10 second
off	on	hold time 30 second
on	on	hold time 1 minute

Via dip-switches **64** and **128** it is possible to set the fade times for each scene in the selected program. The following table outlines the dip-switch settings and their associated fade times.

speed (fade time)		
dip-switch 64	dip-switch 128	
off	off	crossfade time 3 second
on	off	crossfade time 10 second
off	on	crossfade time 30 second
on	on	crossfade time 1 minute

The timing for each scene in a program is therefore a sum of the crossfade and hold times as set via these dip-switches. The following table gives an example of a possible setting.


	<p><b>Pin Lite LED</b> set as a <b>MASTER</b> running program <b>3</b>  <b>hold time 30 sec. crossfade time 10 sec.</b></p> <p>Set the <b>AUTO</b> and <b>4 dipswitches</b> to <b>ON</b> will select the fixture as <b>MASTER</b> running program 3.</p> <p>Setting dip-switch <b>16</b> to <b>OFF</b> and <b>32</b> to <b>ON</b> will set a hold time of <b>30 sec.</b></p> <p>Dip-switch <b>64</b> to <b>ON</b> and <b>128</b> to <b>OFF</b> will set a crossfade time of <b>10 sec.</b></p>
--	--

**ATTENTION!!**

**When the AUTO function is selected DMX signal reception is disabled to avoid system conflicts.**

**9.2. STAND ALONE mode**

In **STAND ALONE** mode the projector operates independently with no need for DMX signal. It is possible to select the program which the projector runs and to alter the hold and crossfade times.

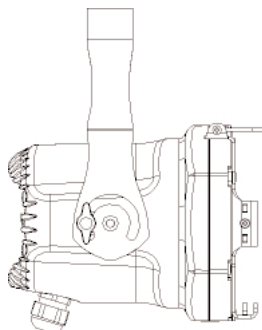

STAND ALONE	
	<p><b>Pin Lite LED</b> set as <b>STAND ALONE</b> running program <b>1</b></p>

To configure the **Pin Lite LED** as **STAND ALONE** simply set dip-switch **Auto** to the **ON** position and select the program you wish to run and the hold and crossfade times to follow, as described in the previous section.

## 10. DR1 function

### ATTENTION!!

All the function in this chapter are exclusively activateable from DR1.

This function allows for the transmission of bidirectional data with the **DR1** (cod. **CO9703**). Via the **DR1** (display remote) it is possible to remotely access, view and alter all the fixture's parameters and settings.

The **DR1** remote display unit allows the user to:

#### Monitor (MEAS):

- 1) the current Software Version loaded
- 2) temperature
- 3) led operating life
- 4) projector operating life
- 5) presence and characteristics of incoming DMX 512
- 6) error messages
- 7) ID code

#### Edit and set (MODE):

- 1) DMX address
- 2) function mode

#### Execute (FUNC):

- 1) Function test
- 2) Software update
- 3) Color alignment

To initiate communications with the **Pin Lite LED** the **DR1** must be installed into the DMX signal chain between the fixture and the controller following the instructions located internally on the unit.


The **DR1** dip-switch must be set to the **ON position**; from this point on, dip-switches 1 to 128 take on the task of assigning an identifying value (ID) to the fixture. They no longer set the fixture's DMX address, which is done by the **DR1**. The maximum number of unique IDs available in the **DR1** system is 250; dip-switch 256 has no functionality.

An example of a possible configuration is shown below:



### 10.1. Setting up functionality via DR1 (FUNC)


Using the inbuilt functionality of the **Pin Lite LED** via the **DR1**, it is possible to alter the function settings of the fixture. The following diagram illustrates the menu navigation system of the **DR1** in **FUNC**.

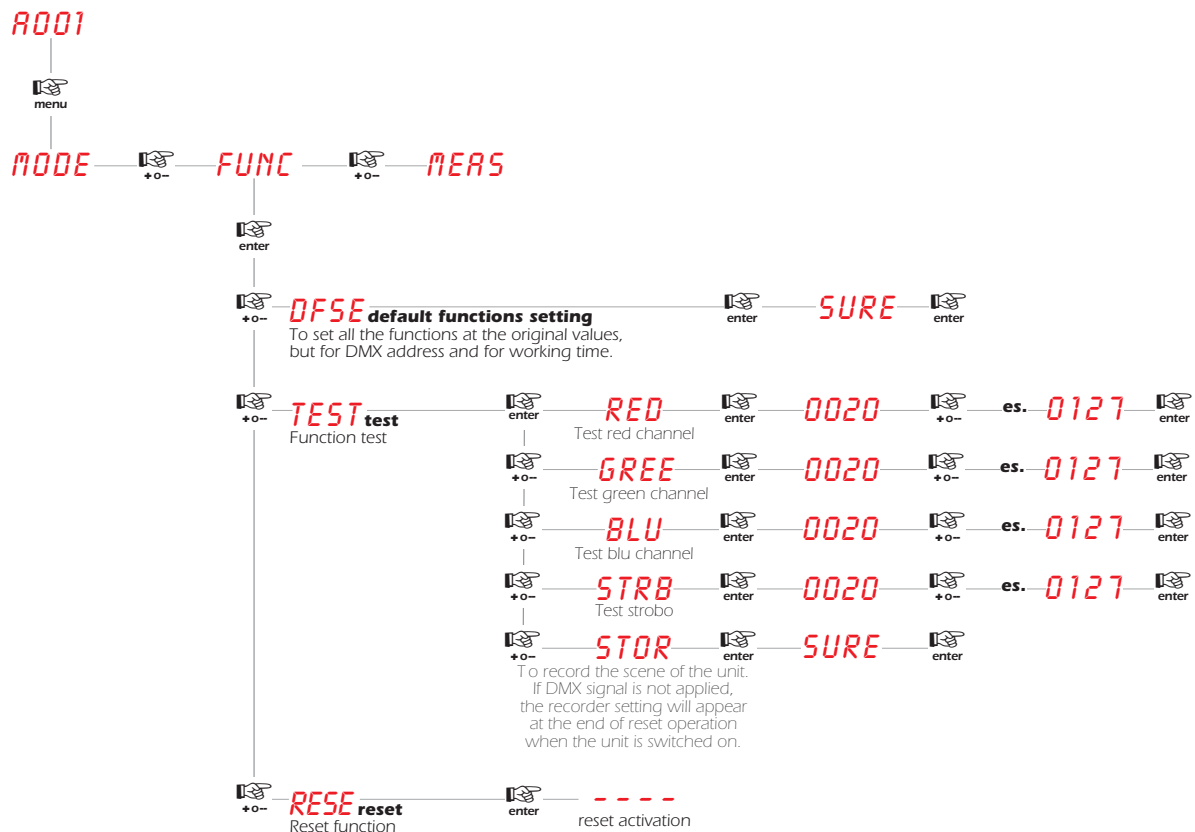



## 10.2. Function modes using DR1 (MODE)


Using the inbuilt functionality of the **Pin Lite LED** via the **DR1**, it is possible to alter the function mode of the fixture. The following diagram illustrates the menu navigation system of the **DR1** in **MODE**.

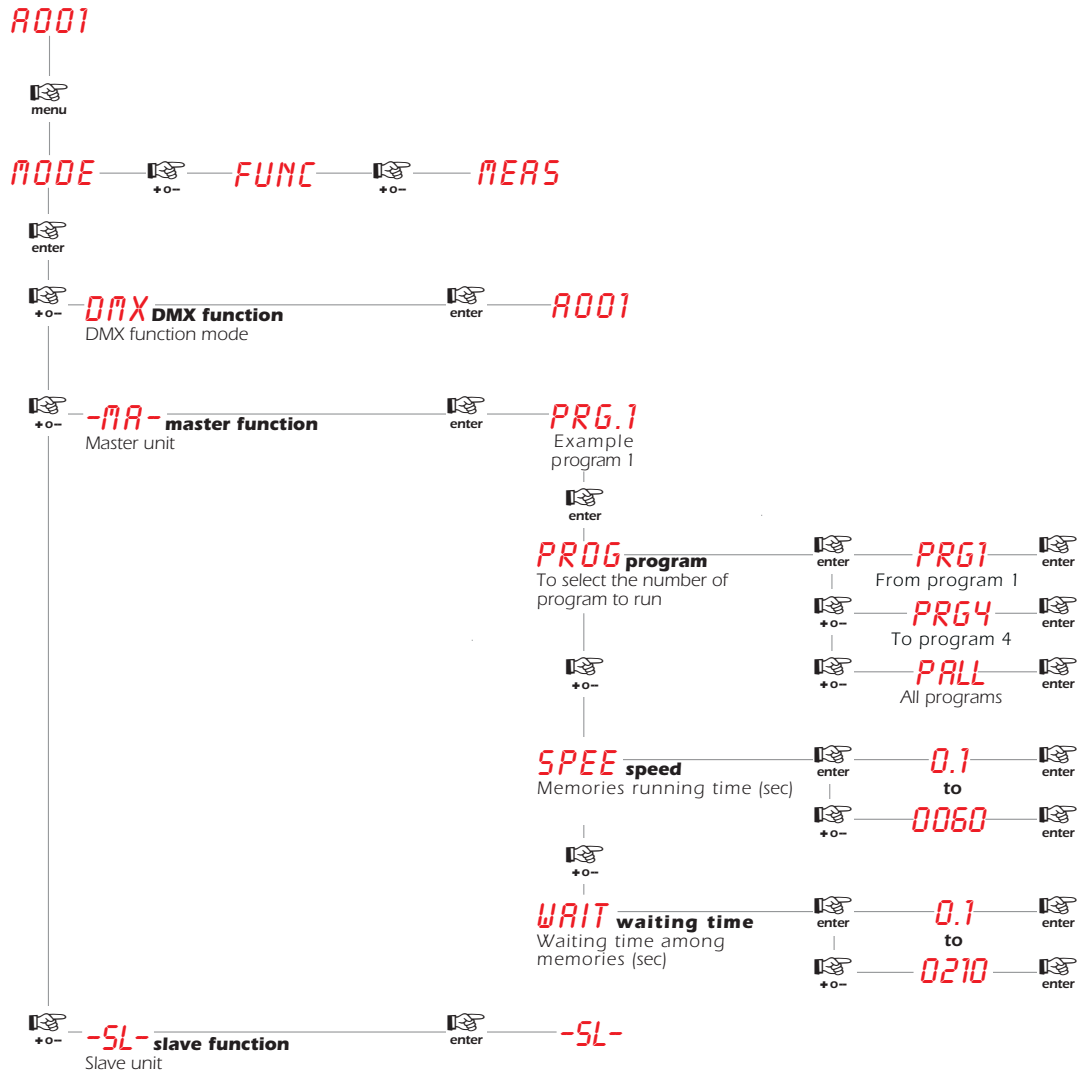

## English

### 10.3. Diagnostic functions using DR1 (MEAS)

Using **MEAS** mode, it is possible to carry out several digital parameters checks and autodiagnosics. The following diagram illustrates the menu navigation system of the **DR1** in **MEAS**.

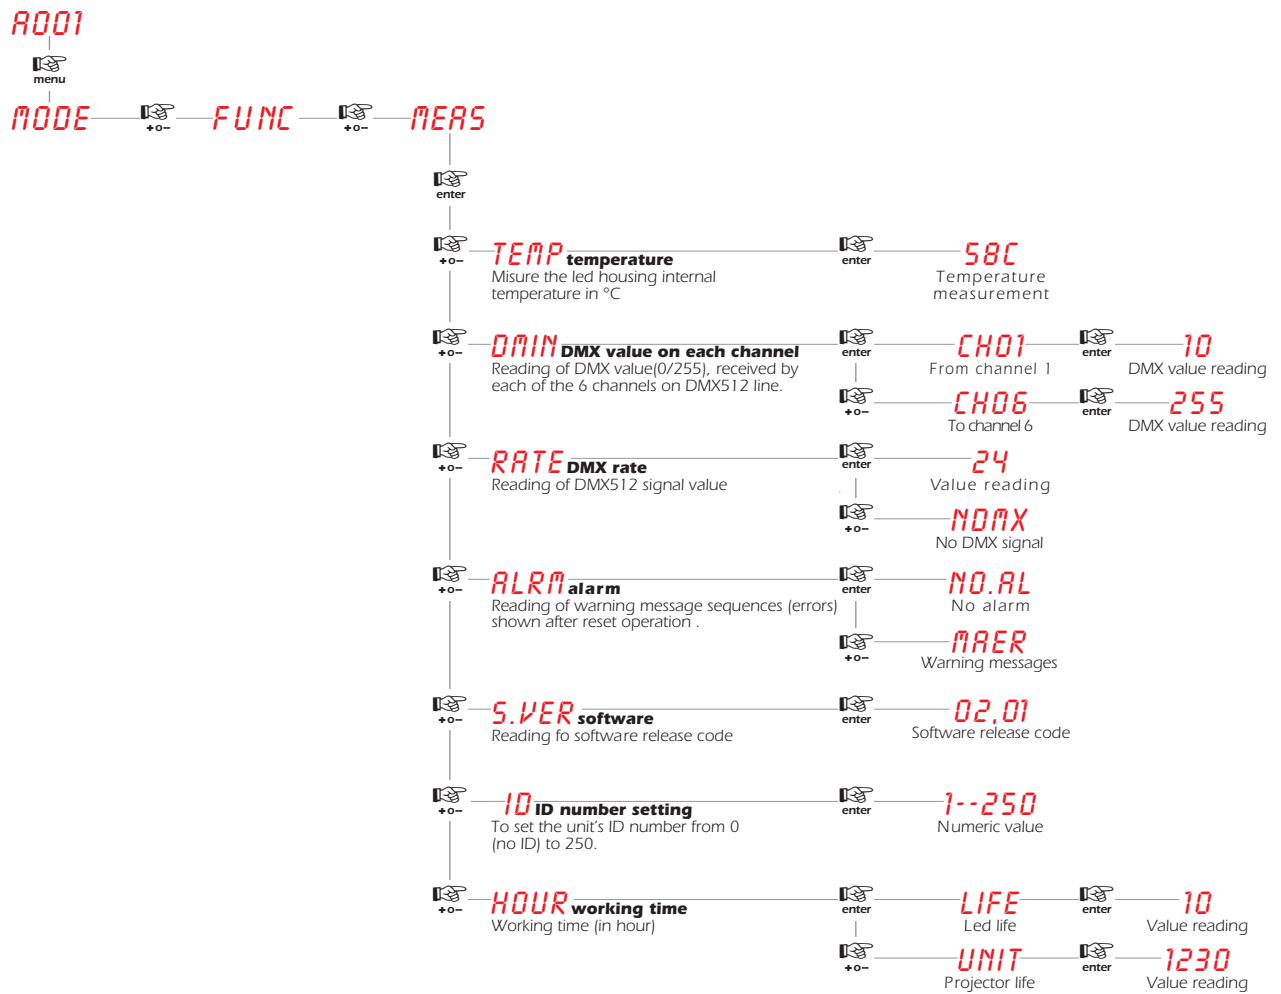

### 10.4. Electronic alignment and software upgrade

#### ATTENTION!!


This procedure should only be undertaken by qualified and experienced technical personnel..

The display panel of the **DR1+** allows for the electronic alignment of the colors. This procedure is performed by **Coemar** at the factory. It may be useful to perform this procedure in the case of internal components being replaced (electronic parts). Altering the factory settings may radically alter the functioning of the projector. Carefully read all of the following prior to attempting any changes.

#### ATTENTION!!

The alignment procedure can only be carried out when DMX 512 signal is connected.

1. Press the **menu** button and then **enter** to confirm.
2. Press the **+** or **-** button until **FUNC** is displayed. Then press **enter**.
3. Press the **+** or **-** button until **RESE** is displayed.
4. Press the **enter** and **menu** buttons simultaneously, holding them for at least **10"**. The motors will perform a reset and the display will show **---** for a few seconds. After this, the display will show **ALIG** confirming that you have entered electronic calibration mode.

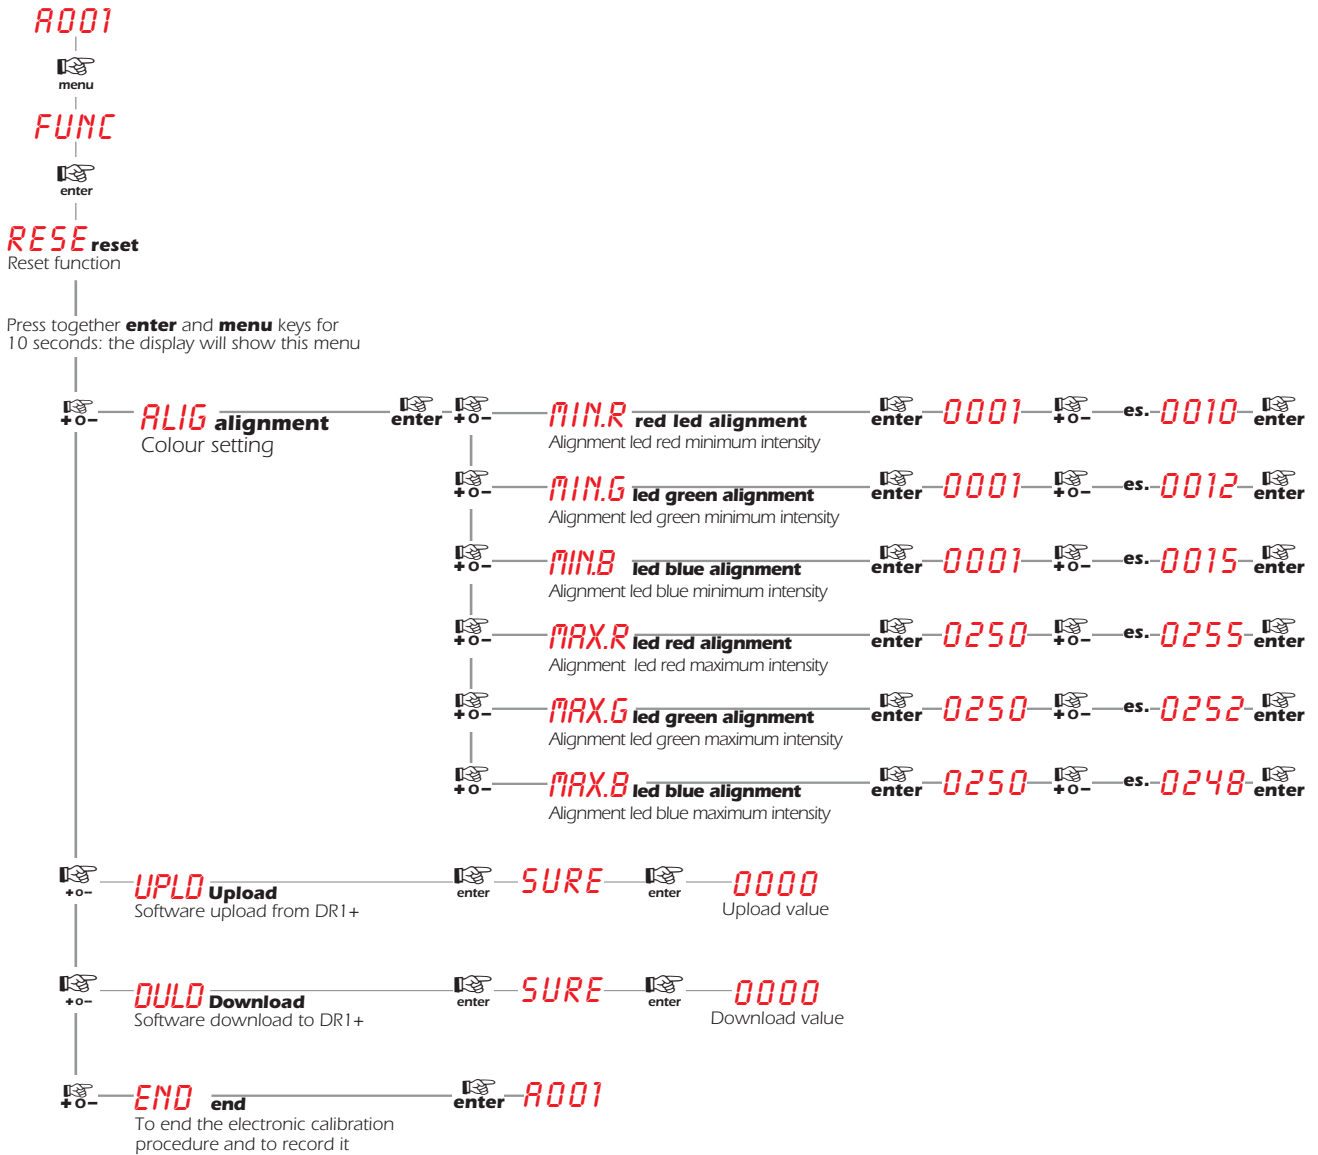

**UPLOAD function**

Using this function it is possible to upload software to the **Pin Lite LED** using a **DR1+**. For further information, consult the DR1 manual.

**DOWNLOAD function**

Using this function it is possible to download software from the **Pin Lite LED** to a **DR1+**. For further information, consult the DR1 manual.

**10.5. Error messages using DR1**

MESSAGE CODE	DESCRIPTION
<b>DTER</b>	DATA Error The initial configuration settings are faulty or have been loaded incorrectly. The projector has loaded its default configuration. Turn the projector off and on again and if the error persists the EEPROM is either defective or absent; refer to your <b>Coemar</b> service centre for a replacement component.
<b>ADER</b>	DMX ADDRESS Error The projector is not receiving all the DMX channels necessary for its operation. Check the DMX address and the control console operation. Note that some controllers may not generate all 512 channels of signal.
<b>MAER</b>	MASTER MODE Error This message indicates that the user has attempted to set the unit to MASTER mode whilst DMX signal is still being received. Detach any DMX control signal or remove MASTER mode settings.

## 11. Switch panel signal

The two leds on the dip-switch panel indicate the functionality of the **Pin Lite LED**.

Led	Function	Led on	Led off	Led flashing
<b>Green</b>	Power	Present	Absent	Undefined
<b>Yellow</b>	DMX state	DMX poorly connected	No DMX signal	DMX OK

## 12. Thermal protection

A thermal sensor in the body of the **Pin Lite LED** protects the fixture against overheating. The sensor operates by removing power to the leds should the operating temperature exceed the factory preset.

## 13. Maintenance

Whilst every possible precaution has been taken to ensure the trouble-free operation of your **Pin Lite LED**, the following periodic maintenance is highly recommended. We recommend that the voltage to the unit be removed prior to any maintenance procedure taking place.

### ATTENTION!!

**Always remove mains power prior to opening up the fixture!**

#### Mechanicals

Check that the units is not mechanically damaged. Regularly clean the glass by using a soft cloth with a specific cleaning liquid and, if necessary, replace the damaged parts.

#### Electrical components

Check all electrical components for correct earthing, oxidation and proper attachment of all connectors, cleaning and refastening if necessary.

## 14. Spare parts

All the components of the **Pin Lite LED** are available as spare parts from your **Coemar service centre**.

Accurate description of the fixture, model number, and type will assist us in providing for your requirements in an efficient and effective manner.

## 15. Accessory

In the table below are listed all the accessory of the **Pin Lite LED** and the related **Coemar** code.

Descrizione	Codice
<b>1.</b> 12° lens assembly	<b>CO9186/1</b>
<b>2.</b> 30° lens assembly	<b>CO9186</b>
<b>3.</b> Flood	<b>CO9187</b>
<b>4.</b> Inside gel	<b>CO9188</b>
<b>5.</b> Gel	<b>CO9188/1</b>
<b>6.</b> Rear panel IP20 silver	<b>PAN09</b>
<b>7.</b> Rear panel IP20 black	<b>PAN09/1</b>
<b>8.</b> Rear panel IP65 silver	<b>PAN10</b>
<b>9.</b> Rear panel IP65 black	<b>PAN10/1</b>
<b>10.</b> XLR3 connector	<b>CO9189/1</b>
<b>11.</b> XLR5 connector	<b>CO9189</b>

## 16. Frequently asked questions

The diagram below indicates some possible problems and solutions if they should occur:

Problem	Possible solution
Pin Lite LED won't turn on.	Mains power is not available to the <b>Pin Lite LED</b> : <ul style="list-style-type: none"> <li>▪ Check that the green Led is on, if so check the incoming voltage to the <b>Pin Lite LED</b>.</li> </ul>
Pin Lite LED doesn't respond to DMX signal	Incoming DMX may not be being received by the <b>Pin Lite LED</b> : <ul style="list-style-type: none"> <li>▪ check that the led indicating DMX input is flashing. If not, check the DMX console's output and any cabling for continuity.</li> <li>▪ Check the dip-switch panel to ensure that no functions are selected which inhibit <b>DMX control</b>.</li> <li>▪ <b>Pin Lite LED</b> may be incorrectly addressed. Check the DMX addressing.</li> </ul>
The <b>Pin Lite LED</b> is set to auto but is not running any programs	In addition to setting the AUTO dip-switch to on, it is necessary to also select a <b>program number</b> (see section <b>9. AUTO function</b> ). <ul style="list-style-type: none"> <li>▪ Multiple programs have been selected - only one program at a time may be selected.</li> <li>▪ Check that amongst the interconnected fixtures, only one has been set to Master.</li> <li>▪ Ensure that there is no incoming <b>DMX</b> signal (this may cause a conflict in signals).</li> </ul>



**Coemar s.p.a.**

via Inghilterra 2/A - 46042 Castel Goffredo (Mantova) Italy  
ph. +39 0376/77521 - fax +39 0376/780657  
info@coemar.com

**Coemar** si riserva il diritto di apportare modifiche senza preavviso.  
**Coemar** reserves the right to effect modifications without notification